R&S®FSW I/Q Analyzer and I/Q Input Interfaces

User Manual

1175.6449.02 ─ 10

Test & Measurement

User Manual

ROHDE&SCHWARZ

This manual applies to the following R&S®FSW models with firmware version 1.70 and higher:

- R&S®FSW8 (1312.8000K08)
- R&S®FSW13 (1312.8000K13)
- R&S®FSW26 (1312.8000K26)
- R&S®FSW43 (1312.8000K43)
- R&S®FSW50 (1312.8000K50)

In addition to the base unit, the following options are described:

- R&S FSW-B10 (1313.1622.02)
- R&S FSW-B13 (1313.0761.02)
- R&S FSW-B17 (1313.0784.02)
- R&S FSW-B21 (1313.1100.26)
- R&S FSW-B24 (1313.0832.13/26)
- R&S FSW-B25 (1313.0990.02)
- R&S FSW-B28 (1313.1645.02)
- R&S FSW-B40 (1313.0861.02) / R&S FSW-U40 (1313.52505.02)
- R&S FSW-B80 (1313.0878.02) / R&S FSW-U80 (1313.5211.02)
- R&S FSW-B160 (1313.1668.02) / R&S FSW-U160 (1313.3754.02)
- R&S FSW-B320 (1313.7172.02) / R&S FSW-U132 (1313.7189.02)
- R&S FSW-B71 (1313.1651.13/26, 1313.6547.02,)

The firmware of the instrument makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgement" on the user documentation CD-ROM (included in delivery).
Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2013 Rohde & Schwarz GmbH & Co. KG
Mühldorfstr. 15, 81671 München, Germany
Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
E-mail: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Subject to change – Data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®FSW is abbreviated as R&S FSW. R&S®FSW Multi-Standard Radio Analyzer is abbreviated as R&S FSW I/Q Analyzer.

Contents

1 Preface....5
1.1 About this Manual....5
1.2 Documentation Overview....6
1.3 Conventions Used in the Documentation....7
2 Welcome to the I/Q Analyzer Application....9
2.1 Starting the I/Q Analyzer Application....9
2.2 Understanding the Display Information....10
3 Typical Applications for the I/Q Analyzer and I/Q Input....13
4 Measurement and Result Displays....16
5 Basics on I/Q Data Acquisition....21
5.1 Processing Analog I/Q Data from RF Input....21
5.2 Processing Data from the Digital Baseband Interface (R&S FSW-B17)....26
5.3 Processing Data From the Analog Baseband Interface....32
5.4 Receiving Data Input and Providing Data Output....38
5.5 I/Q Data Import and Export....54
5.6 I/Q Analyzer in MSRA Operating Mode....54
5.7 Measurements in the Time and Frequency Domain....55
6 Configuration....57
6.1 Default Settings for I/Q Analyzer measurements....57
6.2 Configuration Overview....58
6.3 Import/Export Functions....60
6.4 Data Input and Output Settings....61
6.5 Amplitude....93
6.6 Frequency Settings....101
6.7 Trigger Settings....103
6.8 Data Acquisition and Bandwidth Settings....110
6.9 Display Configuration....116
6.10 Adjusting Settings Automatically....116
6.11 Configuring an I/Q Analyzer as an MSRA Application....119

7 Analysis....121
7.1 Trace Settings....121
7.2 Marker Usage....124
7.3 Zoom Functions....135
8 How to Work with I/Q Data....137
8.1 How to Perform Measurements in the I/Q Analyzer Application....137
8.2 How to Capture or Output I/Q Data via Optional Interfaces (R&S FSW-B17/-B71)....139
8.3 How to Export and Import I/Q Data....143
9 Optimizing and Troubleshooting the Measurement....146
10 Remote Commands to Perform Measurements with I/Q Data....147
10.1 Introduction....147
10.2 Common Suffixes....152
10.3 Activating I/Q Analyzer Measurements....152
10.4 Configuring I/Q Analyzer Measurements....158
10.5 Configuring the Result Display....235
10.6 Capturing Data and Performing Sweeps....242
10.7 I/Q Analysis....248
10.8 Retrieving Results....272
10.9 Importing and Exporting I/Q Data and Results....279
10.10 Querying the Status Registers....281
10.11 Programming Examples....287
A Annex: Reference....295
A.1 Description of the LVDS Connector....295
A.2 Formats for Returned Values: ASCII Format and Binary Format....296
A.3 Reference: Format Description for I/Q Data Files....297
A.4 I/Q Data File Format (iq-tar)....299
List of Remote Commands (I/Q Analyzer+I/Q Input Interfaces (B17+B71))....305
Index....312

1 Preface

1.1 About this Manual

This R&S FSW I/Q Analyzer User Manual provides all the information **specific to the application and processing digital I/Q data**. All general instrument functions and settings common to all applications are described in the main R&S FSW User Manual.

The main focus in this manual is on the measurement results and the tasks required to obtain them. The following topics are included:

- **Welcome to the I/Q Analyzer application**
  Introduction to and getting familiar with the application
- **Typical Applications for the I/Q Analyzer and optional input interfaces**
  Example measurement scenarios for I/Q data import and analysis
- **Measurements and Result Displays**
  Details on supported measurements and their result types
- **Basics on I/Q Data Acquisition**
  Background information on basic terms and principles in the context of the I/Q Analyzer application as well as processing digital I/Q data in general
- **Configuration and Analysis**
  A concise description of all functions and settings available to import, capture and analyze I/Q data in the I/Q Analyzer, with or without optional interfaces, with their corresponding remote control command
- **How to Work with I/Q Data**
  The basic procedure to perform an I/Q Analyzer measurement or capture data via the R&S Digital Baseband Interface with step-by-step instructions
- **Optimizing and Troubleshooting the Measurement**
  Hints and tips on how to handle errors and optimize the test setup
- **Remote Commands to perform Measurements with I/Q Data**
  Remote commands required to configure and perform I/Q Analyzer measurements or process digital I/Q data in a remote environment, sorted by tasks;
  (Commands required to set up the environment or to perform common tasks on the instrument are provided in the main R&S FSW User Manual.)
  Programming examples demonstrate the use of many commands and can usually be executed directly for test purposes.
- **Annex**
  Reference material, e.g. I/Q file formats and a detailed description of the LVDS connector
- **List of remote commands**
  Alpahabetical list of all remote commands described in the manual
- **Index**

1.2 Documentation Overview

The user documentation for the R&S FSW consists of the following parts:

- "Getting Started" printed manual
- Online Help system on the instrument
- Documentation CD-ROM with:
  - Getting Started
  - User Manuals for base unit and options
  - Service Manual
  - Release Notes
  - Data sheet and product brochures

Online Help

The Online Help is embedded in the instrument's firmware. It offers quick, context-sensitive access to the complete information needed for operation and programming. Online help is available using the icon on the toolbar of the R&S FSW.

Getting Started

This manual is delivered with the instrument in printed form and in PDF format on the CD. It provides the information needed to set up and start working with the instrument. Basic operations and handling are described. Safety information is also included.

The Getting Started manual in various languages is also available for download from the R&S website, on the R&S FSW product page at http://www2.rohde-schwarz.com/product/FSW.html.

User Manuals

User manuals are provided for the base unit and each additional (software) option.

The user manuals are available in PDF format - in printable form - on the Documentation CD-ROM delivered with the instrument. In the user manuals, all instrument functions are described in detail. Furthermore, they provide a complete description of the remote control commands with programming examples.

The user manual for the base unit provides basic information on operating the R&S FSW in general, and the Spectrum application in particular. Furthermore, the software functions that enhance the basic functionality for various applications are described here. An introduction to remote control is provided, as well as information on maintenance, instrument interfaces and troubleshooting.

In the individual application manuals, the specific instrument functions of the application are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S FSW is not included in the application manuals.

All user manuals are also available for download from the R&S website, on the R&S FSW product page at http://www2.rohde-schwarz.com/product/FSW.html.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S FSW by replacing modules.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes.

The most recent release notes are also available for download from the R&S website, on the R&S FSW product page at http://www2.rohde-schwarz.com/product/FSW.html > Downloads > Firmware.

1.3 Conventions Used in the Documentation

1.3.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
`File names, commands, program code`	File names, commands, coding samples and screen output are distinguished by their font.
Input	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.3.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

2 Welcome to the I/Q Analyzer Application

The R&S FSW I/Q Analyzer is a firmware application that adds functionality to perform I/Q data acquisition and analysis to the R&S FSW.

The R&S FSW-I/Q Analyzer features:

- Acquisition of analog I/Q data
- Optionally, acquisition of digital I/Q data via the Digital Baseband Interface option (R&S FSW-B17)
- Optionally, acquisition of analog baseband data via the Analog Baseband Interface option (R&S FSW-B71)
- Import of stored I/Q data from other applications
- Spectrum, magnitude, I/Q vector and separate I and Q component analysis of any I/Q data on the instrument
- Export of I/Q data to other applications
- Optionally, direct output of digital I/Q data via the Digital Baseband Interface option (R&S FSW-B17)

This user manual contains a description of the functionality that the application provides, including remote control operation.

All functions not discussed in this manual are the same as in the base unit and are described in the R&S FSW User Manual.

The latest version is available for download at the product homepage.

Installation

The R&S FSW I/Q Analyzer application is part of the standard base unit and requires no further installation.

The Digital Baseband Interface option (R&S FSW-B17) requires both hardware and firmware installation, which is described in the release notes provided with the option at delivery.

2.1 Starting the I/Q Analyzer Application

The I/Q Analyzer is an application on the standard R&S FSW.

To activate the I/Q Analyzer application

1. Press the MODE key on the front panel of the R&S FSW.

   A dialog box opens that contains all applications currently available on your R&S FSW.

2. Select the "I/Q Analyzer" item.



The R&S FSW opens a new measurement channel for the I/Q Analyzer application.

The measurement is started immediately with the default settings. It can be configured in the I/Q Analyzer "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu (see chapter 6.2, "Configuration Overview", on page 58).

Multiple Measurement Channels and Sequencer Function

When you activate an application, a new measurement channel is created which determines the measurement settings for that application. The same application can be activated with different measurement settings by creating several channels for the same application.

The number of channels that can be configured at the same time depends on the available memory on the instrument.

Only one measurement can be performed at any time, namely the one in the currently active channel. However, in order to perform the configured measurements consecutively, a Sequencer function is provided.

If activated, the measurements configured in the currently active channels are performed one after the other in the order of the tabs. The currently active measurement is indicated by a symbol in the tab label. The result displays of the individual channels are updated in the tabs (including the "MultiView") as the measurements are performed. Sequential operation itself is independant of the currently *displayed* tab.

For details on the Sequencer function see the R&S FSW User Manual.

2.2 Understanding the Display Information

The following figure shows a measurement diagram during I/Q Analyzer operation. All different information areas are labeled. They are explained in more detail in the following sections.

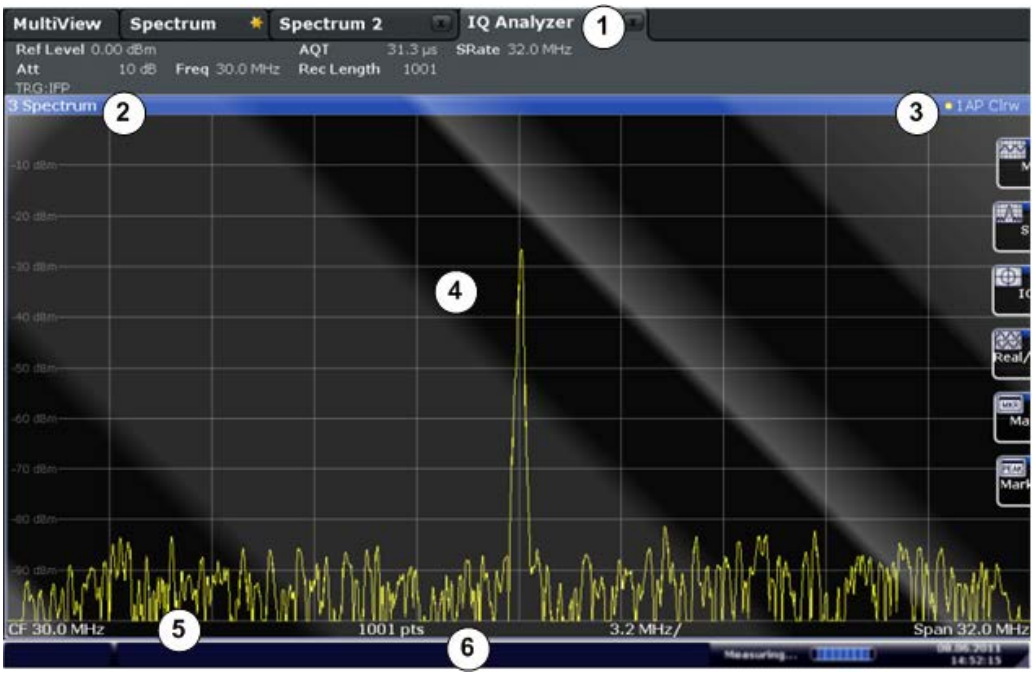

Fig. 2-1: Screen elements in the I/Q Analyzer application

1 = Channel bar for firmware and measurement settings
2+3 = Window title bar with diagram-specific (trace) information
4 = Diagram area with marker information
5 = Diagram footer with diagram-specific information, depending on result display
6 = Instrument status bar with error messages, progress bar and date/time display

MSRA operating mode

In MSRA operating mode, additional tabs and elements are available. A colored background of the screen behind the measurement channel tabs indicates that you are in MSRA operating mode. See the R&S FSW MSRA User Manual for details.

Channel bar information

In the I/Q Analyzer application, the R&S FSW shows the following settings:

Table 2-1: Information displayed in the channel bar for the I/Q Analyzer application

Ref Level	Reference level
(m.+el.)**Att**	(Mechanical and electronic) RF attenuation
Ref Offset	Reference level offset
Freq	Center frequency
Meas Time	Measurement time
Rec Length	Defined record length (number of samples to capture)
SRate	Defined sample rate for data acquisition
RBW	(Spectrum evaluation only) Resolution bandwidth calculated from the sample rate and record length

Inp:Dig-IQ	Input source: digital I/Q data from the optional Digital Baseband Interface (R&S FSW-B17)
Inp:Analog <I/Q mode>	Input source: analog baseband data from the optional Analog Baseband Interface (R&S FSW-B71) <I/Q mode>: defines the processing mode (see chapter 5.3.3, "I/Q Processing Modes", on page 35)

In addition, the channel bar also displays information on instrument settings that affect the measurement results even though this is not immediately apparent from the display of the measured values (e.g. transducer or trigger settings). This information is displayed only when applicable for the current measurement. For details see the R&S FSW Getting Started manual.

Window title bar information

For each diagram, the header provides the following information:

Fig. 2-2: Window title bar information in the I/Q Analyzer application

1 = Window number
2 = Window type
3 = Trace color
4 = Trace number
5 = Detector
6 = Trace mode

Diagram footer information

The information in the diagram footer (beneath the diagram) depends on the evaluation:

- Center frequency
- Number of sweep points
- Range per division (x-axis)
- Span (Spectrum)

Status bar information

Global instrument settings, the instrument status and any irregularities are indicated in the status bar beneath the diagram. Furthermore, the progress of the current operation is displayed in the status bar.

For details see "Error Messages" on page 146.

3 Typical Applications for the I/Q Analyzer and I/Q Input

Baseband signals mostly occur as so-called complex baseband signals, i.e. a signal representation that consists of two channels; the "in phase" (I) and the "quadrature" (Q) channel. Such signals are referred to as I/Q signals. I/Q signals are useful because the specific RF or IF frequencies are not needed. The complete modulation information and even distortion that originates from the RF, IF or baseband domains can be analyzed in the I/Q baseband. Thus, the I/Q Analyzer is ideal for analyzing I/Q baseband signals.

The optional Digital Baseband Interface (R&S FSW-B17) can be used to capture or output the I/Q data.

The following typical applications use the R&S Digital Baseband Interface:

- Capturing and evaluating digital I/Q data in the I/Q Analyzer application of the R&S FSW base unit or other (optional) applications, e.g. R&S FSW-K70 (VSA). See also the description of the individual applications.

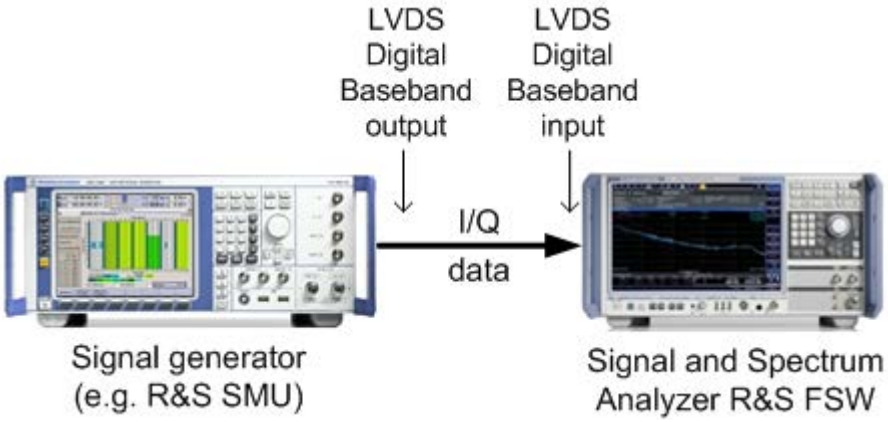
LVDS Digital Baseband output
LVDS Digital Baseband input
I/Q data
Signal generator (e.g. R&S SMU)
Signal and Spectrum Analyzer R&S FSW

- Output of digital I/Q data to a selected receiver, e.g. to implement fading (simulating mobile radio communication participants) using a generator.

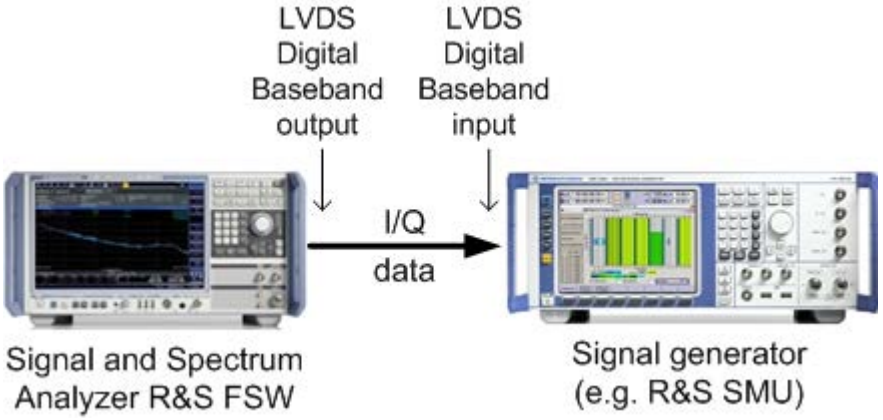
LVDS Digital Baseband output
LVDS Digital Baseband input
I/Q data
Signal and Spectrum Analyzer R&S FSW
Signal generator (e.g. R&S SMU)

- Capturing and evaluating digital I/Q data from a device with a user-specific interface using an R&S EX-IQ-BOX (see the "R&S®EX-IQ-BOX - External Signal Interface Module Manual").

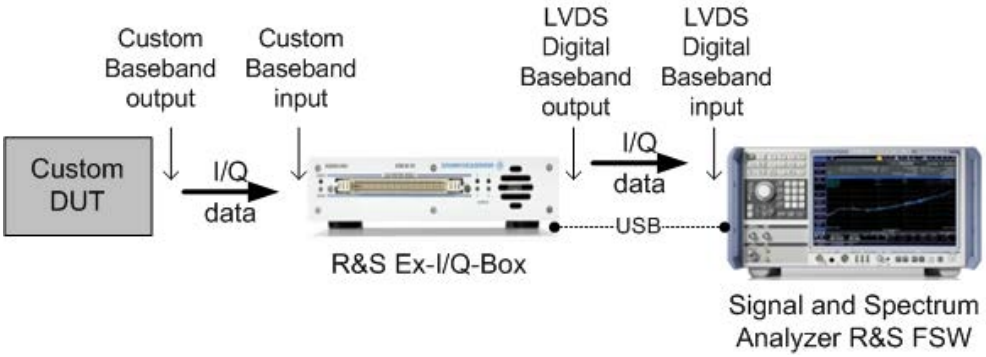

- Output of digital I/Q data to a device with a user-specific interface using an R&S EX-IQ-BOX (see the "R&S®EX-IQ-BOX - External Signal Interface Module Manual").

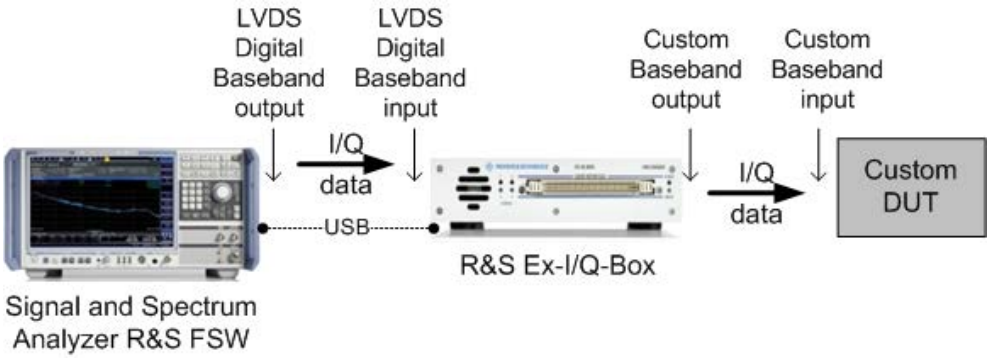

R&S EX-IQ-BOX and R&S DigIConf

The R&S EX-IQ-BOX is a configurable interface module that converts signal properties and the transmission protocol of the R&S instruments into user-defined or standardized signal formats and vice versa.

The latest R&S EX-IQ-BOX (model 1409.5505K04) provides the configuration software R&S DigIConf which can be installed directly on the R&S FSW. The software R&S DigIConf (Digital Interface Configurator for the R&S EX-IQ-BOX, version 2.10 or higher) controls the protocol, data and clock settings of the R&S EX-IQ-BOX independently from the connected R&S instrument. Besides basic functions of the user-defined protocols, this software utility supports the settings for standardized protocols, as e.g. CPRI, OBSAI or DigRF. **Note that R&S DigIConf requires a USB connection (not LAN!) to the R&S FSW in addition to the R&S Digital Baseband Interface connection.**

Remote control is possible and very simple. Remote commands for the R&S DigIConf software always begin with `SOURce:EBOX`. Such commands are passed on from the R&S FSW to the R&S EX-IQ-BOX automatically via the USB connection.

A setup file, included in delivery, consists of an installation wizard, the executable program and all necessary program and data files. The latest software versions can be downloaded free of charge from the R&S website: www.rohde-schwarz.com/en/products/test_and_measurement/signal_generation/EX-IQ-Box. Simply execute the Setup file and follow the instructions in the installation wizard.

(Note: When using the EX-IQ-BOX with *Digital I/Q Enhanced Mode* (see "Digital I/Q enhanced mode" on page 27), an R&S EX-IQ-BOX model 1409.5505K04 with a serial number higher than 10200 is required in order to transfer data with up to 200 Msps.)

For details on installation and operation of the R&S DigIConf software, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

4 Measurement and Result Displays

The I/Q Analyzer can capture I/Q data. The I/Q data that was captured by or imported to the R&S FSW can then be evaluated in various different result displays. Select the result displays using the SmartGrid functions.

As of firmware version 1.60, up to 6 evaluations can be displayed in the I/Q Analyzer at any time, including several graphical diagrams, marker tables or peak lists.

For details on working with the SmartGrid see the R&S FSW Getting Started manual.

Measurements in the time and frequency domain

As of firmware version 1.60, the I/Q Analyzer application (*not Master*) **in MSRA mode** can also perform measurements on the captured I/Q data in the time and frequency domain (see also chapter 5.6, "I/Q Analyzer in MSRA Operating Mode", on page 54). They are configured using the same settings and provide the similar results. In addition, the analysis interval used for the measurement is indicated as in all MSRA applications.

The time and frequency domain measurements and the available results are described in detail in the R&S FSW User Manual.

Result displays for I/Q data:

Magnitude....16
Spectrum....17
I/Q-Vector....18
Real/Imag (I/Q)....18
Marker Table....19
Marker Peak List....19

Magnitude
Shows the level values in time domain.

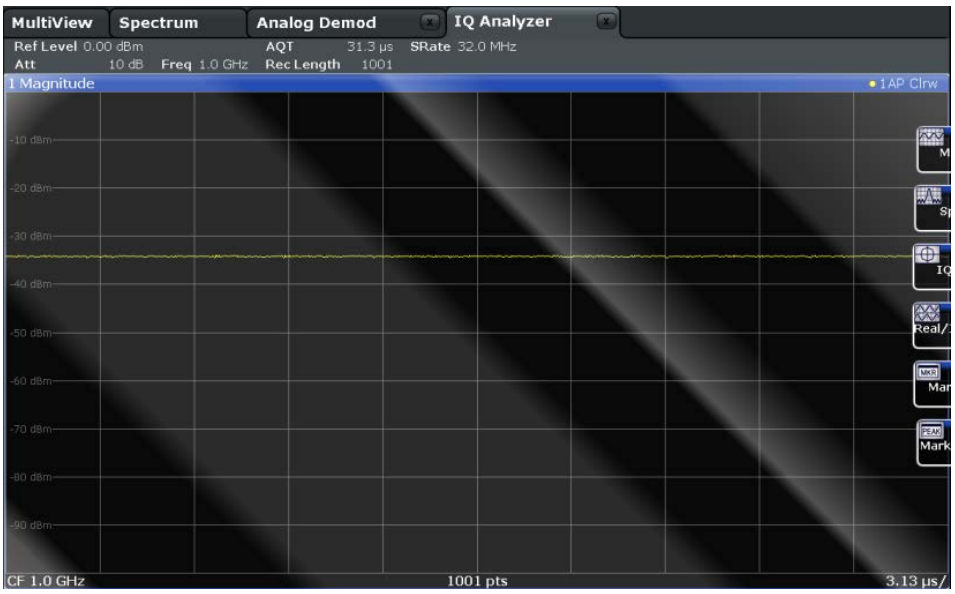

Remote command:
`LAY:ADD:WIND? '1',RIGH,MAGN`, see `LAYout:ADD[:WINDow]?` on page 236
Results:
`TRACe<n>[:DATA]?` on page 276

Spectrum
Displays the frequency spectrum of the captured I/Q samples.

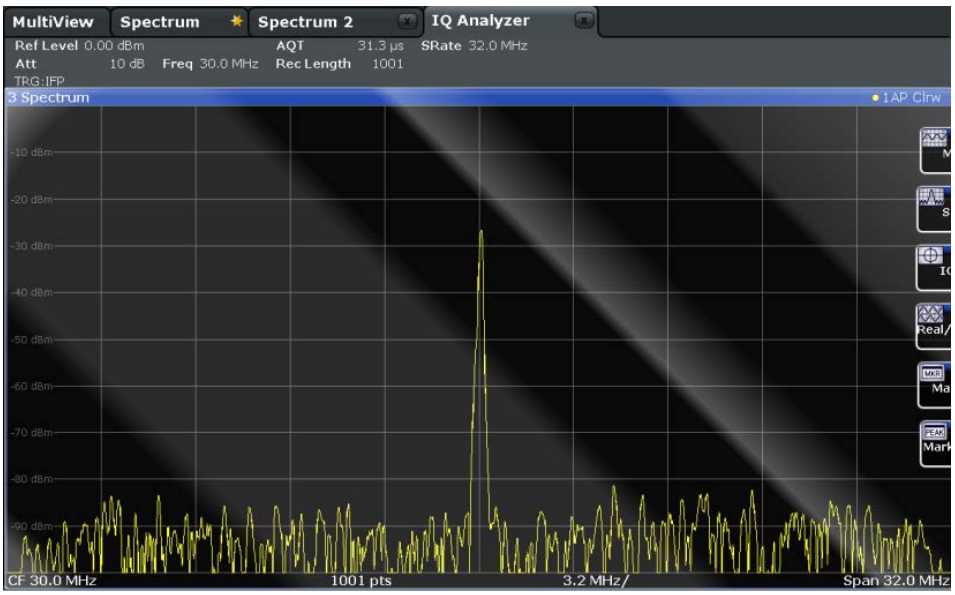

Remote command:
`LAY:ADD:WIND? '1',RIGH,FREQ`, see `LAYout:ADD[:WINDow]?` on page 236
Results:
`TRACe<n>[:DATA]?` on page 276

I/Q-Vector
Displays the captured samples in an I/Q-plot. The samples are connected by a line.

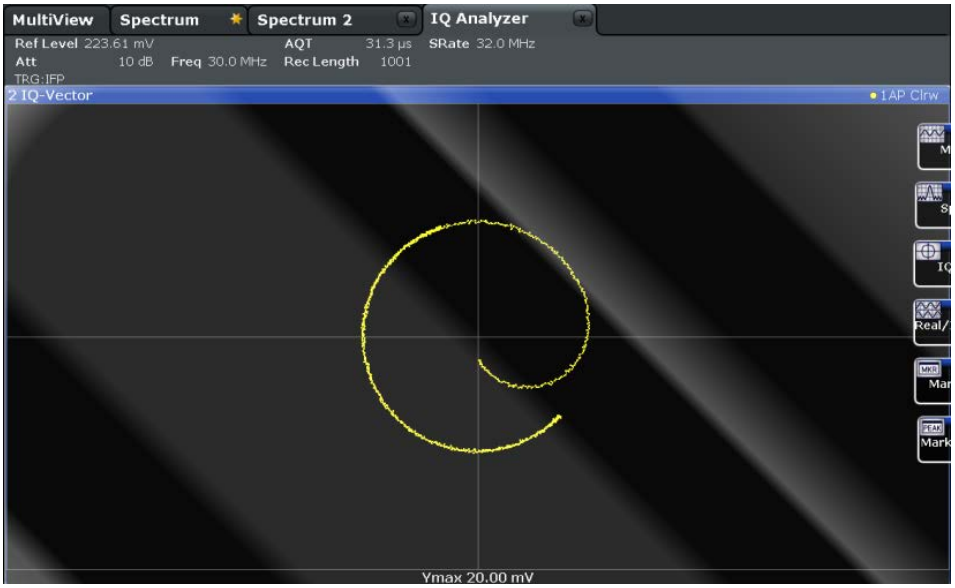

Note: For the I/Q vector result display, the number of I/Q samples to record ("Record Length") must be identical to the number of trace points to be displayed ("Sweep Points"; for I/Q Analyzer: 1001). For record lengths outside the valid range of sweep points the diagram does not show valid results.

For input from the Analog Baseband Interface (R&S FSW-B71) in real baseband mode, the I/Q vector is a constant line (as one component is 0 for all sweep points).

For more information see chapter 5.3.3, "I/Q Processing Modes", on page 35.

Remote command:
`LAY:ADD:WIND? '1',RIGH,VECT`, see `LAYout:ADD[:WINDow]?` on page 236
Results:
`TRACe<n>[:DATA]?` on page 276

Real/Imag (I/Q)
Displays the I and Q values in separate diagrams.

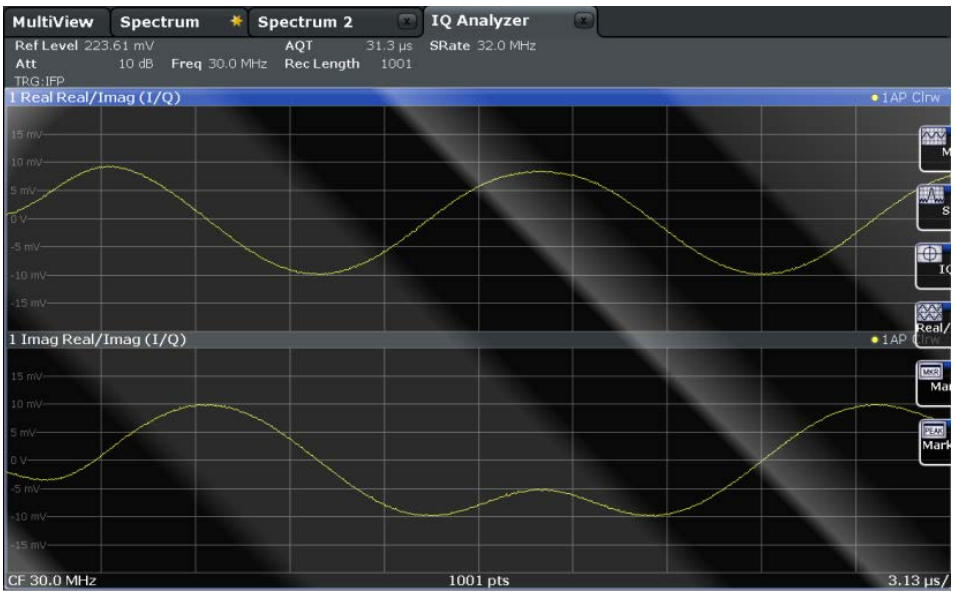

Note: For analog baseband input in Real Baseband mode, only one diagram is displayed (for the selected component).
For details see "Real baseband mode (I or Q only)" on page 36.

Remote command:
`LAY:ADD:WIND? '1',RIGH,RIM`, see `LAYout:ADD[:WINDow]?` on page 236
Results:
`TRACe<n>[:DATA]?` on page 276

Marker Table
Displays a table with the current marker values for the active markers.

This table may be displayed automatically if configured accordingly (see "Marker Table Display" on page 129).


2 Marker
Type Ref Trc Stimulus Response Function Function Result
N1 1 13.197 GHz -25.87 dBm Count 13.19705
D1 N1 1 -7.942 GHz -49.41 dB
D2 N1 2 -3.918 GHz -21.90 dB
D3 N1 3 4.024 GHz -21.99 dB

Remote command:
`LAY:ADD? '1',RIGH, MTAB`, see `LAYout:ADD[:WINDow]?` on page 236
Results:
`CALCulate<n>:MARKer<m>:X` on page 257
`CALCulate<n>:MARKer<m>:Y?` on page 279

Marker Peak List
The marker peak list determines the frequencies and levels of peaks in the spectrum or time domain. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.

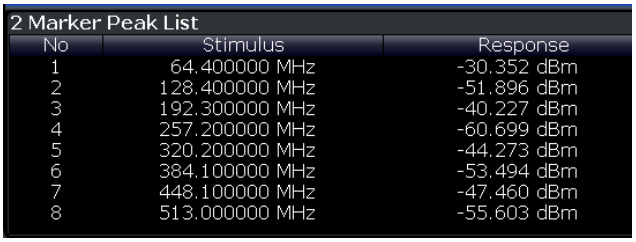

Remote command:

`LAY:ADD? '1',RIGH, PEAK`, see `LAYout:ADD[:WINDow]?` on page 236

Results:

`CALCulate<n>:MARKer<m>:X` on page 257

`CALCulate<n>:MARKer<m>:Y?` on page 279

5 Basics on I/Q Data Acquisition

Some background knowledge on basic terms and principles used when describing I/Q data acquisition on the R&S FSW in general, and in the I/Q Analyzer application in particular, is provided here for a better understanding of the required configuration settings.

The I/Q Analyzer provides various possibilities to acquire the I/Q data to be analyzed:

- Capturing analog I/Q data from the RF INPUT connector
- Capturing digital I/Q data from the optional Digital Baseband Interface (R&S FSW-B17)
- Capturing analog I/Q data from the optional Analog Baseband Interface (R&S FSW-B71), for example from active probes
- Capturing analog I/Q data from the optional Analog Baseband Interface (R&S FSW-B71) and redirecting it to the RF input path
- Importing analog or digital I/Q data from a file

Background information for all these scenarios and more is provided in the following sections.

- Processing Analog I/Q Data from RF Input....21
- Processing Data from the Digital Baseband Interface (R&S FSW-B17)....26
- Processing Data From the Analog Baseband Interface....32
- Receiving Data Input and Providing Data Output....38
- I/Q Data Import and Export....54
- I/Q Analyzer in MSRA Operating Mode....54
- Measurements in the Time and Frequency Domain....55

5.1 Processing Analog I/Q Data from RF Input

Complex baseband data

In the telephone systems of the past, baseband data was transmitted unchanged as an analog signal. In modern phone systems and in radio communication, however, the baseband data is modulated on a carrier frequency, which is then transmitted and must be demodulated by the receiver. When using modern modulation methods (e.g. QPSK, QAM etc.), the baseband signal becomes complex. Complex data (or: *I/Q* data) consists of an imaginary (I) and a real (Q) component.

Sweep vs sampling

While the standard Spectrum application on the R&S FSW performs frequency sweeps on the input signal and measurements in the frequency and time domain, other applications on the R&S FSW are capable of sampling and processing the individual I and Q components of the complex signal.

I/Q Analyzer - processing complex data from RF input

The I/Q Analyzer, for example, is a standard application used to capture and analyze I/Q data on the R&S FSW. By default, it assumes the I/Q data is modulated on a carrier frequency and input via the RF INPUT connector on the R&S FSW.

The A/D converter samples the IF signal at a rate of 200 MHz. The digital signal is down-converted to the complex baseband, lowpass-filtered, and the sample rate is reduced. An **equalizer filter** before the **resampler** compensates for the frequency response of the analyzer's analog filter stages which would otherwise add to the modulation errors. The continuously adjustable sample rates are realized using an optimal decimation filter and subsequent resampling on the set sample rate.

A special memory (**capture buffer**) is available in the instrument for a maximum of 400 Ms (400*1024*1024) of complex samples (pairs of I and Q data). The number of complex samples to be captured can be defined (for restrictions refer to chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22).

The block diagram in figure 5-1 shows the analyzer hardware from the IF section to the processor.

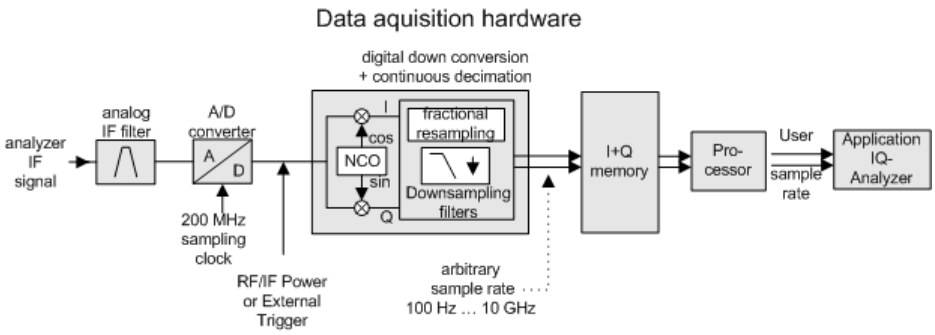

Fig. 5-1: Block diagram illustrating the R&S FSW signal processing for analog I/Q data

5.1.1 Sample Rate and Maximum Usable I/Q Bandwidth for RF Input

Definitions

- **Input sample rate (ISR)**: the sample rate of the useful data provided by the connected instrument to the R&S FSW input
- (User, Output) **Sample rate (SR)**: the sample rate that is defined by the user (e.g. in the "Data Aquisition" dialog box in the "I/Q Analyzer" application) and which is used as the basis for analysis or output
- **Usable I/Q (Analysis) bandwidth**: the bandwidth range in which the signal remains undistorted in regard to amplitude characteristic and group delay; this range can be used for accurate analysis by the R&S FSW

For the I/Q data acquisition, digital decimation filters are used internally. The passband of these digital filters determines the *maximum usable I/Q bandwidth*. In consequence, signals within the usable I/Q bandwidth (passband) remain unchanged, while signals outside the usable I/Q bandwidth (passband) are suppressed. Usually, the suppressed

signals are noise, artifacts, and the second IF side band. If frequencies of interest to you are also suppressed, you should try to increase the output sample rate, since this increases the maximum usable I/Q bandwidth.

Bandwidth extension options

The maximum usable I/Q bandwidth provided by the R&S FSW in the basic installation can be extended by additional options. These options can either be included in the initial installation (B-options) or updated later (U-options). The maximum bandwidth provided by the individual option is indicated by its number, for example, B80 extends the bandwidth to 80 MHz.

Note that the U-options as of U40 always require all lower-bandwidth options as a prerequisite, while the B-options already include them.

Max. usable I/Q BW	Required B-option	Required U-option(s)
10 MHz	-	-
28 MHz	B28	U28
40 MHz	B40	U28+U40 **or** B28+U40
80 MHz	B80	U28+U40+U80 **or** B28+U40+U80 **or** B40+U80
160 MHz	B160	U28+U40+U80+U160 **or** B28+U40+U80+U160 **or** B40+U80+U160 **or** B80+U160
320 MHz	B320	U28+U40+U80+U160+U320 **or** B28+U40+U80+U160+U320 **or** B40+U80+U160+U320 **or** B80+U160+U320 **or** B160+U320

As a rule, the usable I/Q bandwidth is proportional to the output sample rate. Yet, when the I/Q bandwidth reaches the bandwidth of the analog IF filter (at very high output sample rates), the curve breaks.

Relationship between sample rate and usable I/Q bandwidth

Up to the maximum bandwidth, the following rule applies:

*Usable I/Q bandwidth = 0.8 * Output sample rate*

MSRA operating mode

In MSRA operating mode, the MSRA Master is restricted to a sample rate of 200 MHz.

The figure 5-2 shows the maximum usable I/Q bandwidths depending on the output sample rates.

R&S FSW without additional bandwidth extension options

sample rate: 100 Hz - 10 GHz

maximum I/Q bandwidth: 10 MHz

Sample rate	Maximum I/Q bandwidth
100 Hz to 10 MHz	proportional up to maximum 10 MHz
10 MHz to 10 GHz	10 MHz

R&S FSW with options B28 or U28 (I/Q Bandwidth Extension):

sample rate: 100 Hz - 10 GHz

maximum bandwidth: 28 MHz

Sample rate	Maximum I/Q bandwidth
100 Hz to 35 MHz	proportional up to maximum 28 MHz
35 MHz to 10 GHz	28 MHz

R&S FSW with option B40 or U40 (I/Q Bandwidth Extension):

sample rate: 100 Hz - 10 GHz

maximum bandwidth: 40 MHz

Sample rate	Maximum I/Q bandwidth
100 Hz to 50 MHz	proportional up to maximum 40 MHz
50 MHz to 10 GHz	40 MHz

R&S FSW with option B80 or U80 (I/Q Bandwidth Extension):

sample rate: 100 Hz - 10 GHz

maximum bandwidth: 80 MHz

Sample rate	Maximum I/Q bandwidth
100 Hz to 100 MHz	proportional up to maximum 80 MHz
100 MHz to 10 GHz	80 MHz

R&S FSW with activated option B160 or U160 (I/Q Bandwidth Extension):

sample rate: 100 Hz - 10 GHz

maximum bandwidth: 160 MHz

Sample rate	Maximum I/Q bandwidth
100 Hz to 200 MHz	proportional up to maximum 160 MHz
200 MHz to 10 GHz	160 MHz

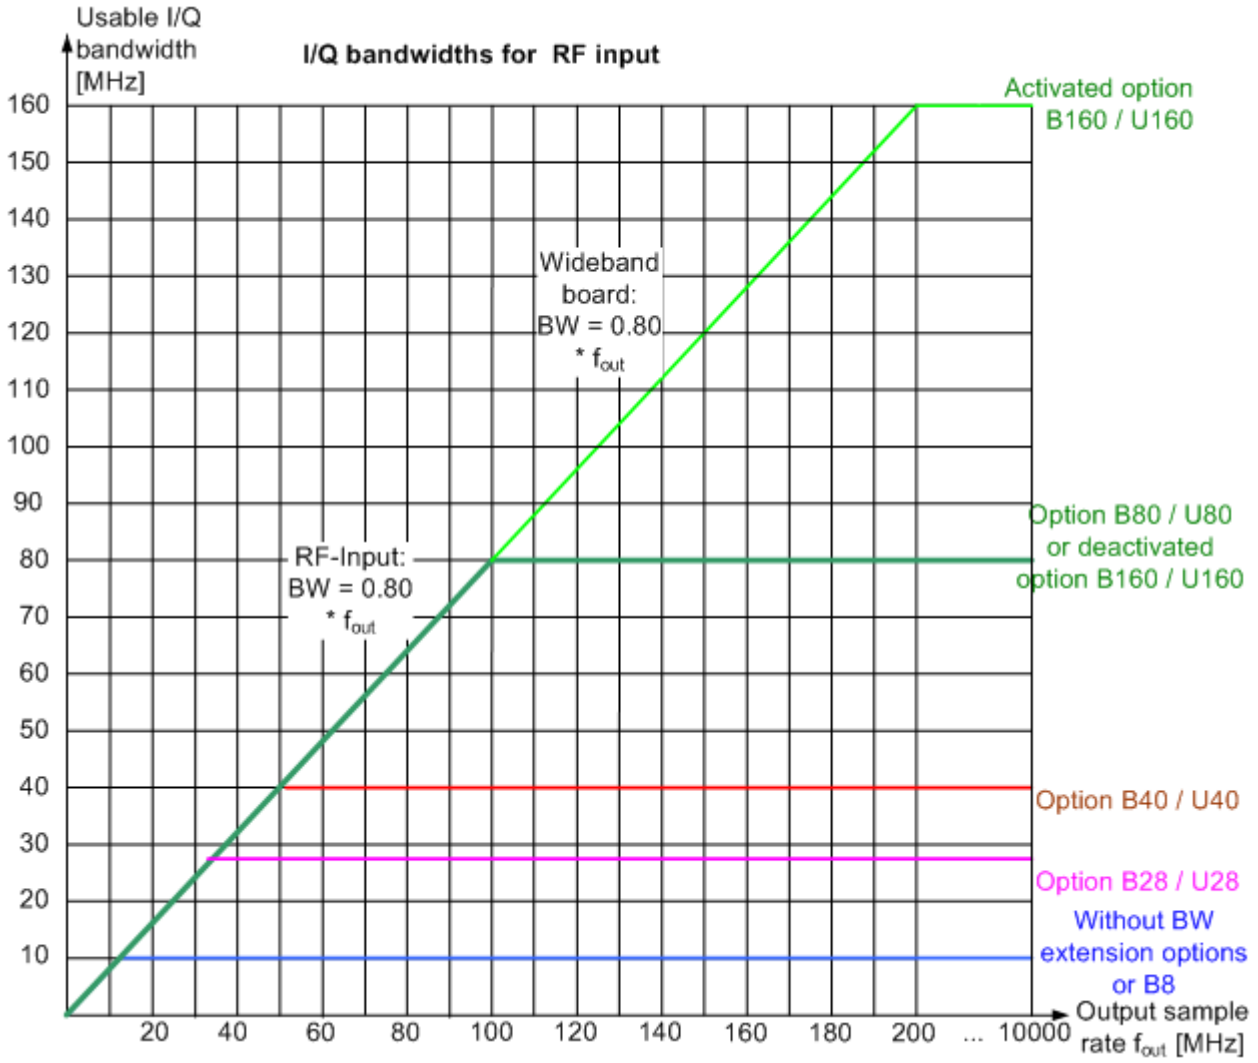

Fig. 5-2: Relationship between maximum usable I/Q bandwidth and output sample rate with and without bandwidth extensions

R&S FSW with activated option B320 or U320 (I/Q Bandwidth Extension):

sample rate: 100 Hz - 10 GHz

maximum bandwidth: 320 MHz

Sample rate	Maximum I/Q bandwidth
100 Hz to 400 MHz	proportional up to maximum 320 MHz
400 MHz to 10 GHz	320 MHz

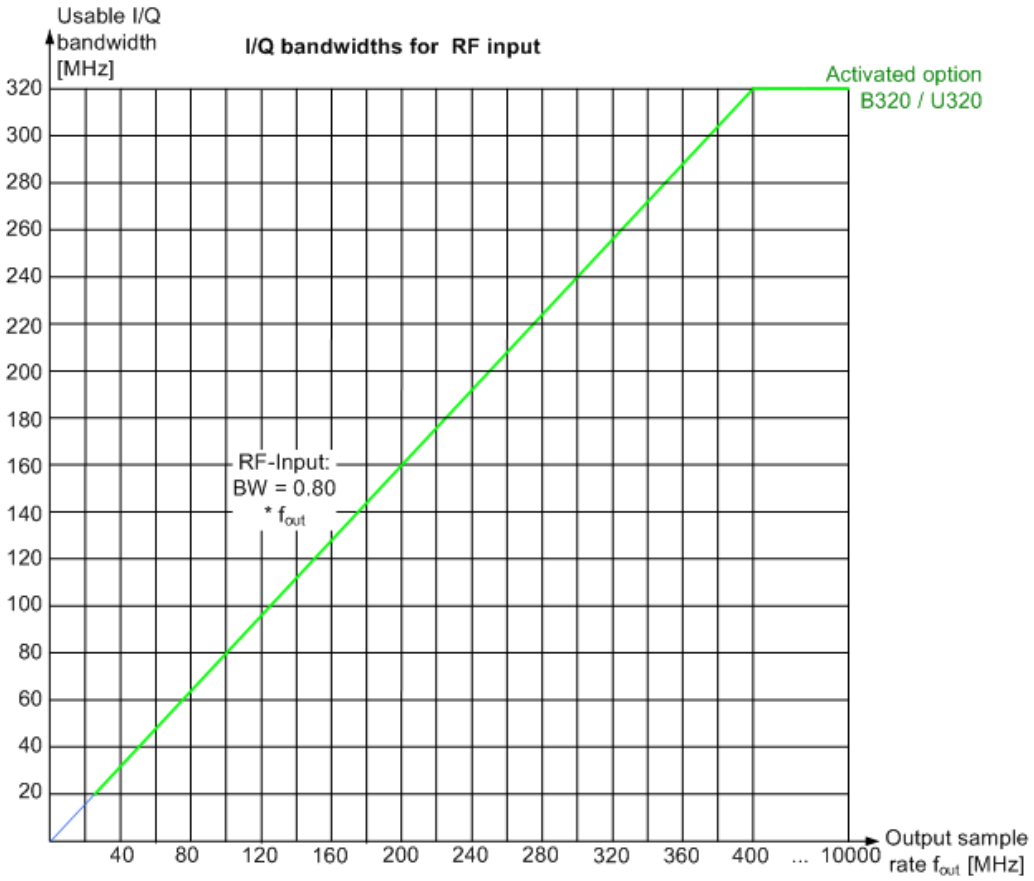

Fig. 5-3: Relationship between maximum usable I/Q bandwidth and output sample rate for active R&S FSW-B320

5.2 Processing Data from the Digital Baseband Interface (R&S FSW-B17)

Alternatively to capturing (analog) I/Q data from the standard RF Input connector on the front panel of the R&S FSW, digital I/Q data can be captured from the optional **Digital Baseband Interface (R&S FSW-B17)**, if installed.

Furthermore, the I/Q data processed by the I/Q Analyzer can also be output to this interface.

The digital input and output cannot be used simultaneously.

Digital I/Q enhanced mode

As of firmware version 1.70, an enhanced mode for processing data from the Digital Baseband Interface is available. This enhanced mode enables data transfer via the Digital I/Q interface with a data rate of up to 200 Msps (compared to the previous 100 Msps).

The Digital I/Q enhanced mode has the following prerequisites:

- **Digital Input:** The connected device must support data transfer rates up to 200 Msps.
- **Digital Output:**
  - The R&S FSW must supply the required bandwidth, i.e. the bandwidth extension option R&S FSW-B160 or higher must be installed and active.
  - The connected device must support data transfer rates up to 200 Msps.

- Digital Input....27
- Digital Output....28
- Sample Rates and Bandwidths for Digital I/Q Data....29
- Interface Status Information....31

5.2.1 Digital Input

Digital I/Q data can be used as an alternative data input source for measurements with the R&S FSW.

Connecting the digital input instrument

The instrument that provides digital input must be connected to the R&S Digital Baseband Interface at the rear of the R&S FSW. Information on the detected input instrument is shown in the Digital I/Q Input Source configuration dialog. You can configure the basic connection settings, e.g. the input sample rate.

It is recommended that you use the R&S®SMU-Z6 (1415.0201.02) cable to connect other devices to the Digital Baseband Interface of the R&S FSW.

Processing digital input

The digital I/Q data stream is fed into the analyzer via the connector of the digital baseband interface (R&S FSW-B17 option). There is no need to equalize any IF filter or mix the signal into the complex baseband. The digital hardware just has to ensure that the final I/Q data stored in the record buffer has the correct sample rate.

The digital input signal is brought to the desired sample rate using a downsampling filter and fractional resampling. The word length of the data is 18 bits fixed point for each I and Q. The resulting data can be processed by the selected application (see chapter 3, "Typical Applications for the I/Q Analyzer and I/Q Input", on page 13). As illustrated in figure 5-4, the usable sample rate for analysis is dependant on the input sample rate.

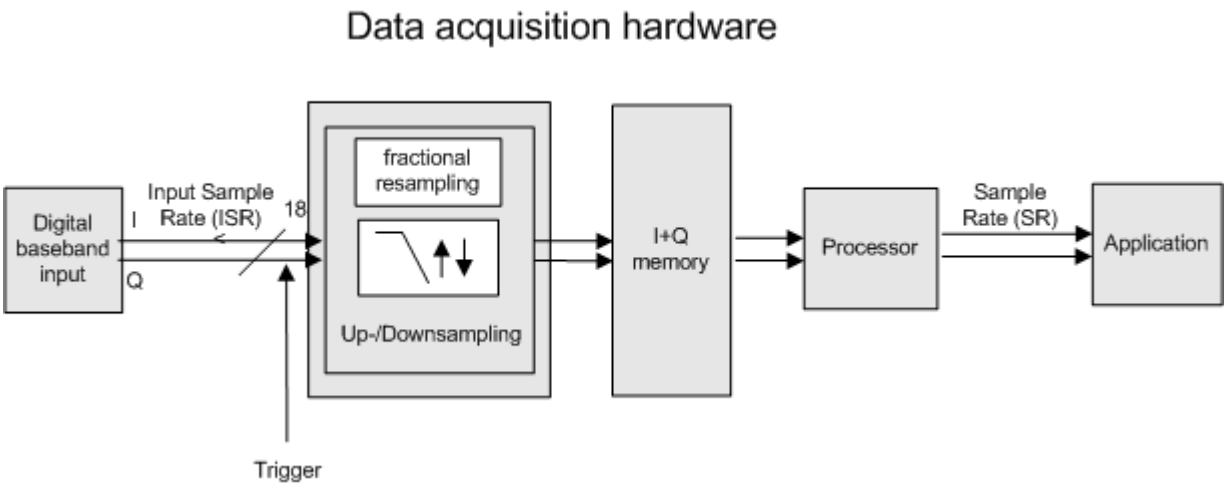

Fig. 5-4: Signal path using digital input

Full scale level

The "Full Scale Level" defines the level that corresponds to an I/Q sample with the magnitude "1" and can be defined in various units. When converting the measured power into dBm, an impedance of 50 Ω is assumed.

Triggering

The following trigger sources are supported:

- External (see "External Trigger 1/2/3" on page 105)
- BB Power (see "Baseband Power" on page 106)
- Time (see "Time" on page 108)
- Digital I/Q general purpose trigger (see "Digital I/Q" on page 106)

If external triggering is used, the external trigger must be applied via the connector on the rear panel of the instrument (as for analog input).

Gating
Gating is not supported for digital input.

5.2.2 Digital Output

Digital output can only be enabled in the I/Q Analyzer or Analog Demodulation applications (see "Digital Baseband Output" on page 92).

It is recommended that you use the R&S®SMU-Z6 (1415.0201.02) cable to connect other devices to the Digital Baseband Interface of the R&S FSW.

Processing digital output

Digital output is processed almost identically to RF input in I/Q mode (see chapter 5.1, "Processing Analog I/Q Data from RF Input", on page 21). I/Q data is sampled blockwise, according to the defined sample rate, and stored in the I/Q memory. From the memory, the I/Q data is processed in the I/Q Analyzer mode. Simultaneously, the data is written to the R&S Digital Baseband Interface continuously. Using this interface, the I/Q data can be processed in an external instrument as an alternative to internal processing in the R&S FSW.

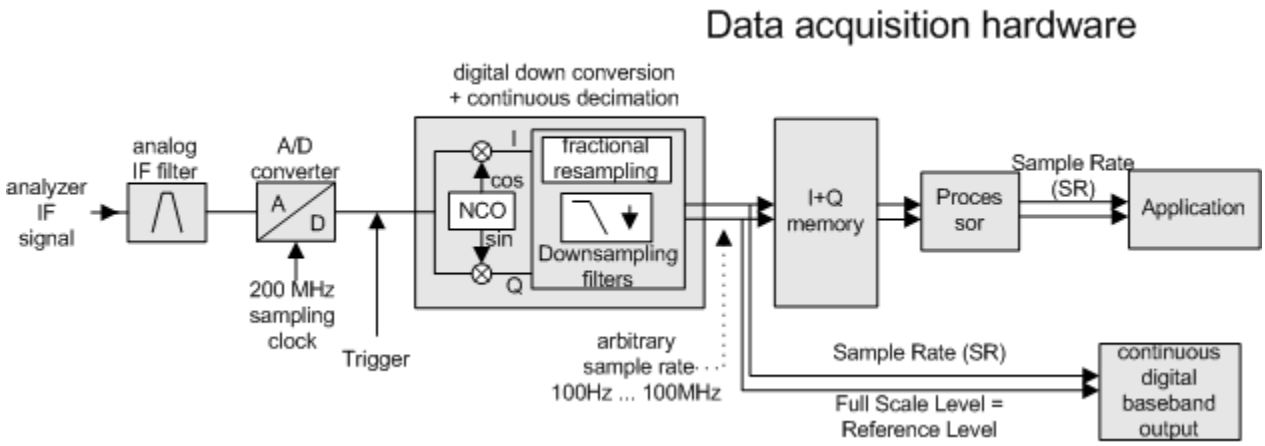

Fig. 5-5: Signal path using the digital output

The **sample rate** at the digital output corresponds to the sample rate defined by the user and which is used as the basis for analysis (see chapter 5.2.3, "Sample Rates and Bandwidths for Digital I/Q Data", on page 29). The current sample rate is displayed in the Digital I/Q "Output" dialog box (read-only) when the digital output is enabled (see "Output Settings Information" on page 92).

For digital output, the full scale level corresponds to the defined reference level (without the reference level offset and transducer).

5.2.3 Sample Rates and Bandwidths for Digital I/Q Data

Definitions

- **Clock rate**: the rate at which data is physically transmitted between the R&S FSW and the connected instrument; both instruments must be able to process data at this rate; the clock rate of the R&S FSW at the output connector is 142.9 MHz; using the Digital I/Q enhanced mode, a data transfer rate of up to 200 Msps is possible
- **Input sample rate (ISR)**: the sample rate of the useful data provided by the connected instrument to the digital input
- (User, Output) **Sample rate (SR)**: the sample rate that is defined by the user (e.g. in the "Data Aquisition" dialog box in the "I/Q Analyzer" application) and which is used as the basis for analysis or sent to the digital output

- **Usable I/Q (Analysis) bandwidth**: the bandwidth range in which the signal remains unchanged by the digital decimation filter and thus remains undistorted; this range can be used for accurate analysis by the R&S FSW

SlowI/Q measurements

When captured data is transferred and further processed with a slower rate than the rate with which the signal was sampled, this is referred to as a *Slow I/Q measurement*.

For example, assume an analog signal is sampled by an oscilloscope with a sample rate of 10 GHz. This data is stored in a memory temporarily and then transferred to the R&S FSW via the Digital I/Q Interface with a sample rate of 100R&S FSWMsps. Then the input sample rate on the R&S FSW must be set to 10 GHz so the signal is displayed correctly.

The following table describes the restrictions for digital in- and output:

Table 5-1: Restrictions for digital in- and output

Parameter	Minimum	Maximum
Record length	2 complex samples	220*1024*1024 complex samples
Input sample rate (ISR)	100 Hz	10 GHz
Sample Rate (SR) Digital input active: Digital output active:	 Max(100 Hz; ISR/8388608) 100 Hz	 Min(10 GHz; 2*ISR) 100 MHz; (200 MHz if enhanced mode is possible, see "Digital I/Q enhanced mode" on page 27)
Usable I/Q bandwidth (Digital input and filter active)	Min(0.8*SR; 0.8*ISR)	

Unfiltered I/Q data input

The values in table 5-1 apply for the default data processing using the decimation filter and resampler. If the filter is deactivated (see "Omitting the Digital Decimation Filter (No Filter)" on page 113, the analysis sample rate is identical to the input sample rate. In this case, the usable I/Q bandwidth is not restricted by the R&S FSW.

Bandwidths

Depending on the sample rate, the following bandwidths are available:

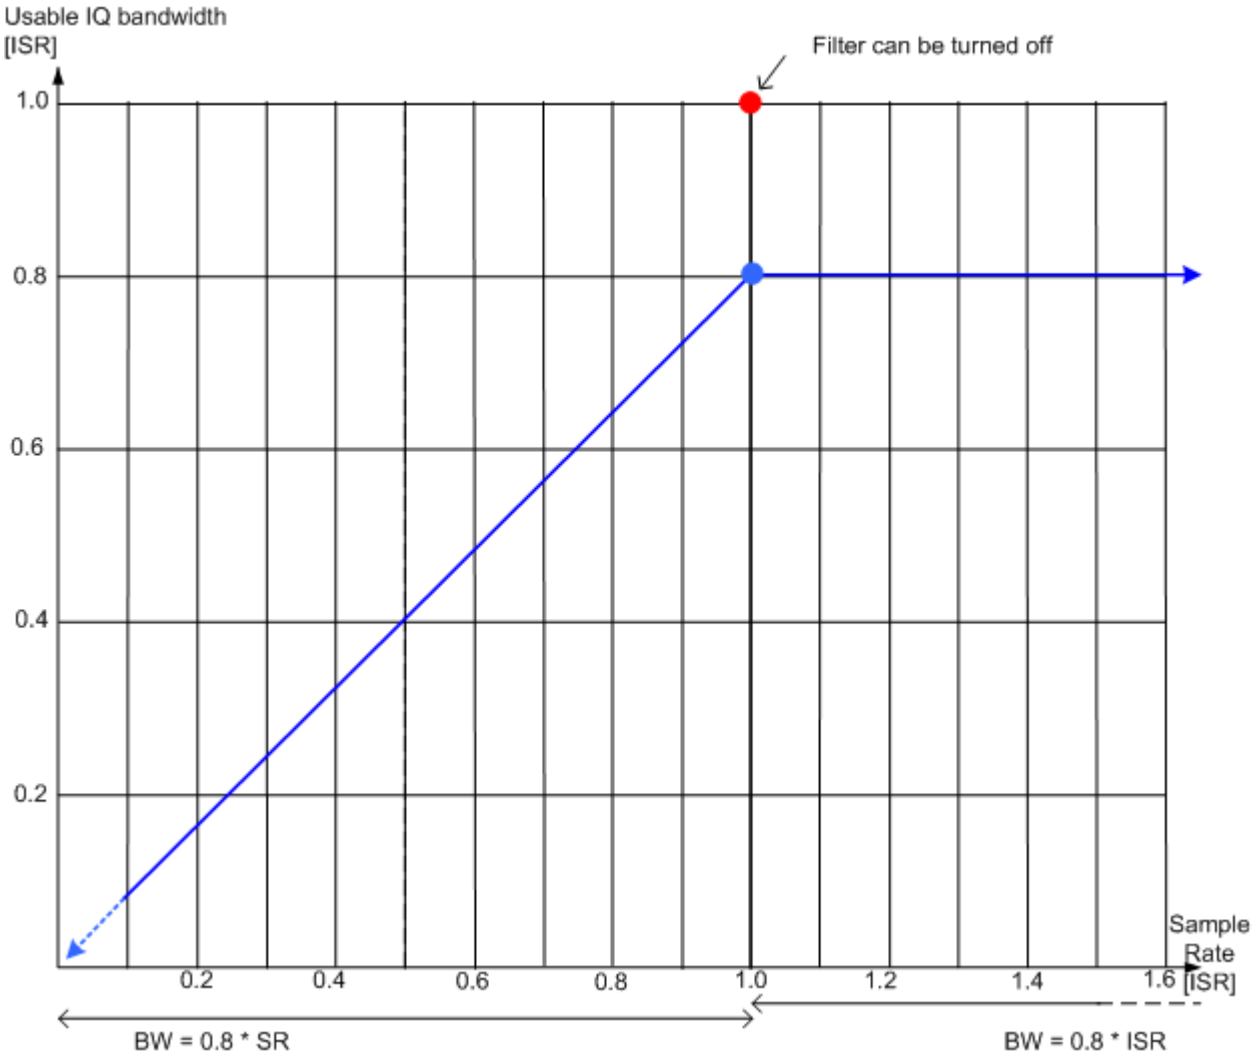

Fig. 5-6: Bandwidths depending on sample rate for active digital input

5.2.4 Interface Status Information

When a digitial input or output instrument is connected to the R&S Digital Baseband Interface, the "Input" or "Output" dialog boxes provide information on the status of the connection (see "Connected Instrument" on page 77, "Connected Instrument" on page 93, "Output Settings Information" on page 92).

You can query the information in these dialog boxes using remote commands, see `INPut:DIQ:CDEVice` on page 163 and `OUTPut:DIQ:CDEVice` on page 166.

Status icons

The status of the connection to the Digital Baseband Interface is also indicated as icons in the status bar. The status icons have the following meaning:

Table 5-2: Status information for digital baseband connections

Icon	Status
Digital input	
	Connection setup in progress
	Connection established
	• Connection error • No cable connected although Digital I/Q input source state = "ON"
-	Digital I/Q input source state = "OFF" and no cable connected
Digital output	
	Connection setup in progress
	Connection established
	• Connection error • No cable connected although Digital I/Q output state = "ON"
-	Digital I/Q output source state = "OFF" and no cable connected

Error messages

If an error occurs, a message is displayed in the status bar and a status bit is set in one of the status registers (see chapter 10.10, "Querying the Status Registers", on page 281). For details on the message, tap it on the status bar.

5.3 Processing Data From the Analog Baseband Interface

Alternatively to capturing (analog) I/Q data from the standard RF INPUT connector on the front panel of the R&S FSW, analog baseband signals can also be captured via the optional **Analog Baseband Interface (R&S FSW-B71)**, if installed.

- (Analog) Baseband Input 50Ω Connectors (optional).....32
- Analog Baseband Input.....33
- I/Q Processing Modes.....35
- Sample Rates and Bandwidths for Analog Baseband signals.....37

5.3.1 (Analog) Baseband Input 50Ω Connectors (optional)

The R&S FSW Analog Baseband Interface option (R&S FSW-B71) provides 4 BASEBAND INPUT BNC connectors on the front panel of the instrument for analog I and Q signals.

The upper BNC connectors BASEBAND INPUT I and BASEBAND INPUT Q are used to input single-ended signals, the positive signal input for differential signals, as well as input from active **Rohde & Schwarz probes** (R&S RT-ZSxx and differential probes RT-ZDxx).

The lower BNC connectors Ī and Q̄ are used to input the negative signal for differential signals.

For complex signal input (I+jQ), always use two identical cables for the I and Q connectors (same length, same type, same manufacturer). Otherwise, time delay or gain imbalance may occur between the different cables, which cannot be calibrated.

All connectors have a fixed impedance of 50Ω and may receive a maximum input level of $4V_{pp}$ each.

NOTICE

Risk of instrument damage

Do not overload the BASEBAND INPUT connectors. An input voltage of 4 V must never be exceeded. Noncompliance will destroy the Analog Baseband Interface components.

The device that provides analog baseband input (or the probe) must be connected to the R&S FSW accordingly.

Input via the Analog Baseband Interface can be enabled in the I/Q Analyzer, the Analog Demulation application, or in one of the optional applications that process I/Q data (where available).

5.3.2 Analog Baseband Input

The Analog Baseband Interface can be used as an alternative data input source for measurements with the R&S FSW. Either an analog baseband signal is input at the BASEBAND INPUT I and BASEBAND INPUT Q connectors and processed from there, or an RF signal is input at the BASEBAND INPUT I connector and redirected from there to the RF input path.

RF signals via the Analog Baseband Interface

For RF signals that are redirected to the RF input path, the signal from the Analog Baseband Interface is processed in the same manner as for other RF input (see chapter 5.1, "Processing Analog I/Q Data from RF Input", on page 21). However, a transducer is activated before the common process to compensate for the additional path of the redirected signal. Additionally, the modulated signals can be converted to any frequency in the analysis bandwidth.

Complex spectrum analysis

However, if the input is already available as a complex baseband signal (I and Q signals), the Analog Baseband Interface allows you to analyze the complex spectrum of the baseband signal. This is useful for measurements in the early stages of signal processing or radio transmission, when the analog baseband signal has not yet been modulated.

Low IF signals

I/Q input that has already been modulated ("Low IF signal") is down-converted digitally.

Data acquisition

The Analog Baseband Interface of the R&S FSW can process both single-ended (unbalanced) and differential (balanced) input. The signal is input to the R&S FSW via the connectors of the Analog Baseband Interface. If necessary, for instance if the connections are mixed up or the data is inverted by the device under test, the I and Q values in the input can be swapped. The A/D converter samples the input at a rate of 200 MHz. As a result, 200 megasamples of I values and 200 megasamples of Q values are obtained per second.

Voltage levels - full scale level

For RF input, the maximum expected voltage level is defined by the reference level. For analog baseband input, the maximum expected voltage level *for each component* (I or Q) is defined by the **full scale level**. The full scale level defines the maximum power you can input at the BASEBAND INPUT connector without clipping the signal.

The full scale level can be defined manually or automatically, such that the power of I and Q does not exceed the reference level.

If probes are connected, the possible full scale values are adapted according to the probe's attenuation and maximum allowed voltage.

For details on probes see chapter 5.3, "Processing Data From the Analog Baseband Interface", on page 32.

When converting the measured voltage into dBm, an impedance of 50 Ω is assumed.

Triggering

The following trigger sources are supported for analog baseband input (see "Trigger Source" on page 105):

- External

- Baseband power
- Time
- Power sensor

Gating

Gating is not supported for analog baseband input.

Calibration

A special calibration signal is available for analog baseband input and can be activated in the general instrument settings. If activated, an internal DC or AC calibration signal is input to the Analog Baseband Interface.

For details see the R&S FSW User Manual.

5.3.3 I/Q Processing Modes

The Analog Baseband Interface provides different methods of processing the baseband input (I/Q modes), depending on the measurement requirements.

Complex baseband mode (I+jQ)

In the (default) *complex baseband mode*, the analog input signal is assumed to be a complex baseband signal. There is no need to equalize any IF filter or mix the signal into the complex baseband. The analog hardware just has to ensure that the final I/Q data stored in the capture buffer has the correct sample rate for the application.

The analog baseband input signal is brought to the desired sample rate using a down-sampling filter and fractional resampling. No level compensation is necessary. The resulting data can be processed by the selected application.

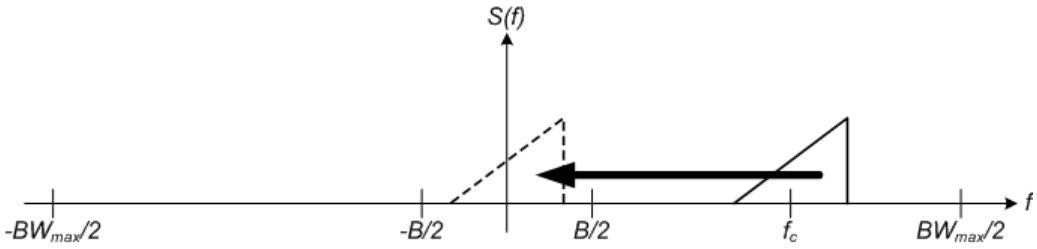

Fig. 5-7: Spectrum in complex baseband (I+jQ) mode

The complex spectrum of the input signal is displayed. The center frequency does not have to be moved, but it can be, as long as the selected spectrum remains within the maximum analysis bandwidth (see chapter 5.3.4, "Sample Rates and Bandwidths for Analog Baseband signals", on page 37).

Low IF mode (I or Q)

In *low IF mode*, the real signal from the selected input component (I or Q) is assumed to be a modulated carrier with a specific center frequency. The signal is down-converted to

a selected center frequency (= low IF frequency) using an NCO. The center frequency must be higher than 0 Hz so that no part of the negative mirrored spectrum lies within the analysis bandwidth. (The center frequency must be different to 0 Hz, as in this case real baseband mode is assumed, see "Real baseband mode (I or Q only)" on page 36.) The selected center frequency should also be selected such that the displayed spectrum remains within the maximum analysis bandwidth (see chapter 5.3.4, "Sample Rates and Bandwidths for Analog Baseband signals", on page 37).

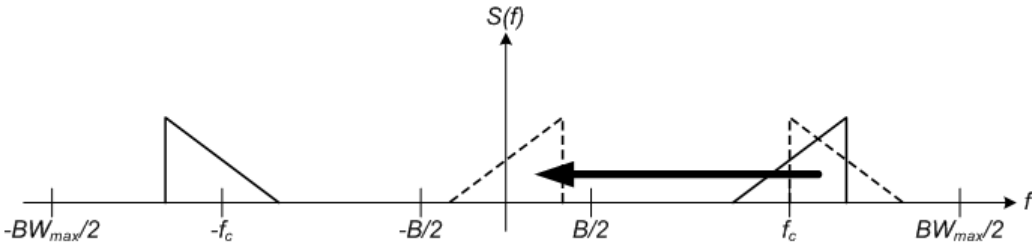

Fig. 5-8: Spectrum in low IF mode

Compared to the initial complex baseband signal that was input, the down-converted I or Q component contains only half the spectrum (i.e. one sideband less) after passing the filter. The power is thus reduced by one half (or: -3 dB). This power loss is compensated for by increasing the power of the resulting spectrum by +3 dB.

The digitized data is brought to the desired sample rate using a downsampling filter and fractional resampling.

This processing mode corresponds to the common RF spectrum analysis, applied to the analog baseband input.

Real baseband mode (I or Q only)

As mentioned above, a center frequency of 0 Hz is not allowed for low IF mode. In this case, the input signal is assumed to be a real baseband signal, so no down-conversion is performed. Thus, this mode resembles an oscilloscope. The spectrum result display always starts at 0 and has a maximum span of half the sample rate (half of the captured samples are from the other component, which is not displayed in this mode). The Real/Imag result display shows only one diagram (namely the one for the selected component).

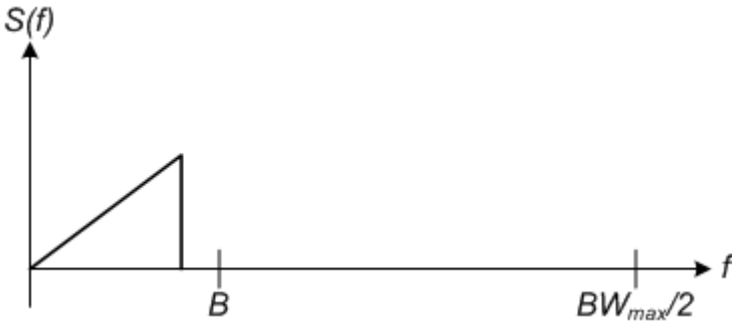

Fig. 5-9: Spectrum in real baseband mode

This mode is useful for pulse measurements, for example.

5.3.4 Sample Rates and Bandwidths for Analog Baseband signals

The analog baseband input is sampled internally by the R&S FSW at a rate of 200 MHz. As a result, 200 megasamples of I values and 200 megasamples of Q values can be obtained per second. The actual sample rate required by the application, however, may be lower, in which case the data is downsampled. Depending on the application used to process the data, the required sample rate is defined by the application itself or by the user. The sample rate also determines the analysis bandwidth, that is, the bandwidth range in which the signal remains undistorted in regard to amplitude characteristic and group delay and can be used for accurate analysis by the R&S FSW. The sample rate and the analysis bandwidth are interdependant and are adapted according to the following formula in the I/Q Analyzer (see also chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22):

*Analysis bandwidth = 0.8 * sample rate*

(For I or Q only: *Analysis bandwidth = 0.4 * sample rate*)

Bandwidth extension options

The standard R&S FSW equipped with the Analog Baseband Interface (R&S FSW-B71) can analyze a maximum bandwidth of 40 MHz input *per connector*, i.e. an 80 MHz analysis bandwidth for a complex baseband signal.

The bandwidth extension options B28/B40/B80/B160 for RF input have no effect on analog baseband input.

However, a special bandwidth extension option for the Analog Baseband Interface (R&S FSW-B71E) is available, which allows the R&S FSW to analyze a maximum bandwidth of 80 MHz input *per connector*, i.e. a 160 MHz analysis bandwidth.

Spectrum limits

The analog baseband spectrum to be analyzed depends both on the analysis bandwidth and on the center frequency, which defines the middle of the spectrum. The spectrum should always remain within the span -40 MHz to +40 MHz (without the B71E option) or -80 MHz to +80 MHz (with the B71E option) to avoid effects from unwanted signal components (e.g. mirrored sidebands). Thus, always select the maximum analysis bandwidth and the position of the center frequency such that the spectrum remains within the specified limits. You are not forced by the R&S FSW to do so, but a warning message will be displayed if the limits are exceeded.

Table 5-3: Spectrum limits depending on I/Q mode

I/Q Mode	Complex baseband (I+jQ)	Low-IF (I / Q)	Real Baseband (I / Q)
Analysis bandwidth BW	BW_{max} = +80 MHz (default) BW_{max} = +160 MHz (with B71E option) $-BW_{max}/2 + BW/2 \leq f_c \leq BW_{max}/2 - BW/2$ ***)**	BW_{max} = +40 MHz (default) BW_{max} = +80 MHz (with B71E option) $-BW_{max}/2 + BW/2 \leq f_c \leq BW_{max}/2 - BW/2$ ***)**	BW_{max} = +40 MHz (default) BW_{max} = +80 MHz (with B71E option)
Center frequency f_c	$-BW_{max}/2 < f_c < BW_{max}/2$ i.e.: -40 MHz to +40 MHz (default) -80 MHz to +80 MHz (with B71E option)	$0 < f_c < BW_{max}$ i.e.: +10 Hz to +40 MHz (default) +10 Hz to +80 MHz (with B71E option)	f_c = 0 Hz
Span	= Sample rate	= Sample rate	= Sample rate / 2
*) not forced by R&S FSW			

5.4 Receiving Data Input and Providing Data Output

The R&S FSW can analyze signals from different input sources and provide various types of output (such as noise or trigger signals).

5.4.1 RF Input Protection

The RF input connector of the R&S FSW must be protected against signal levels that exceed the ranges specified in the data sheet. Therefore, the R&S FSW is equipped with an overload protection mechanism. This mechanism becomes active as soon as the power at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.

When the overload protection is activated, an error message is displayed in the status bar ("INPUT OVLD"), and a message box informs you that the RF Input was disconnected. Furthermore, a status bit (bit 3) in the `STAT:QUES:POW` status register is set. In this case you must decrease the level at the RF input connector and then close the message box. Then measurement is possible again. Reactivating the RF input is also possible via the remote command `INPut:ATTenuation:PROTection:RESet` .

5.4.2 RF Input from the Analog Baseband Connector

RF input can not only be taken from the RF INPUT connector on the front panel of the R&S FSW. If the optional Analog Baseband Interface (R&S FSW-B71) is installed and active for input, an RF signal can be input at the BASEBAND INPUT I connector and redirected from there to the RF input path. A transducer is activated to compensate for the additional path of the redirected signal. The signal is then processed as usual in the frequency and time domain as for any other RF input.

This is useful, for example, to perform frequency sweep measurements with (single-ended or differential) active probes, which can also be connected to the BASEBAND INPUT I connector.

Frequency sweep measurements on probe input

You can perform RF measurements (measurements in the time or frequency domain) by connecting a probe to the BASEBAND INPUT I connector and switching the input source to this connector in the RF input configuration (see "Input Connector" on page 64).

The probe's attenuation is compensated automatically by the R&S FSW using a transducer named "Probe on Baseband Input I". (The probe can only be connected on I, as only input at the I connector can be redirected to the RF path). A comment is assigned that includes the type, name and serial number of the detected probe. The transducer is deleted as soon as the probe is disconnected.

For details on transducers see the General Instrument Setup section in the R&S FSW User Manual.

For information on using probes for input see chapter 5.4.3, "Using Probes", on page 39.

5.4.3 Using Probes

As an alternative means of input to the R&S FSW, active probes from Rohde&Schwarz can be connected to the optional BASEBAND INPUT connectors, if the Analog Baseband Interface (option R&S FSW-B71) is installed. These probes allow you to perform voltage measurements very flexibly and precisely on all sorts of devices to be tested, without interfering with the signal.

Connecting probes

Probes are automatically detected when you plug them into the upper BASEBAND INPUT connectors on the front panel of the R&S FSW. The detected information on the probe is displayed in the "Probes" tab of the "Input" dialog box, individually for each connector.

Single-ended and differential probes

Both single-ended and differential probes are supported as input; however, since only one connector is occupied by a probe, the "Input Configuration" setting for the "Analog Baseband" input source must be set to "Single-ended" for all probes (see "Input configuration" on page 79).

Availability of probe input

Analog baseband input from connected probes can only be analyzed in applications that support I/Q data processing and the Analog Baseband Interface (R&S FSW-B71), such as the I/Q Analyzer, the Analog Demodulation application, or one of the optional applications.

Frequency sweep measurements with probes

Probes can also be used as an alternative method of providing RF input to the R&S FSW. In this case, the probe must be connected to the BASEBAND INPUT I connector, and the input is redirected to the RF input path (see chapter 5.4.2, "RF Input from the Analog Baseband Connector", on page 38). As opposed to common RF input processing, a transducer is activated before the common process to compensate for the additional path of the redirected signal. Probe signals that are redirected to the **RF input path** can also be analyzed in the **Spectrum application** of the R&S FSW base unit. Then you can perform RF measurements (measurements in the time or frequency domain) on the input from a probe.

Microbutton action

You can define an action to be performed by the R&S FSW when the probe's microbutton (if available) is pressed. Currently, a single data acquisition via the probe can be performed simply by pressing the microbutton.

Impedance and attenuation

The measured signal from the probe is attenuated internally by the probe's specific attenuation. For probe signals that are redirected to the RF path, the attenuation is compensated using a transducer (see "Frequency sweep measurements on probe input" on page 39). The reference level is adjusted automatically.

For analog baseband input, the attenuation is compensated without a transducer. In this case, higher levels are available for the fullscale level.

A fixed impedance of 50 Ω is used for all probes to convert voltage values to power levels.

5.4.4 Basics on External Generator Control

Some background knowledge on basic terms and principles used for external generator control is provided here for a better understanding of the required configuration settings.

External generator control is only available in the Spectrum, I/Q Analyzer and Analog Demodulation applications.

- External Generator Connections....41
- Overview of Generators Supported by the R&S FSW-B10 Option....43
- Generator Setup Files....44
- Calibration Mechanism....44
- Normalization....45
- Reference Trace, Reference Line and Reference Level....46
- Coupling the Frequencies....47
- Displayed Information and Errors....50

5.4.4.1 External Generator Connections

The external generator is controlled either via a LAN connection or via the EXT. GEN. CONTROL GPIB interface of the R&S FSW supplied with the R&S FSW-B10 option.

For more information on configuring interfaces see the "Remote Control Interfaces and Protocols" section in the R&S FSW User Manual.

TTL synchronization

In addition, TTL synchronization can be used with some Rohde & Schwarz generators connected via GPIB. The TTL interface is included in the AUX CONTROL connector of the R&S FSW-B10 option.

Using the TTL interface allows for considerably higher measurement rates than pure GPIB control, because the frequency stepping of the R&S FSW is directly coupled with the frequency stepping of the generator. For details see chapter 5.4.4.7, "Coupling the Frequencies", on page 47.

In figure 5-10 the TTL connection is illustrated using an SMU generator, for example.

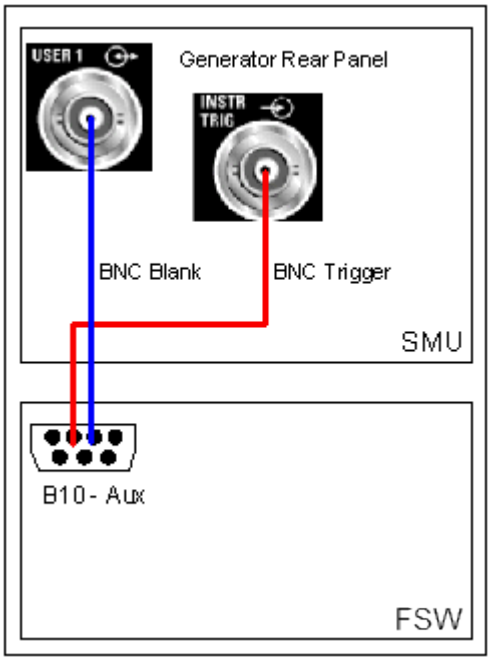

Fig. 5-10: TTL connection for an SMU generator

The external generator can be used to calibrate the data source by performing either transmission or reflection measurements.

Transmission Measurement

This measurement yields the transmission characteristics of a two-port network. The external generator is used as a signal source. It is connected to the input connector of the DUT. The input of the R&S FSW is fed from the output of the DUT. A calibration can

be carried out to compensate for the effects of the test setup (e.g. frequency response of connecting cables).



Fig. 5-11: Test setup for transmission measurement

Reflection Measurement

Scalar reflection measurements can be carried out using a reflection-coefficient measurement bridge.

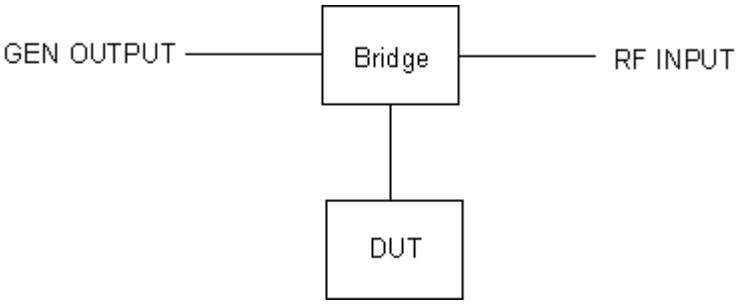

Fig. 5-12: Test setup for reflection measurement

Generated signal input

In order to use the functions of the external generator, an appropriate generator must be connected and configured correctly. In particular, the generator output must be connected to the RF input of the R&S FSW.

External reference frequency

In order to enhance measurement accuracy, a common reference frequency should be used for both the R&S FSW and the generator. If no independent 10 MHz reference frequency is available, it is recommended that you connect the reference output of the generator with the reference input of the R&S FSW and that you enable usage of the external reference on the R&S FSW via "SETUP" > "Reference" > "External Reference".

For more information on external references see the "Instrument Setup" section in the R&S FSW User Manual.

Connection errors

If no external generator is connected, if the GPIB or TCP/IP address is not correct, or the generator is not ready for operation, an error message is displayed ("Ext. Generator GPIB Handshake Error!" or "Ext. Generator TCPIP Handshake Error!", see chapter 5.4.4.8, "Displayed Information and Errors", on page 50).

5.4.4.2 Overview of Generators Supported by the R&S FSW-B10 Option

The R&S SMA and R&S SMU require the following firmware versions:
R&S SMA: V2.10.x or higher
R&S SMU: V1.10 or higher

Generator type	TTL support	Generator type	TTL support
SMA01A	X	SMR40	X
SMBV100A3	X	SMR40B11 [1)]	X
SMBV100A6	X	SMR50	X
SMC100A1	X	SMR50B11 [1)]	X
SMC100A3	X	SMR60	X
SME02	X	SMR60B11 [1)]	X
SME03	X	SMP02	X
SME06	X	SMP03	X
SMG	-	SMP04	X
SMGL	-	SMP22	X
SMGU	-	SMT02	-
SMH	-	SMT03	-
SMHU	-	SMT06	-
SMIQ02B	X	SMV03	-
SMIQ02E	-	SMU02B31	X
SMIQ03B	X	SMU03	X
SMIQ03E	-	SMU03B31	X
SMIQ04B	X	SMU04	X
SMIQ06B	X	SMU04B31	X
SML01	-	SMU06	X
SML02	-	SMU06B31	X
SML03	-	SMX	-
SMR20	X	SMY01	-
SMR20B11 [1)]	X	SMY02	-
SMR27	X	HP8340A	-
SMR27B11 [1)]	X	HP8648	-
1) Requires the option SMR-B11			

Generator type	TTL support	Generator type	TTL support
SMR30	X	HP ESG-A Series 1000A, 2000A, 3000A, 4000A	-
SMR30B11 1)	X	HP ESG-D SERIES E4432B	-
1) Requires the option SMR-B11			

5.4.4.3 Generator Setup Files

For each signal generator type to be controlled by the R&S FSW a generator setup file must be configured and stored on the R&S FSW. The setup file defines the frequency and power ranges supported by the generator, as well as information required for communication. For the signal generators listed in chapter 5.4.4.2, "Overview of Generators Supported by the R&S FSW-B10 Option", on page 43, default setup files are provided. If necessary, these files can be edited or duplicated for varying measurement setups or other instruments.

The existing setup files can be displayed in an editor in read-only mode directly from the "External Generator" configuration dialog box. They must be saved under a different name (using "File > SaveAs"). To add a new generator to the selection list in the "Interface Configuration", edit the setup file for an existing generator as required, then save the file with the extension "`.gen`". After you close the configuration dialog and re-open it, the new generator is available in the Generator Type list with the name of the saved setup file.

Be careful, however, to adhere to the required syntax and commands - only change the *values* of the parameters. Errors will only be detected and displayed when you try to use the new generator (see also chapter 5.4.4.8, "Displayed Information and Errors", on page 50).

5.4.4.4 Calibration Mechanism

A common measurement setup includes a signal generator, a device under test (DUT), and a signal and spectrum analyzer. Therefore, it is useful to measure the attenuation or gain caused by the cables and connectors from the signal generator and the signal analyzer in advance. The known level offsets can then be removed from the measurement results in order to obtain accurate information on the DUT.

Calculating the difference between the currently measured power and a reference trace is referred to as *calibration*. Thus, the measurement results from the controlled external generator - including the inherent distortions - can be used as a reference trace to calibrate the measurement setup.

The inherent frequency and power level distortions can be determined by connecting the R&S FSW to the signal generator. The R&S FSW sends a predefined list of frequencies to the signal generator (see also chapter 5.4.4.7, "Coupling the Frequencies", on page 47). The signal generator then sends a signal with the specified level at each frequency in the predefined list. The R&S FSW measures the signal and determines the level offsets to the expected values.

Saving calibration results

A reference dataset for the calibration results is stored internally as a table of value pairs (frequency/level), one for each sweep point. The measured offsets can then be used as calibration factors for subsequent measurement results.

The calibration can be performed using either transmission or reflection measurements. The selected type of measurement used to determine the reference trace is included in the reference dataset.

5.4.4.5 Normalization

Once the measurement setup has been calibrated and the reference trace is available, subsequent measurement results can be corrected according to the calibration factors, if necessary. This is done by subtracting the reference trace from the measurement results. This process is referred to as *normalization* and can be activated or deactivated as required. If normalization is activated, "NOR" is displayed in the channel bar, next to the indication that an external generator is being used ("Ext.Gen").The normalized trace from the calibration sweep is a constant 0 dB line, as <calibration trace> - <reference trace> = 0.

As long as the same settings are used for measurement as for calibration, the normalized measurement results should not contain any inherent frequency or power distortions. Thus, the measured DUT values are very accurate.

Approximate normalization

As soon as any of the calibration measurement settings are changed, the stored reference trace will no longer be identical to the new measurement results. However, if the measurement settings do not deviate too much, the measurement results can still be normalized *approximately* using the stored reference trace. This is indicated by the "APX" label in the channel bar (instead of "NOR").

This is the case if one or more of the following values deviate from the calibration settings:

- coupling (RBW, VBW, SWT)
- reference level, RF attenuation
- start or stop frequency
- output level of external generator
- detector (max. peak, min. peak, sample, etc.)
- frequency deviation at a maximum of 1001 points within the set sweep limits (corresponds to a doubling of the span)

Differences in level settings between the reference trace and the current instrument settings are taken into account automatically. If the span is reduced, a linear interpolation of the intermediate values is applied. If the span increases, the values at the left or right border of the reference dataset are extrapolated to the current start or stop frequency, i.e. the reference dataset is extended by constant values.

Thus, the instrument settings can be changed in a wide area without giving up normalization. This reduces the necessity to carry out a new normalization to a minimum.

If approximation becomes too poor, however, normalization is aborted and an error message is displayed (see chapter 5.4.4.8, "Displayed Information and Errors", on page 50).

The normalized trace in the display

The normalized reference trace is also displayed in the spectrum diagram, by default at the top of the diagram (= 100% of the window height). It is indicated by a red line labeled "NOR", followed by the current reference value. However, it can be shifted vertically to reflect an attenuation or gain caused by the measured DUT (see also "Shifting the reference line (and normalized trace)" on page 47).

Restoring the calibration settings

If the measurement settings no longer match the instrument settings with which the calibration was performed (indicated by the "APX" or no label next to "Ext.TG" in the channel bar), you can restore the calibration settings, which are stored with the reference dataset on the R&S FSW.

Storing the normalized reference trace as a transducer factor

The (inverse) normalized reference trace can also be stored as a *transducer factor* for use in other R&S FSW applications that do not support external generator control. The normalized trace data is converted to a transducer with unit dB and stored in a file with the specified name and the suffix `.trd` under `c:\r_s\instr\trd`. The frequency points are allocated in equidistant steps between the start and stop frequency.

This is useful, for example, to determine the effects of a particular device component and then remove these effects from a subsequent measurement which includes this component.

For an example see the "External Generator Control: Measurement Examples" section in the R&S FSW User Manual.

Note that the *normalized* measurement data is stored, not the original *reference* trace! Thus, if you store the normalized trace directly after calibration, without changing any settings, the transducer factor will be 0 dB for the entire span (by definition of the normalized trace).

5.4.4.6 Reference Trace, Reference Line and Reference Level

Reference trace

The calibration results are stored internally on the R&S FSW as a *reference trace*. For each measured sweep point the offset to the expected values is determined. If normalization is activated, the offsets in the reference trace are removed from the current measurement results to compensate for the inherent distortions.

Reference line

The reference line is defined by the Reference Value and Reference Position in the "External Generator" > "Source Calibration" settings. It is similar to the Reference Level defined in the "Amplitude" settings. However, as opposed to the reference *level*, this reference *line* only affects the y-axis scaling in the diagram, it has no effect on the expected input power level or the hardware settings.

The reference line determines the range and the scaling of the y-axis, just as the reference level does.

The normalized reference trace (0 dB directly after calibration) is displayed on this reference line, indicated by a red line in the diagram. By default, the reference line is displayed at the top of the diagram. If you shift the reference line, the normalized trace is shifted, as well.

Shifting the reference line (and normalized trace)

You can shift the reference line - and thus the normalized trace - in the result display by changing the Reference Position or the Reference Value.

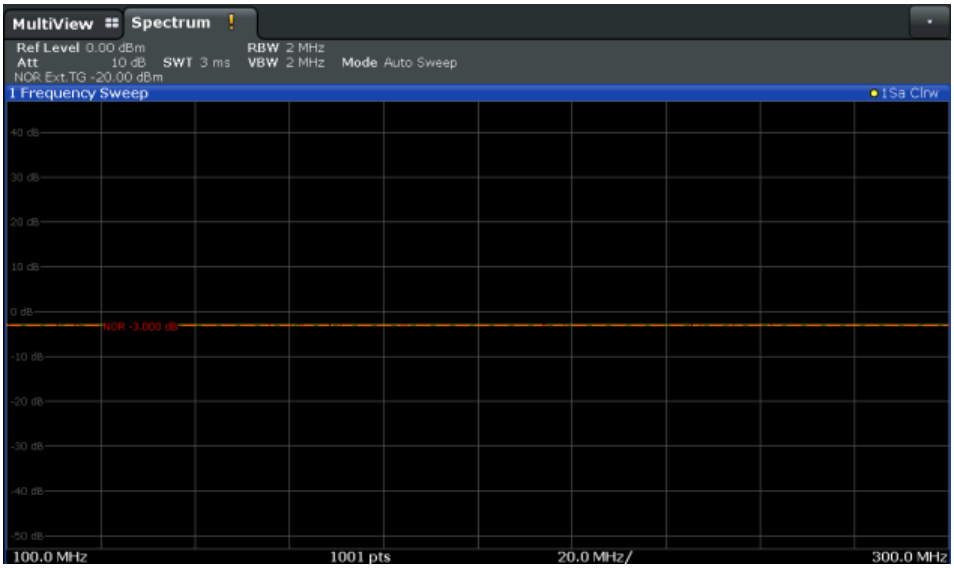

Fig. 5-13: Shifted reference line

If the DUT inserts a gain or an attenuation in the measurement, this effect can be reflected in the result display on the R&S FSW. To reflect a power offset in the measurement trace, change the Reference Value.

5.4.4.7 Coupling the Frequencies

As described in chapter 5.4.4.5, "Normalization", on page 45, normalized measurement results are very accurate *as long as the same settings are used as for calibration*. Although approximate normalization is possible, it is important to consider the required frequencies for calibration in advance. The frequencies and levels supported by the connected signal generator are provided for reference with the interface configuration.

Two different methods are available to define the frequencies for calibration, that is to couple the frequencies of the R&S FSW with those of the signal generator:

- **Manual coupling**: a single frequency is defined
- **Automatic coupling**: a series of frequencies is defined (one for each sweep point), based on the current frequency at the RF input of the R&S FSW; the RF frequency range covers the currently defined span of the R&S FSW (unless limited by the range of the signal generator)

Automatic coupling

If automatic coupling is used, the output frequency of the generator (source frequency) is calculated as follows:

$$\text{Source Freq} = \text{RF} \cdot \frac{\text{Numerator}}{\text{Denominator}} + \text{Offset}$$

Output frequency of the generator (5 - 1)

where:

$F_{Generator}$ = output frequency of the generator

$F_{Analyzer}$ = current frequency at the RF input of the R&S FSW

Numerator = multiplication factor for the current analyzer frequency

Denominator = division factor for the current analyzer frequency

F_{Offset} = frequency offset for the current analyzer frequency, for example for frequency-converting measurements or harmonics measurements

The value range for the offset depends on the selected generator. The default setting is 0 Hz. Offsets other than 0 Hz are indicated by the "FRQ" label in the channel bar (see also chapter 5.4.4.8, "Displayed Information and Errors", on page 50).

Swept frequency range

The $F_{Analyzer}$ values for the calibration sweep start with the start frequency and end with the stop frequency defined in the "Frequency" settings of the R&S FSW. The resulting output frequencies (Result Frequency Start and Result Frequency Stop) are displayed in the "External Generator" > "Measurement Configuration" for reference.

If the resulting frequency range exeeds the allowed ranges of the signal generator, an error message is displayed (see chapter 5.4.4.8, "Displayed Information and Errors", on page 50) and the Result Frequency Start and Result Frequency Stop values are corrected to comply with the range limits.

The calibration sweep nevertheless covers the entire span defined by the R&S FSW; however, no input is received from the generator outside the generator's defined limits.

TTL synchronization

Some Rohde & Schwarz signal generators support TTL synchronization when connected via GPIB. The TTL interface is included in the AUX CONTROL connector of the R&S FSW-B10 option.

When pure GPIB connections are used between the R&S FSW and the signal generator, the R&S FSW sets the generator frequency for each frequency point individually via GPIB, and only when the setting procedure is finished, the R&S FSW can measure the next sweep point.

For generators with a TTL interface, the R&S FSW sends a list of the frequencies to be set to the generator before the beginning of the first sweep. Then the R&S FSW starts the sweep and the next frequency point is selected by both the R&S FSW and the generator using the TTL handshake line "TRIGGER". The R&S FSW can only measure a value when the generator signals the end of the setting procedure via the "BLANK" signal.

Using the TTL interface allows for considerably higher measurement rates than pure GPIB control, because the frequency stepping of the R&S FSW is directly coupled with the frequency stepping of the generator.

Reverse sweep

The frequency offset for automatic coupling can be used to sweep in the reverse direction. To do so, define a negative offset in the external generator measurement configuration. (Note that the frequency is defined as the unsigned value of the equation, thus a negative frequency is not possible.)

Example: Example for reverse sweep

$F_{AnalyzerStart}$= 100 MHz

$F_{AnalyzerStop}$ = 200 MHz

F_{Offset} = -300 MHz

Numerator = Denominator = 1

$\rightarrow F_{GeneratorStart}$ = 200 MHz

$\rightarrow F_{GeneratorStop}$ = 100 MHz

If the offset is adjusted so that the sweep of the generator crosses the minimum generator frequency, a message is displayed in the status bar ("Reverse Sweep via min. Ext. Generator Frequency!").

Example: Example for reverse sweep via minimum frequency

$F_{AnalyzerStart}$= 100 MHz

$F_{AnalyzerStop}$ = 200 MHz

F_{Offset} = -150 MHz

F_{min} = 20 MHz

Numerator = Denominator = 1

→$F_{GeneratorStart}$ = 50 MHz

→$F_{GeneratorStop}$ = 50 MHz via Fmin

5.4.4.8 Displayed Information and Errors

Channel bar

If external generator control is active, some additional information is displayed in the channel bar.

Label	Description
EXT TG: <source power>	External generator active; signal sent with <source power> level
LVL	Power Offset (see "Source Offset" on page 84
FRQ	Frequency Offset (see "(Automatic) Source Frequency (Numerator/Denominator/Offset)" on page 85
NOR	Normalization on; No difference between reference setting and measurement
APX (approximation)	Normalization on; Deviation from the reference setting occurs
-	Aborted normalization or no calibration performed yet

Error and status messages

The following status and error messages may occur during external generator control.

Message	Description
"Ext. Generator GPIB Handshake Error!" / "Ext. Generator TCPIP Handshake Error!" / "Ext. Generator TTL Handshake Error!"	Connection to the generator is not possible, e.g. due to a cable damage or loose connection or wrong address.
"Ext. Generator Limits Exceeded!"	The allowed frequency or power ranges for the generator were exceeded.
"Reverse Sweep via min. Ext. Generator Frequency!"	Reverse sweep is performed; frequencies are reduced to the minimum frequency, then increased again; see "Reverse sweep" on page 49
"Ext. Generator File Syntax Error!"	Syntax error in the generator setup file (see chapter 5.4.4.3, "Generator Setup Files", on page 44

Message	Description
"Ext. Generator Command Error!"	Missing or wrong command in the generator setup file (see chapter 5.4.4.3, "Generator Setup Files", on page 44
"Ext. Generator Visa Error!!"	Error with Visa driver provided with installation (very unlikely)

NOTICE

Overloading

At a reference level of -10 dBm and at a external generator output level of the same value, the R&S FSW operates without overrange reserve. That means the R&S FSW is in danger of being overloaded if a signal is applied whose amplitude is higher than the reference line. In this case, either the message "RF OVLD" for overload or "IF OVLD" for exceeded display range (clipping of the trace at the upper diagram border = overrange) is displayed in the status line.

Overloading can be avoided as follows:

- Reducing the output level of the external generator ("Source Power" on page 84 in "External Generator > Measurement Configuration")
- Increasing the reference level (Reference Level in the "Amplitude" menu)

5.4.5 Basics on Input from I/Q Data Files

The I/Q data to be evaluated in a particular R&S FSW application can not only be captured by the application itself, it can also be loaded from a file, provided it has the correct format. The file is then used as the input source for the application.

Currently, this input source is **only available in the R&S FSW Pulse application**.

For example, you can capture I/Q data using the I/Q Analyzer application, store it to a file, and then analyze the pulse parameters for that data later using the R&S FSW Pulse application.

The I/Q data must be stored in a format with the file extension `.iq.tar`. For a detailed description see chapter A.4, "I/Q Data File Format (iq-tar)", on page 299.

As opposed to importing data from an I/Q data file using the import functions provided by some R&S FSW applications (e.g. the I/Q Analyzer or the R&S FSW VSA application), the data is not only stored temporarily in the capture buffer, where it overwrites the current measurement data and is in turn overwritten by a new measurement. Instead, the stored I/Q data remains available as input for any number of subsequent measurements. Furthermore, the (temporary) data import requires the current measurement settings in the current application to match the settings that were applied when the measurement results were stored (possibly in a different application). When the data is used as an input source, however, the data acquisition settings in the current application (attenuation, center frequency, measurement bandwidth, sample rate) can be ignored. As a result, these settings cannot be changed in the current application. Only the measurement time can be

decreased, in order to perform measurements on an extract of the available data (from the beginning of the file) only.

When using input from an I/Q data file, the RUN SINGLE function starts a single Pulse measurement (i.e. analysis) of the stored I/Q data, while the RUN CONT function repeatedly analyzes the same data from the file.

Sample iq.tar files

If you have the optional R&S FSW VSA application (R&S FSW-K70), some sample `iq.tar` files are provided in the `C:/R_S/Instr/user/vsa/DemoSignals` directory on the R&S FSW.

Furthermore, you can create your own `iq.tar` files in the I/Q Analyzer, see chapter 8.3, "How to Export and Import I/Q Data", on page 143.

5.4.6 Input from Noise Sources

The R&S FSW provides a connector (NOISE SOURCE CONTROL) with a voltage supply for an external noise source. By switching the supply voltage for an external noise source on or off in the firmware, you can activate or deactive the device as required.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S FSW itself, for example when measuring the noise level of an amplifier.

In this case, you can first connect an external noise source (whose noise power level is known in advance) to the R&S FSW and measure the total noise power. From this value you can determine the noise power of the R&S FSW. Then when you measure the power level of the actual DUT, you can deduct the known noise level from the total power to obtain the power level of the DUT.

The noise source is controlled in the "Output" settings, see "Noise Source" on page 90

5.4.7 Receiving and Providing Trigger Signals

Using one of the variable TRIGGER INPUT/OUTPUT connectors of the R&S FSW, the R&S FSW can use a signal from an external reference as a trigger to capture data. Alternatively, the internal trigger signal used by the R&S FSW can be output for use by other connected devices. Using the same trigger on several devices is useful to synchronize the transmitted and received signals within a measurement.

For details on the connectors see the R&S FSW "Getting Started" manual.

External trigger as input

If the trigger signal for the R&S FSW is provided by an external reference, the reference signal source must be connected to the R&S FSW and the trigger source must be defined as "External" on the R&S FSW.

Trigger output

The R&S FSW can send output to another device either to pass on the internal trigger signal, or to indicate that the R&S FSW itself is ready to trigger.

The trigger signal can be output by the R&S FSW automatically, or manually by the user. If it is sent automatically, a high signal is output when the R&S FSW has triggered due to a sweep start ("Device Triggered"), or when the R&S FSW is ready to receive a trigger signal after a sweep start ("Trigger Armed").

Manual triggering

If the trigger output signal is initiated manually, the length and level (high/low) of the trigger pulse is also user-definable. Note, however, that the trigger pulse level is always opposite to the constant signal level defined by the output "Level" setting, e.g. for "Level = High", a constant high signal is output to the connector until the "Send Trigger" button is selected. Then, a low pulse is sent.

Providing trigger signals as output is described in detail in the R&S FSW User Manual.

5.4.8 IF and Video Signal Output

The measured IF signal or displayed video signal (i.e. the filtered and detected IF signal) can be sent to the IF/VIDEO/DEMOD output connector.

The **video output** is a signal of 1 V. It can be used, for example, to control demodulated audio frequencies.

The **IF output** is a signal of the measured level at a specified frequency.

Restrictions

Note the following restrictions for IF output:

- IF and video output is only available in the time domain (zero span).
- For I/Q data, only IF output is available.
- IF output is not available if any of the following conditions apply:
  - The Digital Baseband Interface (R&S FSW-B17) is active (for input or output)
  - MSRA operating mode is active
  - The wideband extension is used (hardware option R&S FSW-B160/-B320; used automatically for bandwidths > 80 MHz; in this case use the IF WIDE OUTPUT connector)
  - The sample rate is larger than 200 MHz (upsampling)

IF WIDE OUTPUT

If the optional hardware R&S FSW-B160/-B320 for **bandwidth extension** is installed and activated (i.e. for bandwidths > 80 MHz), the IF output is not sent to the IF/VIDEO/

DEMOD output connector, but rather to the additional **IF WIDE OUTPUT** connector provided by the option.

In this case, the IF output frequency cannot be defined manually, but is determined automatically depending on the center frequency. For details on the used frequencies see the data sheet. The currently used output frequency is indicated in the field otherwise used to define the frequency manually (in the "Output" settings dialog box, see "IF (Wide) Out Frequency" on page 89).

5.5 I/Q Data Import and Export

Baseband signals mostly occur as so-called complex baseband signals, i.e. a signal representation that consists of two channels; the in phase (I) and the quadrature (Q) channel. Such signals are referred to as I/Q signals. I/Q signals are useful because the specific RF or IF frequencies are not needed. The complete modulation information and even distortion that originates from the RF, IF or baseband domains can be analyzed in the I/Q baseband.

Importing and exporting I/Q signals is useful for various applications:

- Generating and saving I/Q signals in an RF or baseband signal generator or in external software tools to analyze them with the R&S FSW later
- Capturing and saving I/Q signals with an RF or baseband signal analyzer to analyze them with the R&S FSW or an external software tool later

For example, you can capture I/Q data using the I/Q Analyzer application and then perform vector signal analysis on that data using the R&S FSW VSA application, if available.

As opposed to storing trace data, which may be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. The data is stored as complex values in 32-bit floating-point format. Multi-channel data is not supported. The I/Q data is stored in a format with the file extension `.iq.tar`. For a detailed description see chapter A.4, "I/Q Data File Format (iq-tar)", on page 299.

The import and export functions are available in the "Save/Recall" menu which is displayed when you select the "Save" or "Open" icon in the toolbar (see chapter 6.3, "Import/Export Functions", on page 60).

5.6 I/Q Analyzer in MSRA Operating Mode

The I/Q Analyzer can also be used in MSRA operating mode. The MSRA Master channel is implemented as an I/Q Analyzer application. Only this channel captures data in MSRA mode. Thus, the functions and settings described for data acquisition in the I/Q Analyzer application also apply to the MSRA Master. Furthermore, the I/Q Analyzer can be used to analyze data in MSRA mode. Thus, the result displays and analysis functions provided by the I/Q Analyzer can also be used in MSRA mode.

Note that the available functions and settings for the I/Q Analyzer in MSRA mode vary depending on whether the MSRA Master channel or an I/Q Analyzer application channel

is selected. For example, data acquisition settings for an I/Q Analyzer **application** channel in MSRA mode configure the analysis interval, not an actual data capture from the input signal. And measurements in the time and frequency domain are only available in an I/Q Analyzer **application** channel in MSRA mode.

Analysis line

A frequent question when analyzing multi-standard radio signals is how each data channel is correlated (in time) to others. Thus, an analysis line has been introduced in firmware version 1.60. The analysis line is a common time marker for all MSRA applications. It can be positioned in any MSRA application or the MSRA Master and is then adjusted in all other applications. Thus, you can easily analyze the results at a specific time in the measurement in all applications and determine correlations.

If the marked point in time is contained in the analysis interval of the application, the line is indicated in all time-based result displays, such as time, symbol, slot or bit diagrams. By default, the analysis line is displayed, however, it can be hidden from view manually. In all result displays, the "AL" label in the window title bar indicates whether or not the analysis line lies within the analysis interval or not:

- **orange "AL"**: the line lies within the interval
- **white "AL"**: the line lies within the interval, but is not displayed (hidden)
- **no "AL"**: the line lies outside the interval

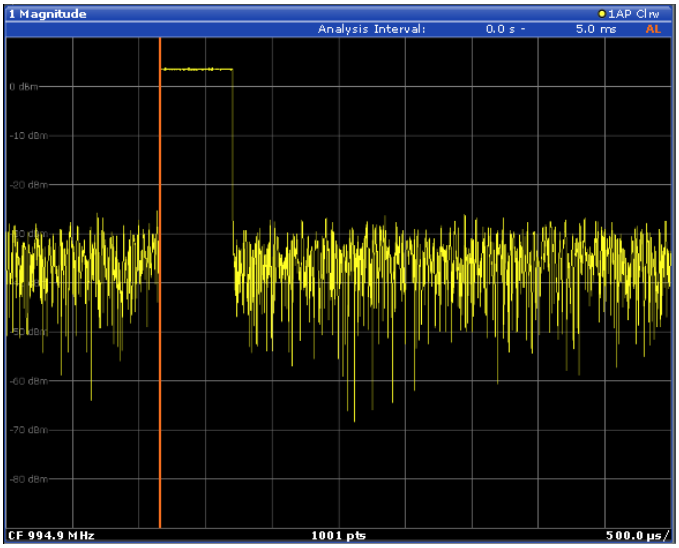

For details on the MSRA operating mode see the R&S FSW MSRA User Manual.

5.7 Measurements in the Time and Frequency Domain

As of firmware version 1.60, the I/Q Analyzer application (*not Master*) **in MSRA mode** can also perform measurements on the captured I/Q data in the time and frequency domain. In order to do so, the I/Q Analyzer performs an FFT sweep on the captured I/Q data, providing power vs frequency results, or uses the RBW filter to obtain power vs time (zero span) results. This data is then used for the common frequency or time domain

measurements provided by the R&S FSW Spectrum application, such as ACLR, SEM or CCDF.

Configuration

Apart from the data capturing process, the measurements are identical in the Spectrum and I/Q Analyzer applications. They are configured using the same settings and provide the same results. The "Magnitude" result display in the I/Q Analyzer, for instance, will principally show the same results as the zero span measurement for the same data. However, while the "Magnitude" evaluation is configured by the I/Q analysis bandwidth and the measurement time, the zero span measurement is configured by the center frequency, RBW and sweep time settings. Internally, these "time domain" settings are converted to the required I/Q settings by the I/Q Analyzer.

The time and frequency domain measurements and the required settings are described in detail in the R&S FSW User Manual.

Limitations

However, since the data in the I/Q Analyzer application is captured by the MSRA Master, independantly of the specific time or frequency measurement requirements concerning the RBW, filter type and number of sweep points in the application, some restrictions may apply to these measurements in the I/Q Analyzer. If not enough samples are available in the captured and converted I/Q data, for example, an error message is displayed in the application.

The **maximum span** for a frequency sweep on I/Q-based data corresponds to the maximum I/Q bandwidth (see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22 and chapter 5.2.3, "Sample Rates and Bandwidths for Digital I/Q Data", on page 29).

The **maximum resolution bandwidth (RBW)** is 1 MHz.

Furthermore, the following **functions** are not available for time and frequency domain measurements in MSRA mode:

- Marker demodulation
- Frequency counter marker
- Gated measurement
- Video trigger

6 Configuration

The I/Q Analyzer is a special application on the R&S FSW, which you activate using the MODE key on the front panel.

When you switch to an I/Q Analyzer measurement channel the first time, a set of parameters is passed on from the currently active application (see chapter 6.1, "Default Settings for I/Q Analyzer measurements", on page 57). After initial setup, the parameters for the measurement channel are stored upon exiting and restored upon re-entering the channel. Thus, you can switch between applications quickly and easily.

When you activate a measurement channel for the I/Q Analyzer application, data acquisition from the input signal is started automatically with the default configuration. It can be configured in the I/Q Analyzer "Overview" dialog box, which is displayed when you select the "Overview" softkey from any menu.

The main configuration settings and dialog boxes are also available via the "I/Q Analyzer" menu which is displayed when you press the MEAS CONFIG key.

The remote commands required to perform these tasks are described in chapter 10, "Remote Commands to Perform Measurements with I/Q Data", on page 147.

Importing and Exporting I/Q Data

The I/Q data to be evaluated in the I/Q Analyzer application can not only be captured by the I/Q Analyzer itself, it can also be imported to the R&S FSW, provided it has the correct format. Furthermore, the captured I/Q data from the I/Q Analyzer can be exported for further analysis in external applications.

For details see chapter 5.5, "I/Q Data Import and Export", on page 54.

- Default Settings for I/Q Analyzer measurements....57
- Configuration Overview....58
- Import/Export Functions....60
- Data Input and Output Settings....61
- Amplitude....93
- Frequency Settings....101
- Trigger Settings....103
- Data Acquisition and Bandwidth Settings....110
- Display Configuration....116
- Adjusting Settings Automatically....116
- Configuring an I/Q Analyzer as an MSRA Application....119

6.1 Default Settings for I/Q Analyzer measurements

When you switch an I/Q Analyzer measurement channel the first time, a set of parameters is passed on from the currently active application:

- center frequency and frequency offset
- reference level and reference level offset
- attenuation
- signal source
- input coupling
- YIG filter state

After initial setup, the parameters for the measurement channel are stored upon exiting and restored upon re-entering the channel. Thus, you can switch between applications quickly and easily.

Apart from these settings, the following default settings are activated directly after the R&S FSW has been set to the I/Q Analyzer application for the first time, or after a "Preset Channel" on page 60:

Table 6-1: Default settings for the I/Q Analyzer application

Parameter	Value
Application	I/Q Analyzer (Master)
Sequencer mode	Continuous
Sweep mode	Continuous
Reference level	0 dBm
Center frequency	13.25 GHz
Attenuation	10 dB
Acquisition time	31.281µs
Record length	1001 samples
Sample rate	32.0 MHz
RBW	36.79375 kHz
Trigger settings	FREE RUN
Evaluation	Window 1: Spectrum

6.2 Configuration Overview

Throughout the measurement channel configuration, an overview of the most important currently defined settings is provided in the "Overview". The "Overview" is displayed when you select the "Overview" icon, which is available at the bottom of all softkey menus.

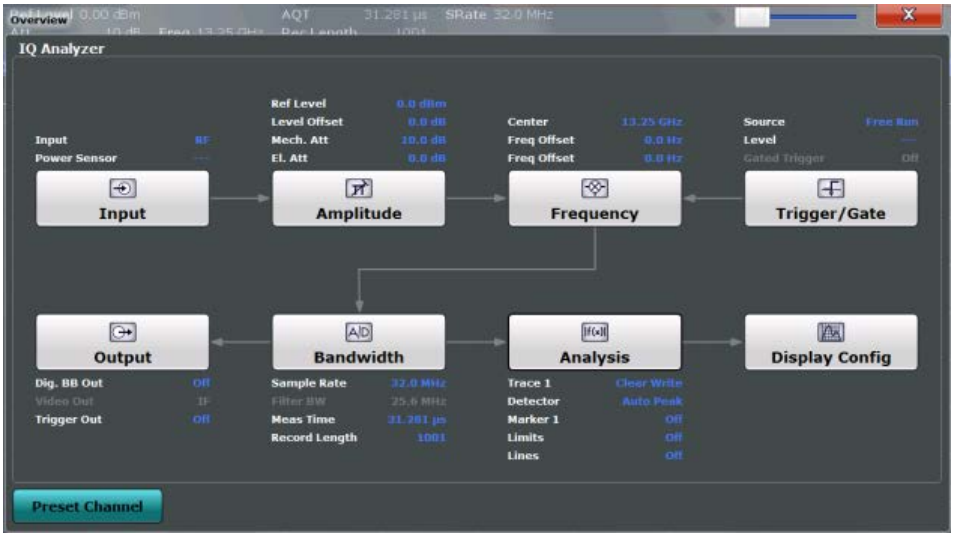

Fig. 6-1: Configuration Overview for I/Q Analyzer Master

In addition to the main measurement settings, the "Overview" provides quick access to the main settings dialog boxes. The individual configuration steps are displayed in the order of the data flow. Thus, you can easily configure an entire measurement channel from input over processing to output and analysis by stepping through the dialog boxes as indicated in the "Overview".

The Overview varies depending on the application; for detailed descriptions see the corresponding application User Manual.

The "Overview" for the I/Q Analyzer Master provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

1. Input settings
   See chapter 6.4, "Data Input and Output Settings", on page 61
2. Amplitude settings
   See chapter 6.5, "Amplitude", on page 93
3. Frequency settings
   See chapter 6.6, "Frequency Settings", on page 101
4. Optionally, Trigger/Gate settings
   See chapter 6.7, "Trigger Settings", on page 103
5. Bandwidth settings
   See chapter 6.8, "Data Acquisition and Bandwidth Settings", on page 110
6. Optionally, output settings
   See chapter 6.4.2, "Output Settings", on page 88
7. Analysis settings and functions
   See chapter 7, "Analysis", on page 121

8. Display configuration
   See chapter 6.9, "Display Configuration", on page 116

To configure settings

► Select any button in the "Overview" to open the corresponding dialog box.
Select a setting in the channel bar (at the top of the measurement channel tab) to change a specific setting.

For step-by-step instructions on configuring I/Q Analyzer measurements, see chapter 8.1, "How to Perform Measurements in the I/Q Analyzer Application", on page 137.

Preset Channel
Select the "Preset Channel" button in the lower lefthand corner of the "Overview" to restore all measurement settings **in the current channel** to their default values.

Note that the PRESET key on the front panel restores all measurements **in all measurement channels** on the R&S FSW to their default values!

For details see chapter 6.1, "Default Settings for I/Q Analyzer measurements", on page 57.

Remote command:
`SYSTem:PRESet:CHANnel[:EXECute]` on page 157

Specifics for
The measurement channel may contain several windows for different results. Thus, the settings indicated in the "Overview" and configured in the dialog boxes vary depending on the selected window.

Select an active window from the "Specifics for" selection list that is displayed in the "Overview" and in all window-specific configuration dialog boxes.

The "Overview" and dialog boxes are updated to indicate the settings for the selected window.

6.3 Import/Export Functions

The following import and export functions are available via softkeys in the "Save/Recall" menu which is displayed when you select the "Save" or "Open" icon in the toolbar.

Some functions for particular data types are (also) available via softkeys or dialog boxes in the corresponding menus, e.g. trace data or marker peak lists.

For a description of the other functions in the "Save/Recall" menu see the R&S FSW User Manual.

Export....61
└ IQ Export....61
Import....61
└ IQ Import....61

Export
Opens a submenu to configure data export.

IQ Export ← Export
Opens a file selection dialog box to select an export file to which the IQ data will be stored. This function is only available in single sweep mode, and only in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

For details see chapter 5.5, "I/Q Data Import and Export", on page 54.

Remote command:
`MMEMory:STORe:IQ:STATe` on page 280
`MMEMory:STORe:IQ:COMMent` on page 280

Import
Provides functions to import data.

IQ Import ← Import
Opens a file selection dialog box to select an import file that contains IQ data. This function is only available in single sweep mode and only in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

Note that the I/Q data must have a specific format as described in chapter A.4, "I/Q Data File Format (iq-tar)", on page 299.

I/Q import is not available in MSRA mode.

For details see chapter 5.5, "I/Q Data Import and Export", on page 54.

Remote command:
`MMEMory:LOAD:IQ:STATe` on page 280

6.4 Data Input and Output Settings

The R&S FSW can analyze signals from different input sources and provide various types of output (such as noise or trigger signals).

For background information on providing input and output or working with power sensors, see the R&S FSW User Manual.

► To display this dialog box, do one of the following:

- Select the "Input" button in the "Overview".
- Select the INPUT/OUTPUT key.

- Input Source Settings.....62
- Output Settings.....88
- Digital I/Q Output Settings.....91

6.4.1 Input Source Settings

The input source determines which data the R&S FSW will analyze.

Input settings can be configured via the INPUT/OUTPUT key, in the "Input" dialog box.

Some settings are also available in the "Amplitude" tab of the "Amplitude" dialog box.

External mixers are not supported in MSRA mode.

- Radio Frequency Input....62
- Settings for Input from I/Q Data Files....64
- External Mixer Settings....65
- Digital I/Q Input Settings....75
- Analog Baseband Input Settings....78
- Probe Settings....80
- External Generator Control Settings....81

6.4.1.1 Radio Frequency Input

The default input source for the R&S FSW is "Radio Frequency", i.e. the signal at the RF INPUT connector on the front panel of the R&S FSW. If no additional options are installed, this is the only available input source.

Radio Frequency State....62
Input Coupling....62
Impedance....63
High-Pass Filter 1...3 GHz....63
YIG-Preselector....63
Input Connector....64

Radio Frequency State
Activates input from the RF INPUT connector.

Remote command:
`INPut:SELect` on page 161

Input Coupling
The RF input of the R&S FSW can be coupled by alternating current (AC) or direct current (DC).

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17) or from the Analog Baseband Interface (R&S FSW-B71).

AC coupling blocks any DC voltage from the input signal. This is the default setting to prevent damage to the instrument. Very low frequencies in the input signal may be distorted.

However, some specifications require DC coupling. In this case, you must protect the instrument from damaging DC input voltages manually. For details, refer to the data sheet.

Remote command:
`INPut:COUPling` on page 159

Impedance
The reference impedance for the measured levels of the R&S FSW can be set to 50 Ω or 75 Ω.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75Ω/50Ω).

This value also affects the unit conversion (see "Reference Level" on page 94).

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17) or from the Analog Baseband Interface (R&S FSW-B71). For analog baseband input, an impedance of 50 Ω is always used.

Remote command:
`INPut:IMPedance` on page 160

High-Pass Filter 1...3 GHz
Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the R&S FSW in order to measure the harmonics for a DUT, for example.

This function requires option R&S FSW-B13.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG filter.)

Remote command:
`INPut:FILTer:HPASs[:STATe]` on page 160

YIG-Preselector
Activates or deactivates the YIG-preselector.

An internal YIG-preselector at the input of the R&S FSW ensures that image frequencies are rejected. However, this is only possible for a restricted bandwidth. In order to use the maximum bandwidth for signal analysis you can deactivate the YIG-preselector at the input of the R&S FSW, which may lead to image-frequency display.

Note that the YIG-preselector is active only on frequencies greater than 8 GHz. Therefore, switching the YIG-preselector on or off has no effect if the frequency is below that value.

Note:

For the following measurements, the YIG-Preselector is off by default (if available).

- I/Q Analyzer (and thus in all applications in MSRA operating mode)
- Multi-Carrier Group Delay
- GSM
- VSA

Remote command:

`INPut:FILTer:YIG[:STATe]` on page 160

Input Connector

Determines whether the RF input data is taken from the RF INPUT connector (default) or the optional BASEBAND INPUT I connector. This setting is only available if the Analog Baseband Interface (R&S FSW-B71) is installed and active for input.

For more information on the Analog Baseband Interface (R&S FSW-B71) see the R&S FSW I/Q Analyzer and I/Q Input User Manual.

Remote command:

`INPut:CONNector` on page 159

6.4.1.2 Settings for Input from I/Q Data Files

Settings for input from I/Q data files is configured in the "Input Source" > "IQ file" tab of the "Input/Frontend" dialog box, which is available when you do of the following:

Currently, this input source is **only available in the R&S FSW Pulse application**.

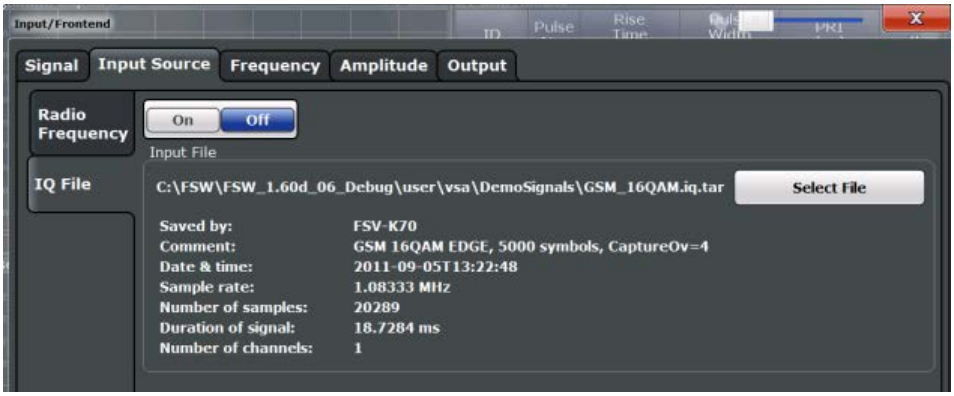

- Press the INPUT/OUTPUT key, then select the "Input Source Config" softkey.
- Press the MEAS CONFIG key, then select the "Input/Frontend" softkey.
- From the "Overview", select "Input/Frontend".

For details see chapter 5.4.5, "Basics on Input from I/Q Data Files", on page 51.

IQ Input File State.....65
Select I/Q Data File.....65

IQ Input File State
Activates input from the selected I/Q input file.

If enabled, the R&S FSW I/Q Analyzer application performs measurements on the data from this file. Thus, most measurement settings related to data acquisition (attenuation, center frequency, measurement bandwidth, sample rate) cannot be changed. The measurement time can only be decreased, in order to perform measurements on an extract of the available data only.

Note: Even when the file input is deactivated, the input file remains selected and can be activated again quickly by changing the state.

Remote command:
`INPut:SELect` on page 161

Select I/Q Data File
Opens a file selection dialog box to select an input file that contains I/Q data.

Note that the I/Q data must have a specific format (`.iq.tar`) as described in chapter A.4, "I/Q Data File Format (iq-tar)", on page 299.

The default storage location for I/Q data files is `C:\R_S\Instr\user\`.

Remote command:
`INPut:FILE:PATH` on page 162

6.4.1.3 External Mixer Settings

The external mixer is configured in the "External Mixer" tab of the "Input" dialog box which is available when you do one of the following, if the R&S FSW-B21 option is installed:

- Press the INPUT/OUTPUT key, then select the "External Mixer Config" softkey.
- From the "Overview", select "Input", then switch to the "External Mixer" tab under "Input Source".

Note that external mixers are not supported in MSRA mode.

For details on using external mixers see the R&S FSW User Manual.

- Mixer Settings.....65
- Basic Settings.....69
- Managing Conversion Loss Tables.....71
- Creating and Editing Conversion Loss Tables.....72

Mixer Settings

In this tab you configure the band and specific mixer settings.

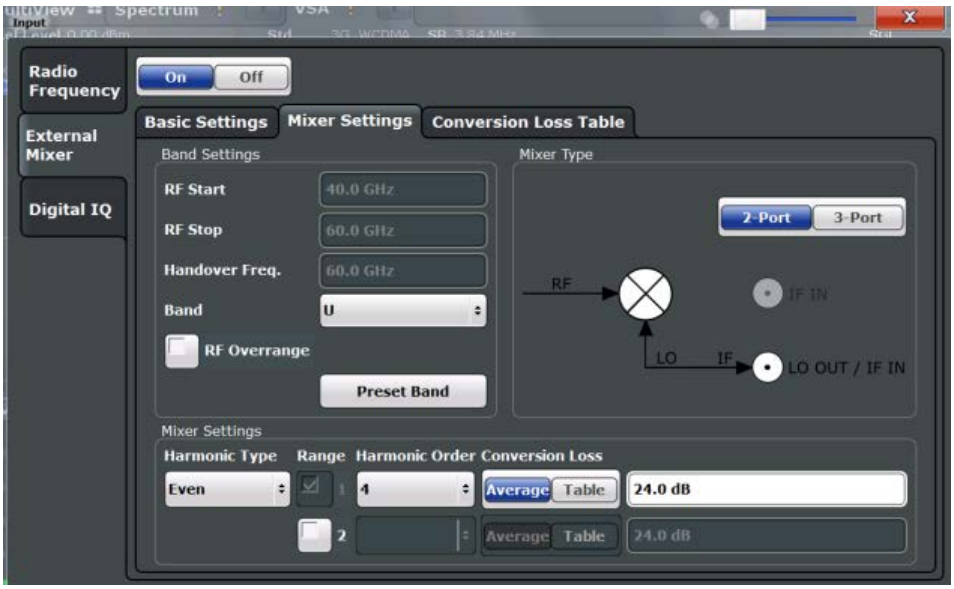

External Mixer State....66
RF Start / RF Stop....66
Handover Freq....67
Band....67
RF Overrange....67
Preset Band....67
Mixer Type....67
Mixer Settings (Harmonics Configuration)....67
└ Harmonic Type....68
└ Range 1/2....68
└ Harmonic Order....68
└ Conversion loss....68

External Mixer State
Activates or deactivates the external mixer for input. If activated, "ExtMix" is indicated in the channel bar of the application, together with the used band (see "Band" on page 67).

Remote command:
`[SENSe:]MIXer[:STATe]` on page 170

RF Start / RF Stop
Displays the start and stop frequency of the selected band (read-only).

The frequency range for the user-defined band is defined via the harmonics configuration (see "Range 1/2" on page 68).

For details on available frequency ranges see table 10-2.

Remote command:
`[SENSe:]MIXer:FREQuency:STARt?` on page 173
`[SENSe:]MIXer:FREQuency:STOP?` on page 173

Handover Freq.
Defines the frequency at which the mixer switches from one range to the next (if two different ranges are selected). The handover frequency can be selected freely within the overlapping frequency range.

Remote command:
`[SENSe:]MIXer:FREQuency:HANDover` on page 173

Band
Defines the waveguide band or user-defined band to be used by the mixer.

The start and stop frequencies of the selected band are displayed in the "RF Start" and "RF Stop" fields.

For a definition of the frequency range for the pre-defined bands, see table 10-2).

The mixer settings for the user-defined band can be selected freely. The frequency range for the user-defined band is defined via the harmonics configuration (see "Range 1/2" on page 68).

Remote command:
`[SENSe:]MIXer:HARMonic:BAND[:VALue]` on page 174

RF Overrange
If enabled, the frequency range is not restricted by the band limits ("RF Start" and "RF Stop"). In this case, the full LO range of the selected harmonics is used.

Remote command:
`[SENSe:]MIXer:RFOVerrange[:STATe]` on page 177

Preset Band
Restores the presettings for the selected band.

Note: changes to the band and mixer settings are maintained even after using the PRESET function. This function allows you to restore the original band settings.

Remote command:
`[SENSe:]MIXer:HARMonic:BAND:PRESet` on page 173

Mixer Type
The R&S FSW option B21 supports the following external mixer types:

"2 Port" LO and IF data use the same port

"3 Port" LO and IF data use separate ports

Remote command:
`[SENSe:]MIXer:PORTs` on page 177

Mixer Settings (Harmonics Configuration)
The harmonics configuration determines the frequency range for user-defined bands (see "Band" on page 67).

Harmonic Type ← Mixer Settings (Harmonics Configuration)
Defines if only even, only odd, or even and odd harmonics can be used for conversion. Depending on this selection, the order of harmonic to be used for conversion changes (see "Harmonic Order" on page 68). Which harmonics are supported depends on the mixer type.

Remote command:
`[SENSe:]MIXer:HARMonic:TYPE` on page 175

Range 1/2 ← Mixer Settings (Harmonics Configuration)
Enables the use of a second harmonic to cover the band's frequency range.

For each range you can define which harmonic to use and how the Conversion loss is handled.

Remote command:
`[SENSe:]MIXer:HARMonic:HIGH:STATe` on page 174

Harmonic Order ← Mixer Settings (Harmonics Configuration)
Defines which of the available harmonic orders of the LO is used to cover the frequency range.

By default, the lowest order of the specified harmonic type is selected that allows conversion of input signals in the whole band. If due to the LO frequency the conversion is not possible using one harmonic, the band is split.

For the band "USER", the order of harmonic is defined by the user. The order of harmonic can be between 2 and 61, the lowest usable frequency being 26.5 GHz.

Remote command:
`[SENSe:]MIXer:HARMonic[:LOW]` on page 175
`[SENSe:]MIXer:HARMonic:HIGH[:VALue]` on page 175

Conversion loss ← Mixer Settings (Harmonics Configuration)
Defines how the conversion loss is handled. The following methods are available:

"Average" Defines the average conversion loss for the entire range in dB.

"Table" Defines the conversion loss via the table selected from the list. Predefined conversion loss tables are often provided with the external mixer and can be imported to the R&S FSW. Alternatively, you can define your own conversion loss tables. Imported tables are checked for compatibility with the current settings before being assigned.
Conversion loss tables are configured and managed in the Managing Conversion Loss Tables tab.
For details on conversion loss tables, see the External Mixer description in the R&S FSW User Manual.
For details on importing tables, see "Import Table" on page 72.

Remote command:
Average for range 1:
`[SENSe:]MIXer:LOSS[:LOW]` on page 176
Table for range 1:
`[SENSe:]MIXer:LOSS:TABLe[:LOW]` on page 176
Average for range 2:
`[SENSe:]MIXer:LOSS:HIGH` on page 175
Table for range 2:
`[SENSe:]MIXer:LOSS:TABLe:HIGH` on page 176

Basic Settings

The basic settings concern general use of an external mixer. They are only available if the External Mixer State is "On".

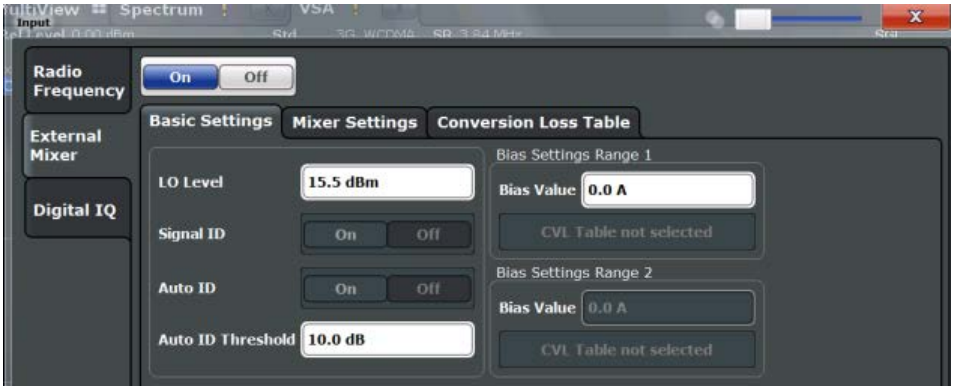

LO Level....69
Signal ID....70
Auto ID....70
Auto ID Threshold....70
Bias Settings....70
└ Write to <CVL table name>....71

LO Level

Defines the LO level of the external mixer's LO port. Possible values are from 13.0 dBm to 17.0 dBm in 0.1 dB steps. Default value is 15.5 dB.

Remote command:
`[SENSe:]MIXer:LOPower` on page 171

Signal ID
Activates or deactivates visual signal identification. Two sweeps are performed alternately. Trace 1 shows the trace measured on the upper side band (USB) of the LO (the test sweep), trace 2 shows the trace measured on the lower side band (LSB), i.e. the reference sweep.

Note that automatic signal identification is only available for measurements that perform frequency sweeps (not in vector signal analysis or the I/Q Analyzer, for instance).

Mathematical functions with traces and trace copy cannot be used with the Signal ID function.

Remote command:
`[SENSe:]MIXer:SIGNal` on page 171

Auto ID
Activates or deactivates automatic signal identification.

Auto ID basically functions like Signal ID. However, the test and reference sweeps are converted into a single trace by a comparison of maximum peak values of each sweep point. The result of this comparison is displayed in trace 3 if "Signal ID" is active at the same time. If "Signal ID" is not active, the result can be displayed in any of the traces 1 to 3. Unwanted mixer products are suppressed in this calculated trace.

Note that automatic signal identification is only available for measurements that perform frequency sweeps (not in vector signal analysis or the I/Q Analyzer, for instance).

Remote command:
`[SENSe:]MIXer:SIGNal` on page 171

Auto ID Threshold
Defines the maximum permissible level difference between test sweep and reference sweep to be corrected during automatic comparison ("Auto ID" on page 70 function). The input range is between 0.1 dB and 100 dB. Values of about 10 dB (i.e. default setting) generally yield satisfactory results.

Remote command:
`[SENSe:]MIXer:THReshold` on page 172

Bias Settings
Define the bias current for each range, which is required to set the mixer to its optimum operating point. It corresponds to the short-circuit current. The bias current can range from -10 mA to 10 mA. The actual bias current is lower because of the forward voltage of the mixer diode(s).

The trace is adapted to the settings immediately so you can check the results. To store the bias setting in the currently selected conversion loss table, select the Write to <CVL table name> button.

Remote command:
`[SENSe:]MIXer:BIAS[:LOW]` on page 171
`[SENSe:]MIXer:BIAS:HIGH` on page 171

Write to <CVL table name> ← Bias Settings
Stores the bias setting in the currently selected "Conversion loss table" for the range (see "Managing Conversion Loss Tables" on page 71). If no conversion loss table is selected yet, this function is not available ("CVL Table not selected").

Remote command:
`[SENSe:]CORRection:CVL:BIAS` on page 178

Managing Conversion Loss Tables

In this tab you configure and manage conversion loss tables. Conversion loss tables consist of value pairs that describe the correction values for conversion loss at certain frequencies. The correction values for frequencies between the reference points are obtained via interpolation.

The currently selected table for each range is displayed at the top of the dialog box. All conversion loss tables found in the instrument's `C:\r_s\instr\user\cvl\` directory are listed in the "Modify Tables" list.

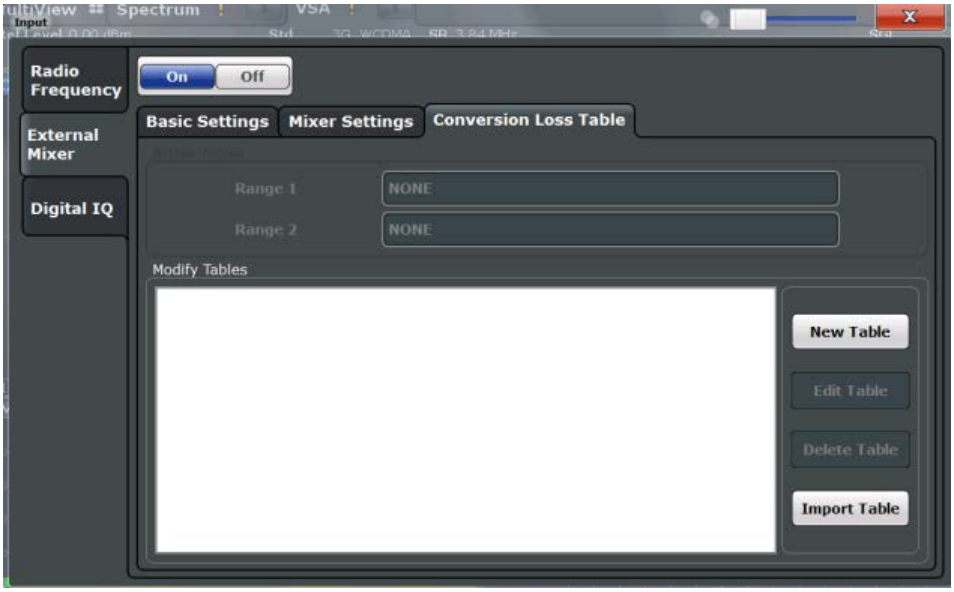

New Table....71
Edit Table....72
Delete Table....72
Import Table....72

New Table
Opens the "Edit Conversion loss table" dialog box to configure a new conversion loss table. For details on table configuration see "Creating and Editing Conversion Loss Tables" on page 72.

Remote command:
`[SENSe:]CORRection:CVL:SELect` on page 181

Edit Table
Opens the "Edit Conversion loss table" dialog box to edit the selected conversion loss table. For details on table configuration see "Creating and Editing Conversion Loss Tables" on page 72.

Remote command:
`[SENSe:]CORRection:CVL:SELect` on page 181

Delete Table
Deletes the currently selected conversion loss table after you confirm the action.

Remote command:
`[SENSe:]CORRection:CVL:CLEAr` on page 179

Import Table
Imports a stored conversion loss table from any directory and copies it to the instrument's `C:\r_s\instr\user\cvl\` directory. It can then be assigned for use for a specific frequency range (see "Conversion loss" on page 68).

Creating and Editing Conversion Loss Tables

Conversion loss tables can be defined and edited in the "Edit conversion loss table" dialog box which is displayed when you select the "New Table" button in the "External Mixer > Conversion loss table" settings.

A preview pane displays the current configuration of the conversion loss function as described by the position/value entries.

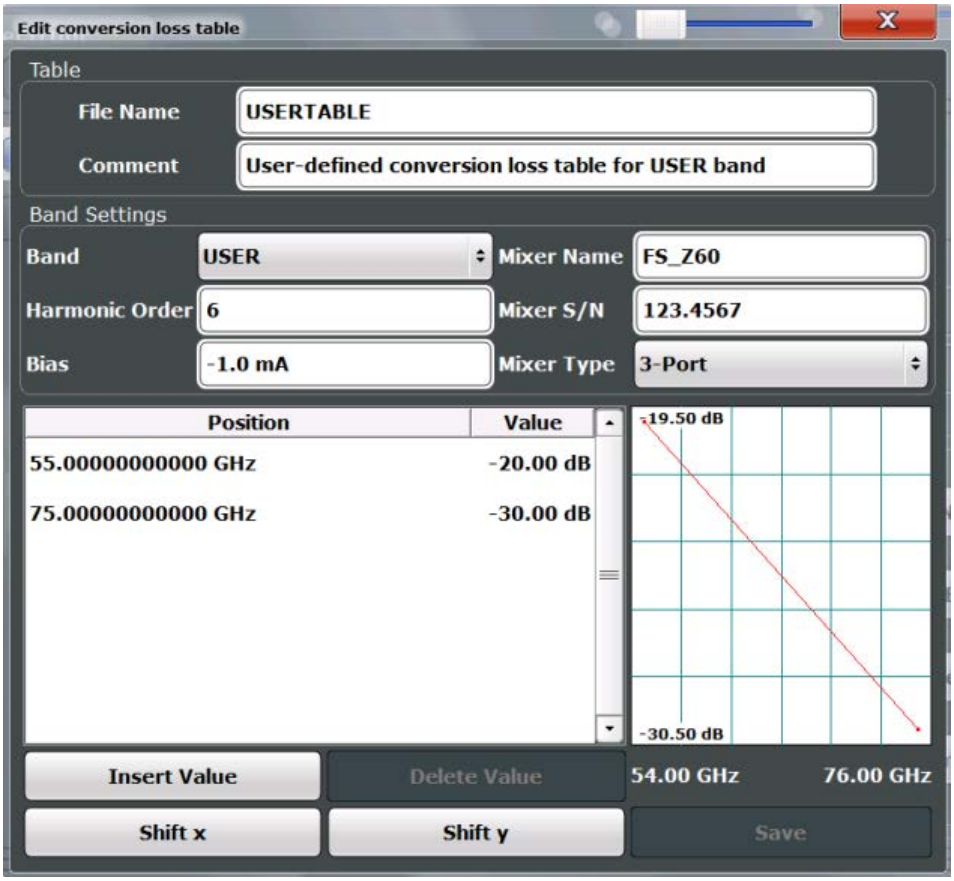

File Name....73
Comment....74
Band....74
Harmonic Order....74
Bias....74
Mixer Name....74
Mixer S/N....74
Mixer Type....75
Position/Value....75
Insert Value....75
Delete Value....75
Shift x....75
Shift y....75
Save....75

File Name

Defines the name under which the table is stored in the `C:\r_s\instr\user\cvl\` directory on the instrument. The name of the table is identical with the name of the file (without extension) in which the table is stored. This setting is mandatory. The `.ACL` extension is automatically appended during storage.

Remote command:

`[SENSe:]CORRection:CVL:SELect` on page 181

Comment
An optional comment that describes the conversion loss table. The comment can be freely defined by the user.

Remote command:
[SENSe:]CORRection:CVL:COMMent on page 179

Band
The waveguide or user-defined band for which the table is to be applied. This setting is checked against the current mixer setting before the table can be assigned to the range.

For a definition of the frequency range for the pre-defined bands, see table 10-2).

Remote command:
[SENSe:]CORRection:CVL:BAND on page 177

Harmonic Order
The harmonic order of the range for which the table is to be applied. This setting is checked against the current mixer setting before the table can be assigned to the range.

Remote command:
[SENSe:]CORRection:CVL:HARMonic on page 180

Bias
The bias current which is required to set the mixer to its optimum operating point. It corresponds to the short-circuit current. The bias current can range from -10 mA to 10 mA. The actual bias current is lower because of the forward voltage of the mixer diode(s).

Tip: You can also define the bias interactively while a preview of the trace with the changed setting is displayed, see "Bias Settings" on page 70.

Remote command:
[SENSe:]CORRection:CVL:BIAS on page 178

Mixer Name
Specifies the name of the external mixer for which the table is to be applied. This setting is checked against the current mixer setting before the table can be assigned to the range.

Remote command:
[SENSe:]CORRection:CVL:MIXer on page 180

Mixer S/N
Specifies the serial number of the external mixer for which the table is to be applied.

This setting is checked against the current mixer setting before the table can be assigned to the range.

Remote command:
[SENSe:]CORRection:CVL:SNUMber on page 181

Mixer Type
Specifies whether the external mixer for which the table is to be applied is a two-port or three-port type. This setting is checked against the current mixer setting before the table can be assigned to the range.

Remote command:
`[SENSe:]CORRection:CVL:PORTs` on page 180

Position/Value
Each position/value pair defines the correction value for conversion loss for a specific frequency. The reference values must be entered in order of increasing frequencies. A maximum of 50 reference values can be entered. To enter a new value pair, tap the "Position/Value" table, or select the Insert Value button.

Correction values for frequencies between the reference values are obtained by interpolation. Linear interpolation is performed if the table contains only two values. If it contains more than two reference values, spline interpolation is carried out. Outside the frequency range covered by the table the conversion loss is assumed to be the same as that for the first and last reference value.

The current configuration of the conversion loss function as described by the position/value entries is displayed in the preview pane to the right of the table.

Remote command:
`[SENSe:]CORRection:CVL:DATA` on page 179

Insert Value
Inserts a new position/value entry in the table.

If the table is empty, a new entry at 0 Hz is inserted.

If entries already exist, a new entry is inserted above the selected entry. The position of the new entry is selected such that it divides the span to the previous entry in half.

Delete Value
Deletes the currently selected position/value entry.

Shift x
Shifts all positions in the table by a specific value. The value can be entered in the edit dialog box. The conversion loss function in the preview pane is shifted along the x-axis.

Shift y
Shifts all conversion loss values by a specific value. The value can be entered in the edit dialog box. The conversion loss function in the preview pane is shifted along the y-axis.

Save
The conversion loss table is stored under the specified name in the `C:\r_s\instr\user\cvl\` directory of the instrument.

6.4.1.4 Digital I/Q Input Settings

The following settings and functions are available to provide input via the Digital Baseband Interface (R&S FSW-B17) in the applications that support it.

They can be configured via the INPUT/OUTPUT key, in the "Input" dialog box.

For more information see the R&S FSW I/Q Analyzer and I/Q Input User Manual.

Digital I/Q Input State....76
Input Sample Rate....76
Full Scale Level....76
Adjust Reference Level to Full Scale Level....77
Connected Instrument....77
DigIConf....77

Digital I/Q Input State
Enables or disable the use of the "Digital IQ" input source for measurements. "Digital IQ" is only available if the Digital Baseband Interface (R&S FSW-B17) is installed.

Remote command:
`INPut:SELect` on page 161

Input Sample Rate
Defines the sample rate of the digital I/Q signal source. This sample rate must correspond with the sample rate provided by the connected device, e.g. a generator.

If "Auto" is selected, the sample rate is adjusted automatically by the connected device.

The allowed range is from 100 Hz to 10 GHz.

Remote command:
`INPut:DIQ:SRATe` on page 165
`INPut:DIQ:SRATe:AUTO` on page 166

Full Scale Level
The "Full Scale Level" defines the level and unit that should correspond to an I/Q sample with the magnitude "1".

If "Auto" is selected, the level is automatically set to the value provided by the connected device.

Remote command:
INPut:DIQ:RANGe[:UPPer] on page 165
INPut:DIQ:RANGe[:UPPer]:UNIT on page 165
INPut:DIQ:RANGe[:UPPer]:AUTO on page 164

Adjust Reference Level to Full Scale Level
If enabled, the reference level is adjusted to the full scale level automatically if any change occurs.

Remote command:
INPut:DIQ:RANGe:COUPling on page 165

Connected Instrument
Displays the status of the Digital Baseband Interface connection.

If an instrument is connected, the following information is displayed:

- Name and serial number of the instrument connected to the Digital Baseband Interface
- Used port
- Sample rate of the data currently being transferred via the Digital Baseband Interface
- Level and unit that corresponds to an I/Q sample with the magnitude "1" (Full Scale Level), if provided by connected instrument

Remote command:
INPut:DIQ:CDEVice on page 163

DigIConf
Starts the optional R&S DigIConf application. This softkey is available in the In-/Output menu, but only if the optional software is installed.

Note that R&S DigIConf requires a USB connection (not LAN!) from the R&S FSW to the R&S EX-IQ-BOX in addition to the Digital Baseband Interface (R&S FSW-B17) connection. R&S DigIConf version 2.20.360.86 Build 170 or higher is required.

To return to the R&S FSW application, press any key on the front panel. The R&S FSW application is displayed with the "Input/Output" menu, regardless of which key was pressed.

For details on the R&S DigIConf application, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Note: If you close the R&S DigIConf window using the "Close" icon, the window is minimized, not closed.
If you select the "File > Exit" menu item in the R&S DigIConf window, the application is closed. Note that in this case the settings are lost and the EX-IQ-BOX functionality is no longer available until you restart the application using the "DigIConf" softkey in the R&S FSW once again.

6.4.1.5 Analog Baseband Input Settings

The following settings and functions are available to provide input via the Analog Baseband Interface (R&S FSW-B71) in the applications that support it.

They can be configured via the INPUT/OUTPUT key, in the "Input" dialog box.

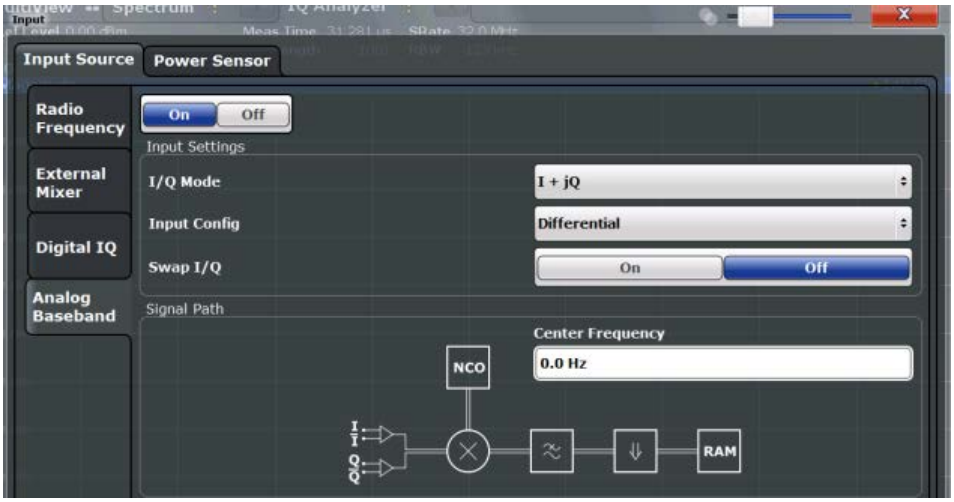

For more information on the Analog Baseband Interface (R&S FSW-B71) see the R&S FSW I/Q Analyzer and I/Q Input User Manual.

Analog Baseband Input State....78
I/Q Mode....78
Input configuration....79
Swap I/Q....79
Center Frequency....79

Analog Baseband Input State
Enables or disable the use of the "Analog Baseband" input source for measurements. "Analog Baseband" is only available if the Analog Baseband Interface (R&S FSW-B71) is installed.

Remote command:
`INPut:SELect` on page 161

I/Q Mode
Defines the format of the input signal.

For more information see chapter 5.3.3, "I/Q Processing Modes", on page 35.

"I + jQ" The input signal is filtered and resampled to the sample rate of the application.
Two inputs are required for a complex signal, one for the in-phase component, and one for the quadrature component.

"I Only / Low IF I"
The input signal at the BASEBAND INPUT I connector is filtered and resampled to the sample rate of the application.
If the center frequency is set to 0 Hz, the real baseband signal is displayed without down-conversion (**Real Baseband I**).
If a center frequency greater than 0 Hz is set, the input signal is down-converted with the center frequency (**Low IF I**).

"Q Only / Low IF Q"
The input signal at the BASEBAND INPUT Q connector is filtered and resampled to the sample rate of the application.
If the center frequency is set to 0 Hz, the real baseband signal is displayed without down-conversion (**Real Baseband Q**).
If a center frequency greater than 0 Hz is set, the input signal is down-converted with the center frequency (**Low IF Q**).

Remote command:
`INPut:IQ:TYPE` on page 169

Input configuration
Defines whether the input is provided as a differential signal via all 4 Analog Baseband connectors or as a plain I/Q signal via 2 simple-ended lines.

Note: Both single-ended and differential probes are supported as input; however, since only one connector is occupied by a probe, the "Single-ended" setting must be used for all probes.

"Differential" I, Q and inverse I,Q data

"Single Ended" I, Q data only

Remote command:
`INPut:IQ:BALanced[:STATe]` on page 168

Swap I/Q
Activates or deactivates the inverted I/Q modulation. If the I and Q parts of the signal from the DUT are interchanged, the R&S FSW can do the same to compensate for it.

On	I and Q signals are interchanged Inverted sideband, Q+j*I
Off	I and Q signals are not interchanged Normal sideband, I+j*Q

Remote command:
`[SENSe:]SWAPiq` on page 169

Center Frequency
Defines the center frequency for analog baseband input.

For real-type baseband input (I or Q only), the center frequency is always 0 Hz.

Note: If the analysis bandwidth to either side of the defined center frequency exceeds the minimum frequency (0 Hz) or the maximum frequency (40 MHz/80 MHz), an error is displayed. In this case, adjust the center frequency or the analysis bandwidth.

For details on frequency ranges and the analysis bandwidth see chapter 5.3, "Processing Data From the Analog Baseband Interface", on page 32.

Remote command:
`[SENSe:]FREQuency:CENTer` on page 214

6.4.1.6 Probe Settings

Probes are configured in a separate tab on the "Input" dialog box which is displayed when you select the INPUT/OUTPUT key and then "Input Source Config".

For each possible probe connector (Baseband Input I, Baseband Input Q), the detected type of probe, if any, is displayed. The following information is provided for each connected probe:

- Probe name
- Serial number
- R&S part number
- Type of probe ("Differential", "Single Ended")

For more information on using probes with an R&S FSW, see the R&S FSW User Manual.

For general information on the R&S®RTO probes, see the device manuals.

Microbutton Action.....80

Microbutton Action
Active R&S probes (except for RT-ZS10E) have a configurable microbutton on the probe head. By pressing this button, you can perform an action on the instrument directly from the probe.

Select the action that you want to start from the probe:

"Run single" Starts one data acquisition.

"No action" Prevents unwanted actions due to unintended usage of the microbutton.

Remote command:
`[SENSe:]PROBe<p>:SETup:MODE` on page 184

6.4.1.7 External Generator Control Settings

The "External Generator" settings are available in the "Input" dialog box if the R&S FSW External Generator Control option (R&S FSW-B10) is installed. For each measurement channel one external generator can be configured. To switch between different configurations define multiple measurement channels.

To display this dialog box, press the INPUT/OUPUT key and then select "External Generator Config".

For more information on external generator control see chapter 5.4.4, "Basics on External Generator Control", on page 40.

- Interface Configuration Settings....81
- Measurement Settings....83
- Source Calibration Functions....85

Interface Configuration Settings

The interface settings for the connection to the external generator are defined in the "Interface Configuration" subtab of the "External Generator" tab.

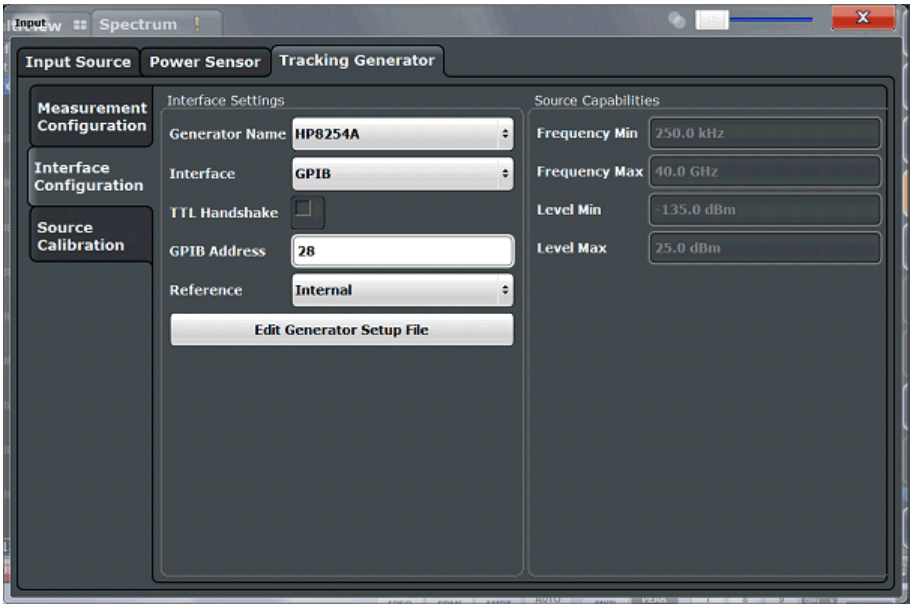

For more information on configuring interfaces see the "Remote Control Interfaces and Protocols" section in the R&S FSW User Manual.

Generator Type....82
Interface....82
TTL Handshake....82
GPIB Address / TCP/IP Address....82
Reference....82
Edit Generator Setup File....83
Frequency Min. / Frequency Max....83
Level Min. / Level Max....83

Generator Type
Selects the generator type and thus defines the generator setup file to use.

See also chapter 5.4.4.2, "Overview of Generators Supported by the R&S FSW-B10 Option", on page 43.

For an overview of supported generators see chapter 5.4.4.2, "Overview of Generators Supported by the R&S FSW-B10 Option", on page 43. For information on generator setup files see chapter 5.4.4.3, "Generator Setup Files", on page 44.

Remote command:
`SYSTem:COMMunicate:RDEVice:GENerator:TYPE` on page 191

Interface
Type of interface connection used. The following interfaces are currently supported:

- GPIB
- TCP/IP (not by all generators)

For details on which signal generators support which interfaces, see the documentation of the corresponding signal generator.

Remote command:
`SYSTem:COMMunicate:RDEVice:GENerator:INTerface` on page 190

TTL Handshake
If available for the specified generator type, this option activates TTL synchronization via handshake for GPIB connections.

Using the TTL interface allows for considerably higher measurement rates than pure GPIB control, because the frequency stepping of the R&S FSW is directly coupled with the frequency stepping of the generator.

For more information on TTL synchronization see "TTL synchronization" on page 49.

For an overview of which generators support TTL synchronization see chapter 5.4.4.2, "Overview of Generators Supported by the R&S FSW-B10 Option", on page 43.

Remote command:
`SYSTem:COMMunicate:RDEVice:GENerator:LINK` on page 190

GPIB Address / TCP/IP Address
For LAN connections: TCP/IP address of the signal generator

For GPIB connections: GPIB address of the signal generator.

Remote command:
`SYSTem:COMMunicate:GPIB:RDEVice:GENerator:ADDRess` on page 190
`SYSTem:COMMunicate:TCPip:RDEVice:GENerator:ADDRess` on page 191

Reference
Selects the internal R&S FSW or an external frequency reference to synchronize the R&S FSW with the generator (default: internal).

Remote command:
`SOURce:EXTernal:ROSCillator[:SOURce]` on page 189

Edit Generator Setup File
Displays the setup file for the currently selected Generator Type in read-only mode in an editor.

Although the existing setup files are displayed in read-only mode in the editor, they can be saved under a different name (using "File > SaveAs").

Be careful, however, to adhere to the required syntax and commands. Errors will only be detected and displayed when you try to use the new generator (see also chapter 5.4.4.8, "Displayed Information and Errors", on page 50).

For details see chapter 5.4.4.3, "Generator Setup Files", on page 44.

Frequency Min. / Frequency Max.
For reference only: Lower and upper frequency limit for the generator.

Level Min. / Level Max.
For reference only: Lower and upper power limit for the generator.

Measurement Settings

The measurement settings for external generator control are configured in the "Measurement Configuration" subtab of the "External Generator" tab.

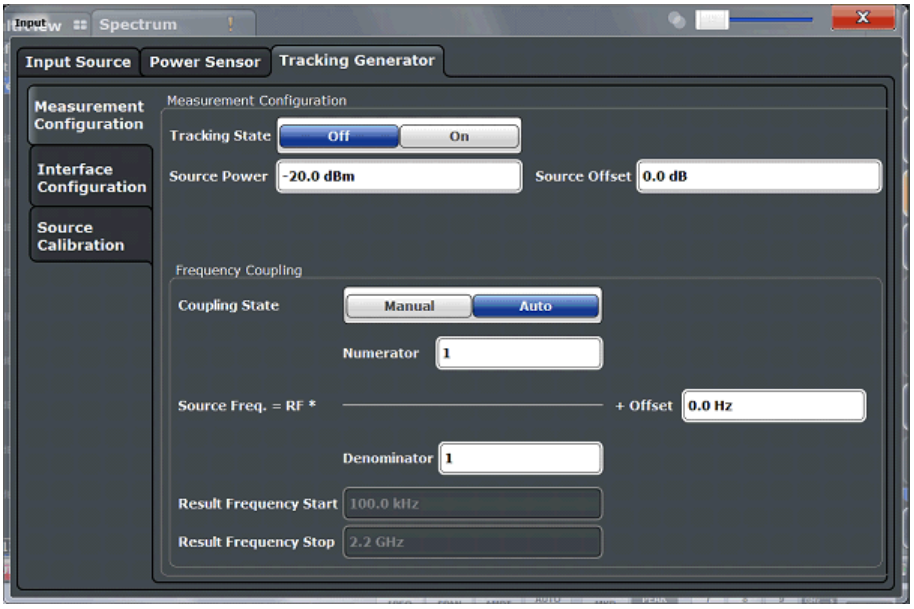

Source State....84
Source Power....84
Source Offset....84
Source Frequency Coupling....84
(Manual) Source Frequency....84
(Automatic) Source Frequency (Numerator/Denominator/Offset)....85
Result Frequency Start....85
Result Frequency Stop....85

Source State
Activates or deactivates control of an external generator.

Remote command:
`SOURce:EXTernal[:STATe]` on page 189

Source Power
The output power of the external generator. The default output power is -20 dBm. The range is specified in the data sheet.

Remote command:
`SOURce:EXTernal:POWer[:LEVel]` on page 188

Source Offset
Constant level offset for the external generator. Values from -200 dB to +200 dB in 1 dB steps are allowed. The default setting is 0 dB. Offsets are indicated by the "LVL" label in the channel bar (see also chapter 5.4.4.8, "Displayed Information and Errors", on page 50).

With this offset, attenuators or amplifiers at the output connector of the external generator can be taken into account for the displayed output power values on screen or during data entry, for example. Positive offsets apply to an amplifier and negative offsets to an attenuator subsequent to the external generator.

Remote command:
`SOURce:POWer[:LEVel][:IMMediate]:OFFSet` on page 189

Source Frequency Coupling
Defines the frequency coupling mode between the R&S FSW and the generator.

For more information on coupling frequencies see chapter 5.4.4.7, "Coupling the Frequencies", on page 47.

"Auto" Default setting: a series of frequencies is defined (one for each sweep point), based on the current frequency at the RF input of the R&S FSW (see "(Automatic) Source Frequency (Numerator/Denominator/Offset)" on page 85); the RF frequency range covers the currently defined span of the R&S FSW (unless limited by the range of the signal generator)

"Manual" The generator uses a single fixed frequency, defined by (Manual) Source Frequency which is displayed when you select "Manual" coupling.

Remote command:
`SOURce:EXTernal:FREQuency:COUPling[:STATe]` on page 187

(Manual) Source Frequency
Defines the fixed frequency to be used by the generator.

Remote command:
`SOURce:EXTernal:FREQuency` on page 186

(Automatic) Source Frequency (Numerator/Denominator/Offset)
With automatic frequency coupling, a series of frequencies is defined (one for each sweep point), based on the current frequency at the RF input of the R&S FSW.

However, the frequency used by the generator may differ from the input from the R&S FSW. The RF frequency may be multiplied by a specified factor, or a frequency offset can be added, or both.

Note: The input for the generator frequency is not validated, i.e. you can enter any values. However, if the allowed frequency ranges of the generator are exceeded, an error message is displayed on the R&S FSW and the values for Result Frequency Start and Result Frequency Stop are corrected to comply with the range limits.

The value range for the offset depends on the selected generator. The default setting is 0 Hz. Offsets <> 0 Hz are indicated by the "FRQ" label in the channel bar. Negative offsets can be used to define reverse sweeps.

For more information on coupling frequencies and reverse sweeps see chapter 5.4.4.7, "Coupling the Frequencies", on page 47. For more information on error messages and the channel bar see chapter 5.4.4.8, "Displayed Information and Errors", on page 50.

Remote command:
`SOURce:EXTernal:FREQuency[:FACTor]:DENominator` on page 187
`SOURce:EXTernal:FREQuency[:FACTor]:NUMerator` on page 188
`SOURce:EXTernal:FREQuency:OFFSet` on page 188

Result Frequency Start
For reference only: The start frequency for the generator, calculated from the configured generator frequency and the start value defined for the R&S FSW.

Result Frequency Stop
For reference only: The stop frequency for the generator, calculated from the configured generator frequency and the stop value defined for the R&S FSW.

Source Calibration Functions

The calibration functions of the external generator are available in the "Source Calibration" subtab of the "External Generator" tab, but *only if external generator control is active* (see "Source State" on page 84).

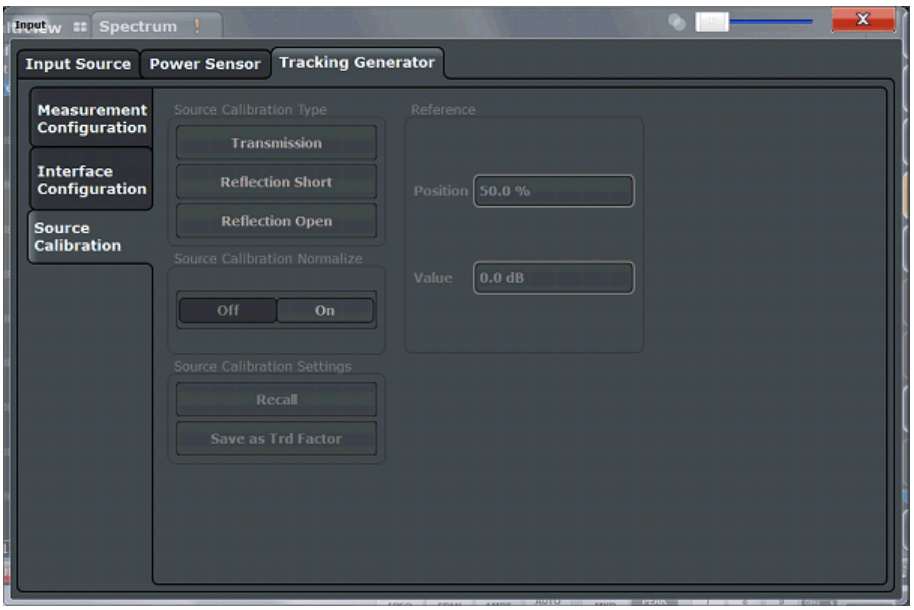

Calibrate Transmission....86
Calibrate Reflection Short....86
Calibrate Reflection Open....87
Source Calibration Normalize....87
Recall....87
Save As Trd Factor....87
Reference Position....87
Reference Value....88

Calibrate Transmission
Starts a transmission type measurement to determine a reference trace. This trace is used to calculate the difference for the normalized values.

For details see chapter 5.4.4.4, "Calibration Mechanism", on page 44.

Remote command:
`[SENSe:]CORRection:METHod` on page 193

Calibrate Reflection Short
Starts a short-circuit reflection type measurement to determine a reference trace for calibration.

If both calibrations (open circuit, short circuit) are carried out, the calibration trace is calculated by averaging the two measurements. The order of the two calibration measurements is irrelevant.

Remote command:
`[SENSe:]CORRection:METHod` on page 193
Selects the reflection method.
`[SENSe:]CORRection:COLLect[:ACQuire]` on page 192
Starts the sweep for short-circuit calibration.

Calibrate Reflection Open
Starts an open-circuit reflection type measurement to determine a reference trace for calibration.

If both reflection-type calibrations (open circuit, short circuit) are carried out, the reference trace is calculated by averaging the two measurements. The order of the two calibration measurements is irrelevant.

Remote command:
`[SENSe:]CORRection:METHod` on page 193
Selects the reflection method.
`[SENSe:]CORRection:COLLect[:ACQuire]` on page 192
Starts the sweep for open-circuit calibration.

Source Calibration Normalize
Switches the normalization of measurement results on or off. This function is only available if the memory contains a reference trace, that is, after a calibration has been performed.

For details on normalization see chapter 5.4.4.5, "Normalization", on page 45.

Remote command:
`[SENSe:]CORRection[:STATe]` on page 194

Recall
Restores the settings that were used during source calibration. This can be useful if instrument settings were changed after calibration (e.g. center frequency, frequency deviation, reference level, etc).

Remote command:
`[SENSe:]CORRection:RECall` on page 194

Save As Trd Factor
Uses the normalized measurement data to generate a transducer factor. The trace data is converted to a transducer with unit dB and stored in a file with the specified name and the suffix `.trd` under "`c:\r_s\instr\trd`". The frequency points are allocated in equidistant steps between start and stop frequency. The generated transducer factor can be further adapted using the "Transducer" softkey in the SETUP menu.

For more information on transducers see the "General Instrument Setup > Transducers" section in the R&S FSW User Manual.

This function is only available if Source Calibration Normalize is switched on.

Note: Note that the *normalized* measurement data is used, not the *reference* trace! Thus, if you store the normalized trace directly after calibration, without changing any settings, the transducer factor will be 0 dB for the entire span (by definition of the normalized trace).

Remote command:
`[SENSe:]CORRection:TRANsducer:GENerator` on page 194

Reference Position
Defines the position of the Result Frequency Stop in percent of the total y-axis range. The top of the diagram is 100%, the bottom is 0%. By default, the 0 dB line is displayed at the top of the diagram (100%).

This setting is only available if normalization is on (see "Source Calibration Normalize" on page 87).

The reference line defined by the reference value and reference position is similar to the Reference Level defined in the "Amplitude" settings. However, this reference line only affects the y-axis scaling in the diagram, it has no effect on the expected input power level or the hardware settings.

The normalized trace (0 dB directly after calibration) is displayed on this reference line, indicated by a red line in the diagram. If you shift the reference line, the normalized trace is shifted, as well.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition` on page 192

Reference Value
Defines the reference value to be displayed at the specified Result Frequency Start.

This setting can be used to shift the reference line and thus the normalized trace, similar to the Shifting the Display (Offset) defined in the "Amplitude" settings shifts the reference level *in the display*.

Shifting the normalized trace is useful, for example, to reflect an attenuation or gain caused by the measured DUT. If you then zoom into the diagram around the normalized trace, the measured trace still remains fully visible.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RVALue` on page 192

6.4.2 Output Settings

The R&S FSW can provide output to special connectors for other devices.

For details on connectors refer to the R&S FSW Getting Started manual, "Front / Rear Panel View" chapters.

How to provide trigger signals as output is described in detail in the R&S FSW User Manual.

Output settings can be configured via the INPUT/OUTPUT key or in the "Outputs" dialog box.

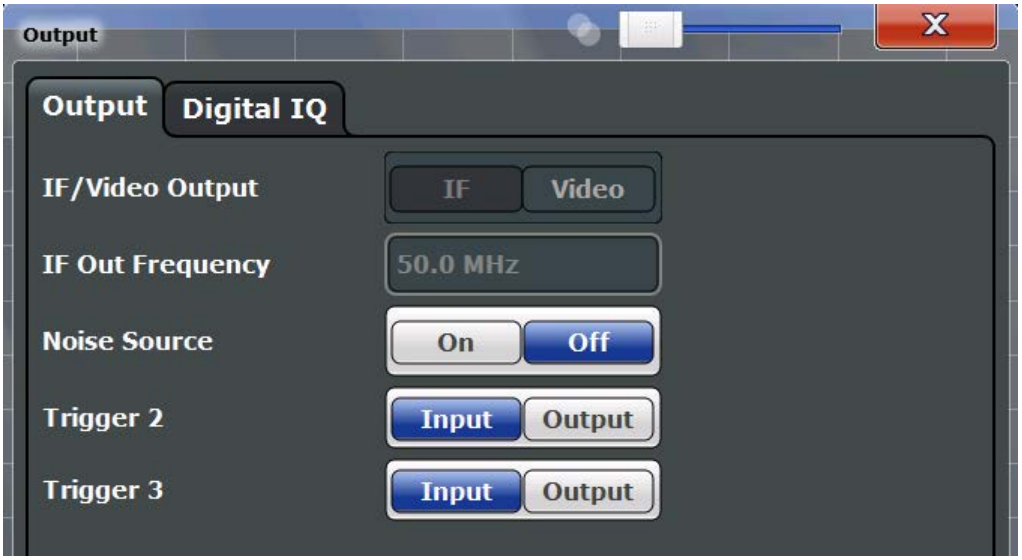

IF/Video Output....89
IF (Wide) Out Frequency....89
Noise Source....90
Trigger 2/3....90
└ Output Type....90
└ Level....91
└ Pulse Length....91
└ Send Trigger....91

IF/Video Output
Defines the type of signal sent to the IF/VIDEO/DEMOD connector on the rear panel of the R&S FSW.

For restrictions and additional information see chapter 5.4.8, "IF and Video Signal Output", on page 53.

"IF" Sends the measured IF value at the frequency defined in "IF (Wide) Out Frequency" on page 89 to the IF/VIDEO/DEMOD output connector.

"VIDEO" Sends the displayed video signal (i.e. the filtered and detected IF signal) to the IF/VIDEO/DEMOD output connector.
This setting is required to send demodulated audio frequencies to the output.

Remote command:
`OUTP:IF VID`, see `OUTPut:IF[:SOURce]` on page 207

IF (Wide) Out Frequency
Defines the frequency at which the IF signal level is sent to the IF/VIDEO/DEMOD connector if IF/Video Output is set to "IF".

Note: The IF output frequency of the IF WIDE OUTPUT connector cannot be defined manually, but is determined automatically depending on the center frequency. It is indicated in this field when the IF WIDE OUTPUT connector is used. For details on the used frequencies see the data sheet.

The IF WIDE OUTPUT connector is used automatically instead of the IF/VIDEO/ DEMOD connector if the bandwidth extension (hardware option R&S FSW-B160 / -U160) is activated (i.e. for bandwidths > 80 MHz).

For more information see chapter 5.4.8, "IF and Video Signal Output", on page 53.

Remote command:
`OUTPut:IF:IFFRequency` on page 207

Noise Source
Switches the supply voltage for an external noise source on or off.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S FSW itself, for example when measuring the noise level of a DUT.

For details see chapter 5.4.6, "Input from Noise Sources", on page 52

Remote command:
`DIAGnostic:SERVice:NSOurce` on page 206

Trigger 2/3
Defines the usage of the variable TRIGGER INPUT/OUTPUT connectors, where:

"Trigger 2": TRIGGER INPUT/OUTPUT connector on the front panel

"Trigger 3": TRIGGER 3 INPUT/ OUTPUT connector on the rear panel

(Trigger 1 is INPUT only.)

Note: Providing trigger signals as output is described in detail in the R&S FSW User Manual.

"Input"	The signal at the connector is used as an external trigger source by the R&S FSW. No further trigger parameters are available for the connector.
"Output"	The R&S FSW sends a trigger signal to the output connector to be used by connected devices. Further trigger parameters are available for the connector.

Remote command:
`OUTPut:TRIGger<port>:LEVel` on page 223
`OUTPut:TRIGger<port>:DIRection` on page 222

Output Type ← Trigger 2/3
Type of signal to be sent to the output

"Device Triggered"	(Default) Sends a trigger when the R&S FSW triggers.
"Trigger Armed"	Sends a (high level) trigger when the R&S FSW is in "Ready for trigger" state. This state is indicated by a status bit in the `STATus:OPERation` register (bit 5), as well as by a low level signal at the AUX port (pin 9). For details see the description of the `STATus:OPERation` register in the R&S FSW User Manual and the description of the AUX port in the R&S FSW Getting Started manual.

"User Defined" Sends a trigger when user selects "Send Trigger" button.
In this case, further parameters are available for the output signal.

Remote command:
`OUTPut:TRIGger<port>:OTYPe` on page 223

Level ← Output Type ← Trigger 2/3
Defines whether a constant high (1) or low (0) signal is sent to the output connector.

Remote command:
`OUTPut:TRIGger<port>:LEVel` on page 223

Pulse Length ← Output Type ← Trigger 2/3
Defines the length of the pulse sent as a trigger to the output connector.

Remote command:
`OUTPut:TRIGger<port>:PULSe:LENGth` on page 224

Send Trigger ← Output Type ← Trigger 2/3
Sends a user-defined trigger to the output connector immediately. Note that the trigger pulse level is always opposite to the constant signal level defined by the output "Level" setting, e.g. for "Level = High", a constant high signal is output to the connector until the "Send Trigger" button is selected. Then, a low pulse is sent.

Which pulse level will be sent is indicated by a graphic on the button.

Remote command:
`OUTPut:TRIGger<port>:PULSe:IMMediate` on page 224

6.4.3 Digital I/Q Output Settings

The optional Digital Baseband Interface (R&S FSW-B17) allows you to output I/Q data from any R&S FSW application that processes I/Q data to an external device. The configuration settings for digital I/Q output can be configured via the INPUT/OUTPUT key or in the "Outputs" dialog box.

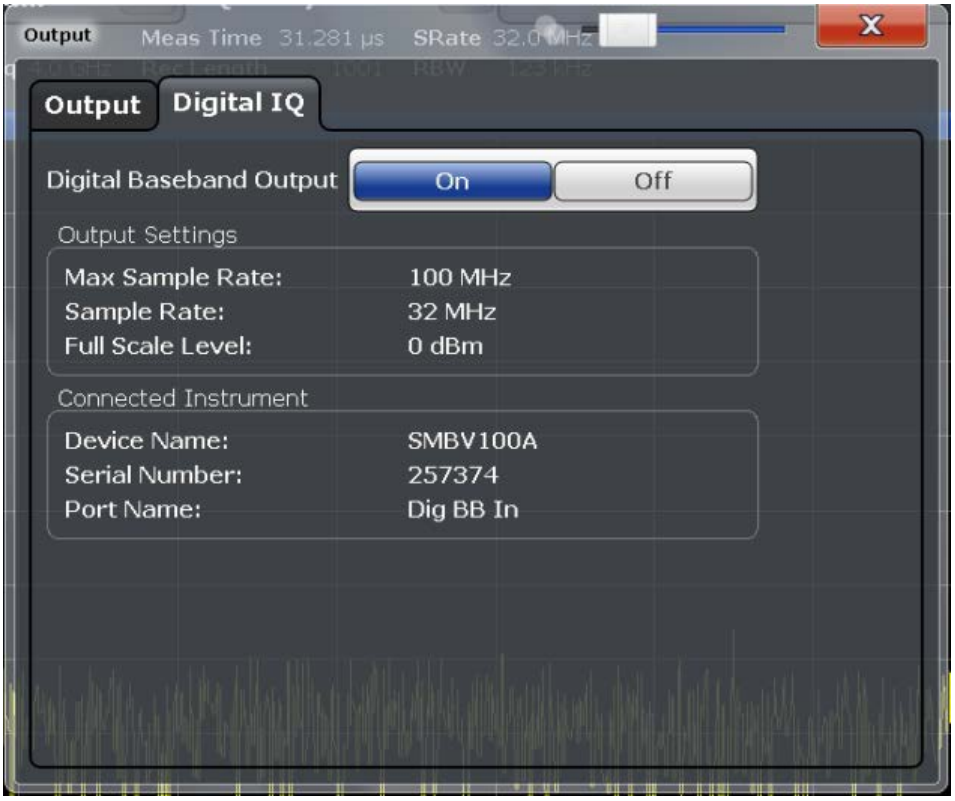

For details on digital I/Q output see chapter 5.2.2, "Digital Output", on page 28.

Digital Baseband Output....92
Output Settings Information....92
Connected Instrument....93

Digital Baseband Output
Enables or disables a digital output stream to the optional Digital Baseband Interface (R&S FSW-B17), if available.

For details on digital I/Q output see chapter 5.2.2, "Digital Output", on page 28.

Remote command:
`OUTPut:DIQ` on page 166

Output Settings Information
Displays information on the settings for output via the Digital Baseband Interface (R&S FSW-B17).

The following information is displayed:

- Maximum sample rate that can be used to transfer data via the Digital Baseband Interface (i.e. the maximum input sample rate that can be processed by the connected instrument)
- Sample rate currently used to transfer data via the Digital Baseband Interface

- Level and unit that corresponds to an I/Q sample with the magnitude "1" (Full Scale Level)

Remote command:
OUTPut:DIQ:CDEVice on page 166

Connected Instrument
Displays information on the instrument connected to the Digital Baseband Interface (R&S FSW-B17), if available.

If an instrument is connected, the following information is displayed:

- Name and serial number of the instrument connected to the Digital Baseband Interface
- Used port

Remote command:
OUTPut:DIQ:CDEVice on page 166

6.5 Amplitude

The amplitude is configured in the "Amplitude" dialog box. Amplitude settings are identical to the Spectrum application, except for a new scaling function for I/Q Vector and Real/Imag results (see)"Y-Axis Max" on page 101).

For background information on amplitude settings see the R&S FSW User Manual.

6.5.1 Amplitude Settings

Amplitude settings determine how the R&S FSW must process or display the expected input power levels.

Amplitude settings for input from the Analog Baseband interface (R&S FSW-B71) are described in chapter 6.5.2, "Amplitude Settings for Analog Baseband Input", on page 97.

To configure the amplitude settings

Amplitude settings can be configured via the AMPT key or in the "Amplitude" dialog box.

► To display the "Amplitude" dialog box, do one of the following:

- Select "Input/Frontend" from the "Overview" and then switch to the "Amplitude" tab.
- Select the AMPT key and then the "Amplitude Config" softkey.

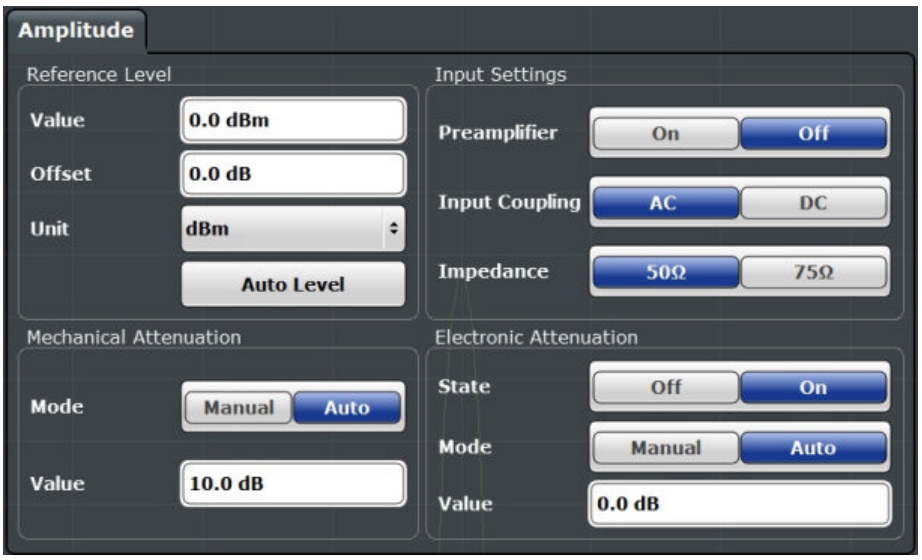

Reference Level....94
└ Shifting the Display (Offset)....94
└ Unit....95
└ Setting the Reference Level Automatically (Auto Level)....95
RF Attenuation....95
└ Attenuation Mode / Value....96
Using Electronic Attenuation (Option B25)....96
Input Settings....96
└ Preamplifier (option B24)....97

Reference Level
Defines the expected maximum reference level. Signal levels above this value may not be measured correctly, which is indicated by the "IF OVLD" status display ("OVLD" for analog baseband or digitial baseband input).

The reference level is also used to scale power diagrams; the reference level is then used as the maximum on the y-axis.

Since the R&S FSW hardware is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level to ensure an optimum measurement (no compression, good signal-to-noise ratio).

Note that the "Reference Level" value ignores the Shifting the Display (Offset). It is important to know the actual power level the R&S FSW must handle.

Note that for input from the External Mixer (R&S FSW-B21) the maximum reference level also depends on the conversion loss; see the R&S FSW I/Q Analyzer and I/Q Input User Manual for details.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel` on page 209

Shifting the Display (Offset) ← Reference Level
Defines an arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S FSW so the application shows correct power results. All displayed power level results will be shifted by this value.

Note, however, that the Reference Level value ignores the "Reference Level Offset". It is important to know the actual power level the R&S FSW must handle.

To determine the required offset, consider the external attenuation or gain applied to the input signal. A positive value indicates that an attenuation took place (R&S FSW increases the displayed power values) , a negative value indicates an external gain (R&S FSW decreases the displayed power values).

The setting range is ±200 dB in 0.01 dB steps.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel:OFFSet` on page 209

Unit ← Reference Level
The R&S FSW measures the signal voltage at the RF input. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω, see "Impedance" on page 63), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV
- dBµV
- dBµA
- dBpW
- Volt
- Ampere
- Watt

Remote command:
`INPut:IMPedance` on page 160
`CALCulate<n>:UNIT:POWer` on page 208

Setting the Reference Level Automatically (Auto Level) ← Reference Level
Automatically determines the optimal reference level for the current input data. At the same time, the internal attenuators and the preamplifier (for analog baseband input: the fullscale level) are adjusted so the signal-to-noise ratio is optimized, while signal compression, clipping and overload conditions are minimized.

In order to do so, a level measurement is performed to determine the optimal reference level.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meastime Manual)" on page 118).

Remote command:
`[SENSe:]ADJust:LEVel` on page 235

RF Attenuation
Defines the attenuation applied to the RF input.

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17).

Attenuation Mode / Value ← RF Attenuation
The RF attenuation can be set automatically as a function of the selected reference level (Auto mode). This ensures that the optimum RF attenuation is always used. It is the default setting. By default and when Using Electronic Attenuation (Option B25) is not available, mechanical attenuation is applied.

This function is not available for input from the **Digital Baseband Interface (R&S FSW-B17)**.

In "Manual" mode, you can set the RF attenuation in 1 dB steps (down to 0 dB, also using the rotary knob). Other entries are rounded to the next integer value. The range is specified in the data sheet. If the defined reference level cannot be set for the defined RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is displayed.

NOTICE! Risk of hardware damage due to high power levels. When decreasing the attenuation manually, ensure that the power level does not exceed the maximum level allowed at the RF input, as an overload may lead to hardware damage.

Remote command:
`INPut:ATTenuation` on page 209
`INPut:ATTenuation:AUTO` on page 210

Using Electronic Attenuation (Option B25)
If option R&S FSW-B25 is installed, you can also activate an electronic attenuator.

In "Auto" mode, the settings are defined automatically; in "Manual" mode, you can define the mechanical and electronic attenuation separately.

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17).

Note: Electronic attenuation is not available for stop frequencies (or center frequencies in zero span) >13.6 GHz.
In "Auto" mode, RF attenuation is provided by the electronic attenuator as much as possible to reduce the amount of mechanical switching required. Mechanical attenuation may provide a better signal-to-noise ratio, however.

When you switch off electronic attenuation, the RF attenuation is automatically set to the same mode (auto/manual) as the electronic attenuation was set to. Thus, the RF attenuation may be set to automatic mode, and the full attenuation is provided by the mechanical attenuator, if possible.

Both the electronic and the mechanical attenuation can be varied in 1 dB steps. Other entries are rounded to the next lower integer value.

If the defined reference level cannot be set for the given attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is displayed in the status bar.

Remote command:
`INPut:EATT:STATe` on page 211
`INPut:EATT:AUTO` on page 211
`INPut:EATT` on page 210

Input Settings
Some input settings affect the measured amplitude of the signal, as well.

The parameters "Input Coupling" and "Impedance" are identical to those in the "Input" settings, see chapter 6.4.1, "Input Source Settings", on page 62.

Preamplifier (option B24) ← Input Settings
If option R&S FSW-B24 is installed, a preamplifier can be activated for the RF input signal.

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17).

For R&S FSW 26 models, the input signal is amplified by 30 dB if the preamplifier is activated.

For R&S FSW 8 or 13 models, the following settings are available:

You can use a preamplifier to analyze signals from DUTs with low input power.

"Off" Deactivates the preamplifier.

"15 dB" The RF input signal is amplified by about 15 dB.

"30 dB" The RF input signal is amplified by about 30 dB.

Remote command:
`INPut:GAIN:STATe` on page 211
`INPut:GAIN[:VALue]` on page 212

6.5.2 Amplitude Settings for Analog Baseband Input

The following settings and functions are available to define amplitude settings for input via the Analog Baseband Interface (R&S FSW-B71) in the applications that support it.

They can be configured via the AMPT key or in the "Amplitude" tab of the "Input" dialog box.

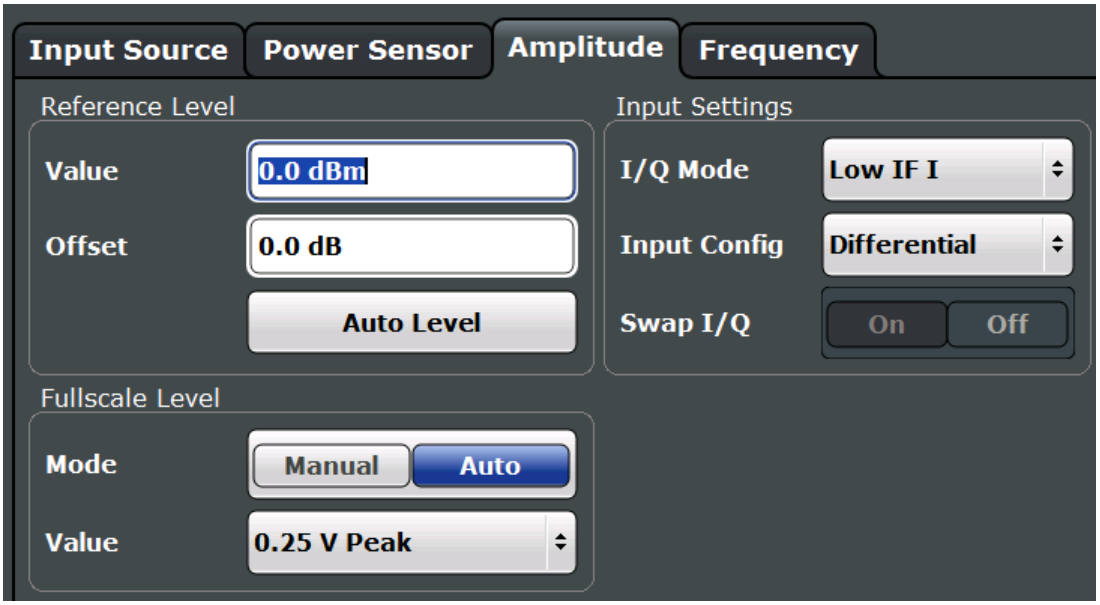

The input settings provided here are identical to those in the "Input Source" > "Analog Baseband" tab, see chapter 6.4.1.5, "Analog Baseband Input Settings", on page 78.

For more information on the Analog Baseband Interface (R&S FSW-B71) see the R&S FSW I/Q Analyzer and I/Q Input User Manual.

Reference Level....98
└ Shifting the Display (Offset)....98
└ Unit....99
└ Setting the Reference Level Automatically (Auto Level)....99
Fullscale Level Mode / Value....99

Reference Level
Defines the expected maximum reference level. Signal levels above this value may not be measured correctly, which is indicated by the "IF OVLD" status display ("OVLD" for analog baseband or digitial baseband input).

The reference level is also used to scale power diagrams; the reference level is then used as the maximum on the y-axis.

Since the R&S FSW hardware is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level to ensure an optimum measurement (no compression, good signal-to-noise ratio).

Note that the "Reference Level" value ignores the Shifting the Display (Offset). It is important to know the actual power level the R&S FSW must handle.

Note that for input from the External Mixer (R&S FSW-B21) the maximum reference level also depends on the conversion loss; see the R&S FSW I/Q Analyzer and I/Q Input User Manual for details.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel` on page 209

Shifting the Display (Offset) ← Reference Level
Defines an arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S FSW so the application shows correct power results. All displayed power level results will be shifted by this value.

Note, however, that the Reference Level value ignores the "Reference Level Offset". It is important to know the actual power level the R&S FSW must handle.

To determine the required offset, consider the external attenuation or gain applied to the input signal. A positive value indicates that an attenuation took place (R&S FSW increases the displayed power values) , a negative value indicates an external gain (R&S FSW decreases the displayed power values).

The setting range is ±200 dB in 0.01 dB steps.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel:OFFSet` on page 209

Unit ← Reference Level
The R&S FSW measures the signal voltage at the RF input. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω, see "Impedance" on page 63), conversion to other units is possible. The following units are available and directly convertible:

- dBm
- dBmV
- dBµV
- dBµA
- dBpW
- Volt
- Ampere
- Watt

Remote command:
`INPut:IMPedance` on page 160
`CALCulate<n>:UNIT:POWer` on page 208

Setting the Reference Level Automatically (Auto Level) ← Reference Level
Automatically determines the optimal reference level for the current input data. At the same time, the internal attenuators and the preamplifier (for analog baseband input: the fullscale level) are adjusted so the signal-to-noise ratio is optimized, while signal compression, clipping and overload conditions are minimized.

In order to do so, a level measurement is performed to determine the optimal reference level.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meastime Manual)" on page 118).

Remote command:
`[SENSe:]ADJust:LEVel` on page 235

Fullscale Level Mode / Value
The fullscale level defines the maximum power you can input at the Baseband Input connector without clipping the signal.

The fullscale level can be defined automatically according to the reference level, or manually.

For manual input, the following values can be selected:

- 0.25 V
- 0.5 V
- 1 V
- 2 V

If probes are connected, the possible fullscale values are adapted according to the probe's attenuation and maximum allowed power.

For details on probes see chapter 5.4.3, "Using Probes", on page 39.

Remote command:
`INPut:IQ:FULLscale:AUTO` on page 168
`INPut:IQ:FULLscale:LEVel` on page 168

6.5.3 Scaling the Y-Axis

The individual scaling settings that affect the vertical axis are described here.

To configure the y-axis scaling settings

Vertical Axis settings can be configured via the AMPT key or in the "Amplitude" dialog box.

► To display the "Amplitude" dialog box, do one of the following:

- Select "Amplitude" from the "Overview".
- Select the AMPT key and then the "Scale Config" softkey.

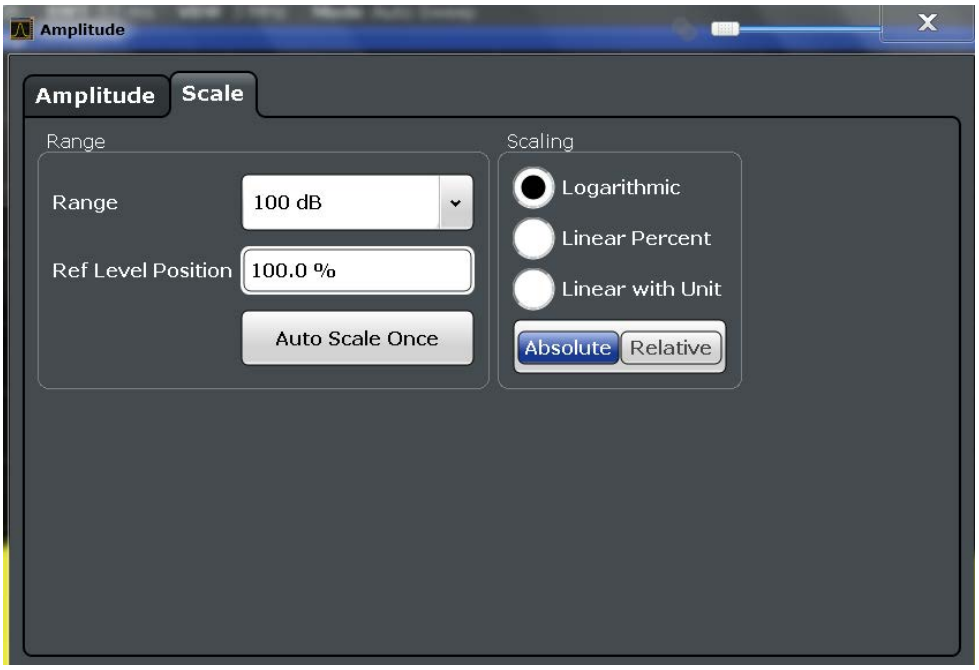

Range....100
Ref Level Position....101
Scaling....101
Y-Axis Max....101

Range
Defines the displayed y-axis range in dB (frequency domain) or Hz (time domain).

The default value is 100 dB or 500 kHz.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]` on page 212

Ref Level Position
Defines the reference level position, i.e. the position of the maximum AD converter value on the level axis in %, where 0 % corresponds to the lower and 100 % to the upper limit of the diagram.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition` on page 192

Scaling
Defines the scaling method for the y-axis.

"Logarithmic"	Logarithmic scaling (only available for logarithmic units - dB...)
"Linear Unit"	Linear scaling in the unit of the measured signal
"Linear Percent"	Linear scaling in percentages from 0 to 100
"Absolute"	The labeling of the level lines refers to the absolute value of the reference level (not available for "Linear Percent")
"Relative"	The scaling is in dB, relative to the reference level (only available for logarithmic units - dB...). The upper line of the grid (reference level) is always at 0 dB.

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y:SPACing` on page 213
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MODE` on page 213

Y-Axis Max
Defines the maximum value of the y-axis in the currently selected diagram in either direction (in Volts). Thus, the y-axis scale starts at -<Y-Axis Max> and ends at +<Y-Axis Max>.

The maximum y-axis value depends on the current reference level. If the reference level is changed, the "Y-Axis Max" value is automatically set to the new reference level (in V).

This command is only available if the evaluation mode for the I/Q Analyzer is set to "IQ Vector" or "Real/Imag".

Remote command:
`DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]` on page 212

6.6 Frequency Settings

Frequency settings for the input signal can be configured via the "Frequency" dialog box, which is displayed when you do one of the following:

- Select the FREQ key and then the "Frequency Config" softkey.

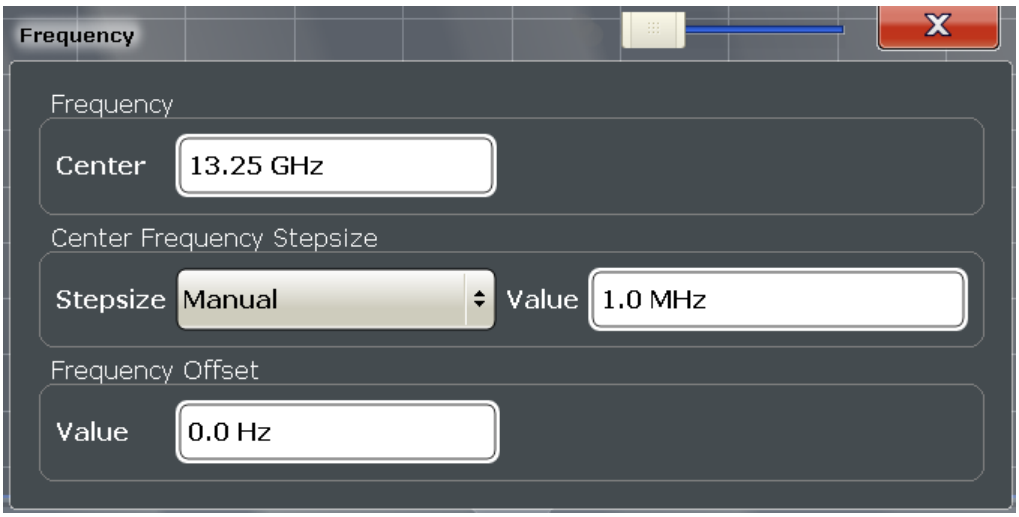

Center....102
Center Frequency Stepsize....102
Frequency Offset....102

Center
Defines the normal center frequency of the signal. The allowed range of values for the center frequency depends on the frequency span.

span > 0: $span_{min}/2 \leq f_{center} \leq f_{max} - span_{min}/2$

f_{max} and $span_{min}$ are specified in the data sheet.

Remote command:
`[SENSe:]FREQuency:CENTer` on page 214

Center Frequency Stepsize
Defines the step size by which the center frequency is increased or decreased when the arrow keys are pressed. When you use the rotary knob the center frequency changes in steps of only 1/10 of the "Center Frequency Stepsize".

The step size can be coupled to another value or it can be manually set to a fixed value.

"= Center" Sets the step size to the value of the center frequency. The used value is indicated in the "Value" field.

"Manual" Defines a fixed step size for the center frequency. Enter the step size in the "Value" field.

Remote command:
`[SENSe:]FREQuency:CENTer:STEP` on page 215

Frequency Offset
Shifts the displayed frequency range along the x-axis by the defined offset.

This parameter has no effect on the R&S FSW hardware, or on the captured data or on data processing. It is simply a manipulation of the final results in which absolute frequency values are displayed. Thus, the x-axis of a spectrum display is shifted by a constant offset if it shows absolute frequencies, but not if it shows frequencies relative to the signal's center frequency.

A frequency offset can be used to correct the display of a signal that is slightly distorted by the measurement setup, for example.

The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:
`[SENSe:]FREQuency:OFFSet` on page 216

6.7 Trigger Settings

Trigger settings determine when the input signal is measured.

Trigger settings can be configured via the TRIG key or in the "Trigger" dialog box, which is displayed when you select the "Trigger" button in the "Overview".

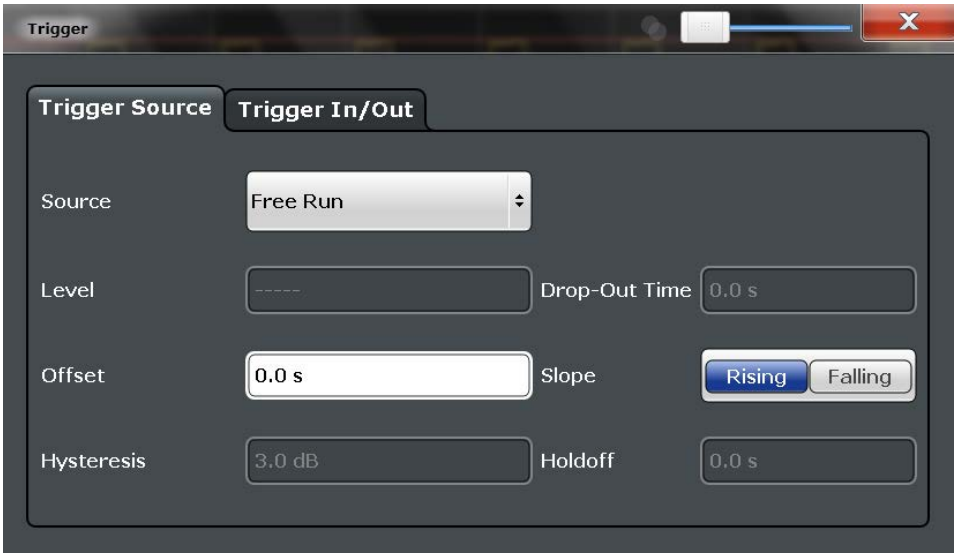

External triggers from one of the TRIGGER INPUT/OUTPUT connectors on the R&S FSW are configured in a separate tab of the dialog box.

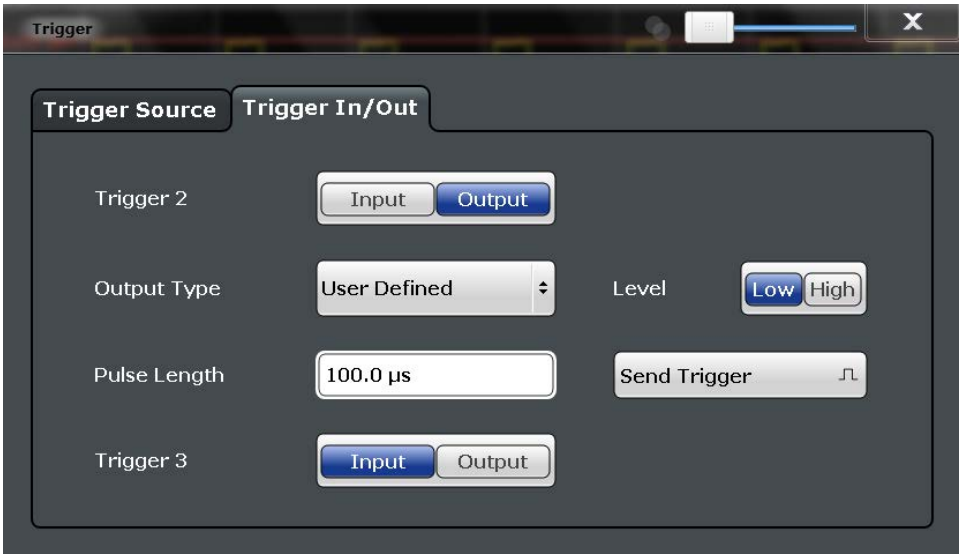

Conventional gating as in the Spectrum application is not available for the I/Q Analyzer; however, a special gating mode is available in remote control, see chapter 10.4.4.3, "Configuring I/Q Gating", on page 224.

For step-by-step instructions on configuring triggered measurements, see the R&S FSW User Manual.

Trigger Source....105
- Trigger Source....105
  - Free Run....105
  - External Trigger 1/2/3....105
  - Video....105
  - IF Power....106
  - Baseband Power....106
  - I/Q Power....106
  - Digital I/Q....106
  - RF Power....107
  - Power Sensor....107
  - Time....108
- Trigger Level....108
- Repetition Interval....108
- Drop-Out Time....108
- Trigger Offset....108
- Hysteresis....109
- Trigger Holdoff....109
- Slope....109

Trigger 2/3....109
- Output Type....110
  - Level....110
  - Pulse Length....110
  - Send Trigger....110

Trigger Source
The trigger settings define the beginning of a measurement.

Trigger Source ← Trigger Source
Defines the trigger source. If a trigger source other than "Free Run" is set, "TRG" is displayed in the channel bar and the trigger source is indicated.

For gated measurements, this setting also defines the gating source.

Remote command:
`TRIGger[:SEQuence]:SOURce` on page 220

Free Run ← Trigger Source ← Trigger Source
No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitely.

Remote command:
`TRIG:SOUR IMM`, see `TRIGger[:SEQuence]:SOURce` on page 220

External Trigger 1/2/3 ← Trigger Source ← Trigger Source
Data acquisition starts when the TTL signal fed into the specified input connector (on the front or rear panel) meets or exceeds the specified trigger level.

(See "Trigger Level" on page 108).

Note: The "External Trigger 1" softkey automatically selects the trigger signal from the TRIGGER INPUT connector on the front panel.
In the I/Q Analyzer application only "External Trigger 1" is supported.

For details see the "Instrument Tour" chapter in the R&S FSW Getting Started manual.

"External Trigger 1"
Trigger signal from the TRIGGER INPUT connector on the front panel.

"External Trigger 2"
Trigger signal from the TRIGGER INPUT/OUTPUT connector on the front panel.
Note: Connector must be configured for "Input" in the "Outputs" configuration (see "Trigger 2/3" on page 90).

"External Trigger 3"
Trigger signal from the TRIGGER 3 INPUT/ OUTPUT connector on the rear panel.
Note: Connector must be configured for "Input" in the "Outputs" configuration (see "Trigger 2/3" on page 90).

Remote command:
`TRIG:SOUR EXT`, `TRIG:SOUR EXT2`, `TRIG:SOUR EXT3`
See `TRIGger[:SEQuence]:SOURce` on page 220

Video ← Trigger Source ← Trigger Source
Defines triggering by the video signal, i.e. the filtered and detected version of the input signal (the envelope of the IF signal), as displayed on the screen.

Define a trigger level from 0 % to 100 % of the diagram height. The absolute trigger level is indicated by a horizontal trigger line in the diagram, which you can also move graphically to change the trigger level.

Video mode is only available in the time domain, and not for I/Q-based data.

Remote command:
`TRIG:SOUR VID`, see `TRIGger[:SEQuence]:SOURce` on page 220

IF Power ← Trigger Source ← Trigger Source
The R&S FSW starts capturing data as soon as the trigger threshold is exceeded around the third intermediate frequency.

It is not available for input from the Digital Baseband Interface (R&S FSW-B17) or the Analog Baseband Interface (R&S FSW-B71).

For frequency sweeps, the third IF represents the start frequency. The trigger bandwidth at the third IF depends on the RBW and sweep type.

For measurements on a fixed frequency (e.g. zero span or I/Q measurements), the third IF represents the center frequency.

The trigger threshold depends on the defined trigger level, as well as on the RF attenuation and preamplification. For details on available trigger levels and trigger bandwidths see the data sheet.

This trigger source is only available for RF input.

Remote command:
`TRIG:SOUR IFP`, see `TRIGger[:SEQuence]:SOURce` on page 220

Baseband Power ← Trigger Source ← Trigger Source
Defines triggering on the baseband power (for baseband input via the Digital Baseband Interface R&S FSW-B17 or the Analog Baseband interface R&S FSW-B71)).

For more information on the Digital Baseband Interface see chapter 5.2, "Processing Data from the Digital Baseband Interface (R&S FSW-B17)", on page 26.

For more information on the Analog Baseband Interface see chapter 5.3, "Processing Data From the Analog Baseband Interface", on page 32.

Remote command:
`TRIG:SOUR BBP`, see `TRIGger[:SEQuence]:SOURce` on page 220

I/Q Power ← Trigger Source ← Trigger Source
This trigger source is only available in the I/Q Analyzer application and in applications that process I/Q data.

This trigger source is not available if the optional Digital Baseband Interface (R&S FSW-B17) or Analog Baseband Interface (R&S FSW-B71) is used for input.

Triggers the measurement when the magnitude of the sampled I/Q data exceeds the trigger threshold.

The trigger bandwidth corresponds to the bandwidth setting for I/Q data acquisition (see "Analysis Bandwidth" on page 112).

Remote command:
`TRIG:SOUR IQP`, see `TRIGger[:SEQuence]:SOURce` on page 220

Digital I/Q ← Trigger Source ← Trigger Source
For applications that process I/Q data, such as the I/Q Analyzer or optional applications, and only if the Digital Baseband Interface (R&S FSW-B17) is available:

Defines triggering of the measurement directly via the LVDS connector. In the selection list you must specify which general purpose bit (GP0 to GP5) will provide the trigger data.

A Trigger Offset, and "Slope" on page 109 can be defined for the Digital IQ trigger to improve the trigger stability, but no hysteresis or holdoff value.

The following table describes the assignment of the general purpose bits to the LVDS connector pins.

(For details on the LVDS connector see chapter A.1, "Description of the LVDS Connector", on page 295)

Table 6-2: Assignment of general purpose bits to LVDS connector pins

Bit	LVDS pin
GP0	SDATA4_P - Trigger1
GP1	SDATA4_P - Trigger2
GP2	SDATA0_P - Reserve1
GP3	SDATA4_P - Reserve2
GP4	SDATA0_P - Marker1
GP5	SDATA4_P - Marker2

Remote command:
`TRIG:SOUR GP0`, see `TRIGger[:SEQuence]:SOURce` on page 220

RF Power ← Trigger Source ← Trigger Source
Defines triggering of the measurement via signals which are outside the displayed measurement range.

For this purpose the instrument uses a level detector at the first intermediate frequency. The input signal must be in the frequency range between 500 MHz and 8 GHz. The resulting trigger level at the RF input depends on the RF attenuation and preamplification. For details on available trigger levels see the data sheet.

Note: If the input signal contains frequencies outside of this range (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input frequencies is displayed in the status bar.

A "Trigger Offset", "Trigger Polarity" and "Trigger Holdoff" (to improve the trigger stability) can be defined for the RF trigger, but no "Hysteresis".

This trigger source is not available for input from the Digital Baseband Interface (R&S FSW-B17) or the Analog Baseband Interface (R&S FSW-B71). If the trigger source "RF Power" is selected and digital I/Q or analog baseband input is activated, the trigger source is automatically switched to "Free Run".

Remote command:
`TRIG:SOUR RFP`, see `TRIGger[:SEQuence]:SOURce` on page 220

Power Sensor ← Trigger Source ← Trigger Source
Uses an external power sensor as a trigger source. This option is only available if a power sensor is connected and configured.

Note: For R&S power sensors, the "Gate Mode" *Lvl* is not supported. The signal sent by these sensors merely reflects the instant the level is first exceeded, rather than a time period. However, only time periods can be used for gating in level mode. Thus, the trigger impulse from the sensors is not long enough for a fully gated measurement; the measurement cannot be completed.

Remote command:
`TRIG:SOUR PSE`, see `TRIGger[:SEQuence]:SOURce` on page 220

Time ← Trigger Source ← Trigger Source
Triggers in a specified repetition interval.

Remote command:
`TRIG:SOUR TIME`, see `TRIGger[:SEQuence]:SOURce` on page 220

Trigger Level ← Trigger Source
Defines the trigger level for the specified trigger source.

For details on supported trigger levels, see the data sheet.

Remote command:
`TRIGger[:SEQuence]:LEVel[:EXTernal<port>]` on page 219
For analog baseband (B71) or digital baseband (B17) input only:
`TRIGger[:SEQuence]:LEVel:BBPower` on page 218

Repetition Interval ← Trigger Source
Defines the repetition interval for a time trigger. The shortest interval is 2 ms.

The repetition interval should be set to the exact pulse period, burst length, frame length or other repetitive signal characteristic.

Remote command:
`TRIGger[:SEQuence]:TIME:RINTerval` on page 222

Drop-Out Time ← Trigger Source
Defines the time the input signal must stay below the trigger level before triggering again.

Note: For input from the Analog Baseband Interface (R&S FSW-B71) using the baseband power trigger (BBP), the default drop out time is set to 100 ns to avoid unintentional trigger events (as no hysteresis can be configured in this case).

Remote command:
`TRIGger[:SEQuence]:DTIMe` on page 217

Trigger Offset ← Trigger Source
Defines the time offset between the trigger event and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	Sweep starts earlier (pre-trigger) Only possible for zero span (e.g. I/Q Analyzer application) and gated trigger switched off Maximum allowed range limited by the sweep time: $pretrigger_{max}$ = sweep time When using the Digital Baseband Interface (R&S FSW-B17), the maximum range is limited by the number of pretrigger samples. (See table 5-1)

Tip: To determine the trigger point in the sample (for "External" or "IF Power" trigger source), use the `TRACe:IQ:TPISample?` command.

For the "Time" trigger source, this function is not available.

Remote command:
`TRIGger[:SEQuence]:HOLDoff[:TIME]` on page 217

Hysteresis ← Trigger Source
Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Settting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

Remote command:
`TRIGger[:SEQuence]:IFPower:HYSTeresis` on page 218

Trigger Holdoff ← Trigger Source
Defines the minimum time (in seconds) that must pass between two trigger events. Trigger events that occur during the holdoff time are ignored.

Remote command:
`TRIGger[:SEQuence]:IFPower:HOLDoff` on page 218

Slope ← Trigger Source
For all trigger sources except time you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Remote command:
`TRIGger[:SEQuence]:SLOPe` on page 220

Trigger 2/3
Defines the usage of the variable TRIGGER INPUT/OUTPUT connectors, where:

"Trigger 2": TRIGGER INPUT/OUTPUT connector on the front panel

"Trigger 3": TRIGGER 3 INPUT/ OUTPUT connector on the rear panel

(Trigger 1 is INPUT only.)

Note: Providing trigger signals as output is described in detail in the R&S FSW User Manual.

"Input" The signal at the connector is used as an external trigger source by the R&S FSW. No further trigger parameters are available for the connector.

"Output" The R&S FSW sends a trigger signal to the output connector to be used by connected devices.
Further trigger parameters are available for the connector.

Remote command:
`OUTPut:TRIGger<port>:LEVel` on page 223
`OUTPut:TRIGger<port>:DIRection` on page 222

Output Type ← Trigger 2/3
Type of signal to be sent to the output

"Device Triggered"	(Default) Sends a trigger when the R&S FSW triggers.
"Trigger Armed"	Sends a (high level) trigger when the R&S FSW is in "Ready for trigger" state. This state is indicated by a status bit in the `STATus:OPERation` register (bit 5), as well as by a low level signal at the AUX port (pin 9). For details see the description of the `STATus:OPERation` register in the R&S FSW User Manual and the description of the AUX port in the R&S FSW Getting Started manual.
"User Defined"	Sends a trigger when user selects "Send Trigger" button. In this case, further parameters are available for the output signal.

Remote command:
`OUTPut:TRIGger<port>:OTYPe` on page 223

Level ← Output Type ← Trigger 2/3
Defines whether a constant high (1) or low (0) signal is sent to the output connector.

Remote command:
`OUTPut:TRIGger<port>:LEVel` on page 223

Pulse Length ← Output Type ← Trigger 2/3
Defines the length of the pulse sent as a trigger to the output connector.

Remote command:
`OUTPut:TRIGger<port>:PULSe:LENGth` on page 224

Send Trigger ← Output Type ← Trigger 2/3
Sends a user-defined trigger to the output connector immediately. Note that the trigger pulse level is always opposite to the constant signal level defined by the output "Level" setting, e.g. for "Level = High", a constant high signal is output to the connector until the "Send Trigger" button is selected. Then, a low pulse is sent.

Which pulse level will be sent is indicated by a graphic on the button.

Remote command:
`OUTPut:TRIGger<port>:PULSe:IMMediate` on page 224

6.8 Data Acquisition and Bandwidth Settings

How data is to be acquired is configured in the "Bandwidth" dialog box.

- Data Acquisition....111
- Sweep Settings....114

6.8.1 Data Acquisition

The data acquisition settings define which parts of the input signal are captured for further evaluation in the applications. They are configured in the "Data Acquisition" tab of the "Bandwidth" dialog box.

► To display this dialog box, do one of the following:

- Select the "Bandwidth" button in the configuration "Overview"
- Select the BW key and then the "Data Acquisition" softkey.
- Select the "Data Acquisition" softkey in the "I/Q Analyzer" menu.

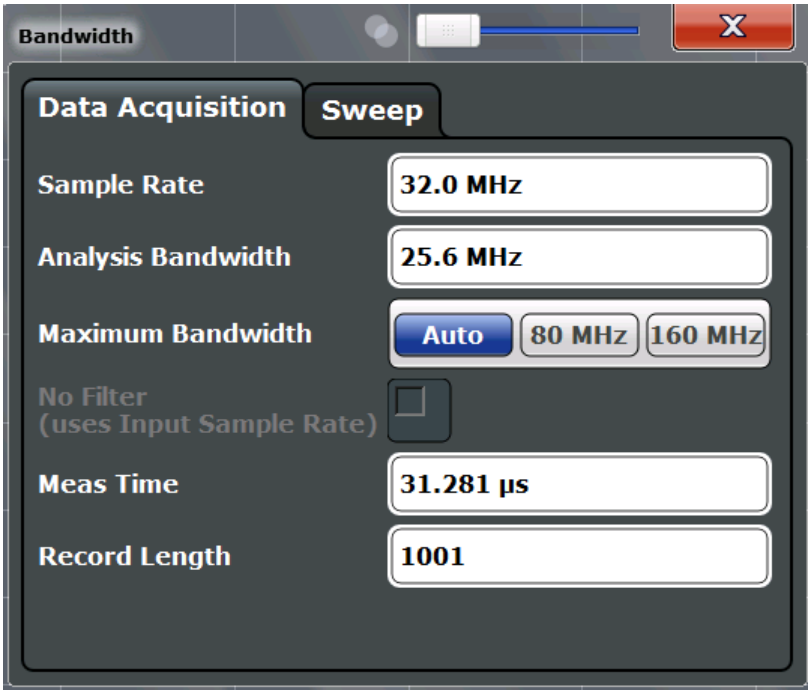

MSRA operating mode

In MSRA operating mode, only the MSRA Master channel actually captures data from the input signal. The data acquisition settings for the I/Q Analyzer application in MSRA mode define the analysis interval.

For details on the MSRA operating mode see the R&S FSW MSRA User Manual.

The remote commands required to perform these tasks are described in chapter 10.4.5, "Configuring Data Acquisition", on page 227.

Sample Rate....112
Analysis Bandwidth....112
Maximum Bandwidth....112
Omitting the Digital Decimation Filter (No Filter)....113
Meas Time....113
Record Length....113
Capture Offset....114

Sample Rate
Defines the I/Q data sample rate of the R&S FSW. This value is dependent on the defined Analysis Bandwidth and the defined signal source. Up to the Maximum Bandwidth, the following rule applies:

sample rate = analysis bandwidth / 0.8

For details on the dependencies see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22.

This rate may differ from the sample rate of the connected device (see "Input Sample Rate" on page 76).

If the Digital Baseband Interface (R&S FSW-B17) is active, restrictions to the sample rate apply, see chapter 5.2.3, "Sample Rates and Bandwidths for Digital I/Q Data", on page 29.

Remote command:
`TRACe:IQ:SRATe` on page 230

Analysis Bandwidth
Defines the flat, usable bandwidth of the final I/Q data. This value is dependent on the defined Sample Rate and the defined signal source.

Up to the Maximum Bandwidth, the following rule applies:

*analysis bandwidth = 0.8 * sample rate*

Note: For input from the **Analog Baseband interface (R&S FSW-B71)**: If the frequency range defined by the analysis bandwidth and the center frequency exceeds the minimum frequency (0 Hz for low IF evaluation) or the maximum frequency (for I+jQ evaluation), an error is displayed. In this case, adjust the center frequency (see "Center Frequency" on page 79) or the analysis bandwidth to exclude possible unwanted signal components. For details on frequency ranges and the analysis bandwidth see chapter 5.3, "Processing Data From the Analog Baseband Interface", on page 32.

Remote command:
`TRACe:IQ:BWIDth` on page 227

Maximum Bandwidth
Defines the maximum bandwidth to be used by the R&S FSW for I/Q data acquisition. This setting is only available if the bandwidth extension option R&S FSW-B160/-B320 is installed. Otherwise the maximum bandwidth is determined automatically.

For details on the maximum bandwidth see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22.

"Auto" (Default) The currently available maximum bandwidth is allowed. This value depends on which bandwidth extension options are installed, if any (see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22). All installed bandwidth extension options are activated. Note that using bandwidth extension options R&S FSW-B160/-B320 may cause more spurious effects.

Note: If the bandwidth extension R&S FSW-B160/-B320 is active, the IF WIDE OUTPUT connector is automatically used to provide IF output. See the R&S FSW Getting Started manual for details on the connector.

"80 MHz" Restricts the analysis bandwidth to a maximum of 80 MHz. The bandwidth extension option R&S FSW-B160/-B320 is deactivated.

"160 MHz" Restricts the analysis bandwidth to a maximum of 160 MHz. The bandwidth extension option R&S FSW-B320 is deactivated.

Remote command:
`TRACe:IQ:WBANd[:STATe]` on page 231
`TRACe:IQ:WBANd:MBWIDTH` on page 232

Omitting the Digital Decimation Filter (No Filter)
This setting is only available when using the Digital Baseband Interface (R&S FSW-B17).

If enabled, no digital decimation filter is used during data acquisition. Thus, the Analysis Bandwidth is identical to the input sample rate configured for the Digital I/Q input source (see "Input Sample Rate" on page 76).

Note, however, that in this case noise, artifacts, and the second IF side band may not be suppressed in the captured I/Q data.

Remote command:
`TRACe:IQ:DIQFilter` on page 228

Meas Time
Defines the I/Q acquisition time. By default, the measurement time is calculated as the number of I/Q samples ("Record Length") divided by the sample rate. If you change the measurement time, the Record Length is automatically changed, as well.

For details on the maximum number of samples see also chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22.

Remote command:
`[SENSe:]SWEep:TIME` on page 247

Record Length
Defines the number of I/Q samples to record. By default, the number of sweep points is used. The record length is calculated as the measurement time multiplied by the sample rate. If you change the record length, the Meas Time is automatically changed, as well.

Note: For the I/Q vector result display, the number of I/Q samples to record ("Record Length") must be identical to the number of trace points to be displayed ("Sweep Points"). Thus, the sweep points are not editable for this result display. If the "Record Length" is edited, the sweep points are adapted automatically. For record lengths outside the valid range of sweep points, i.e. less than 101 points or more than 32001 points,the diagram does not show valid results .

Remote command:
`TRACe:IQ:RLENgth` on page 228
`TRACe:IQ:SET` on page 229

Capture Offset
This setting is only available for applications in **MSRA operating mode**. It has a similar effect as the trigger offset in other measurements: it defines the time offset between the capture buffer start and the start of the extracted application data. The offset must be a positive value, as the application can only analyze data that is contained in the capture buffer.

Remote command:
`[SENSe:]MSRA:CAPTure:OFFSet` on page 272

6.8.2 Sweep Settings

The sweep settings are configured via the SWEEP key or in the "Sweep" tab of the "Bandwidth" dialog box.

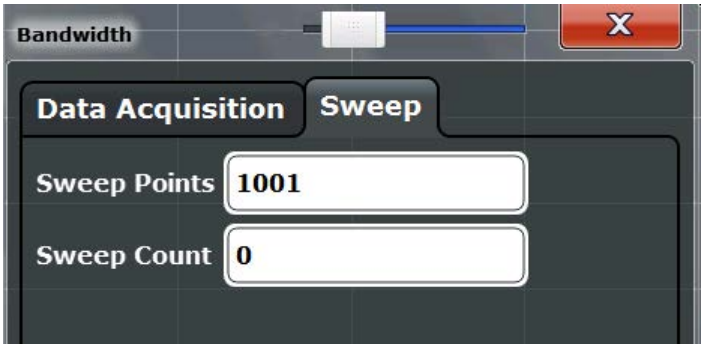

► To display this dialog box, do one of the following:

- Select the "Bandwidth" button in the configuration "Overview" and switch to the "Sweep" tab.
- Select the SWEEP key and then the "Sweep Config" softkey.

Sweep Points....114
Sweep/Average Count....115
Continuous Sweep/RUN CONT....115
Single Sweep/ RUN SINGLE....115
Continue Single Sweep....116

Sweep Points
In the I/Q Analyzer application, a specific frequency bandwidth is swept for a specified measurement time. During this time, a defined number of samples (= "Record Length") are taken. These samples are then evaluated by the applications. Therefore, in this case the number of sweep points does not define the amount of data to be acquired, but rather the number of trace points that are evaluated and displayed in the result diagrams.

Note: For the I/Q vector result display, the number of I/Q samples to record ("Record Length") must be identical to the number of trace points to be displayed ("Sweep Points"). Thus, the sweep points are not editable for this result display. If the "Record Length" is edited, the sweep points are adapted automatically. For record lengths outside

the valid range of sweep points, i.e. less than 101 points or more than 32001 points, the diagram does not show valid results.

Remote command:
`[SENSe:]SWEep:POINts` on page 247

Sweep/Average Count
Defines the number of sweeps to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in all diagrams.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, this value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count =1, no averaging, maxhold or minhold operations are performed.

Remote command:
`[SENSe:]SWEep:COUNt` on page 247
`[SENSe:]AVERage:COUNt` on page 250

Continuous Sweep/RUN CONT
While the measurement is running, the "Continuous Sweep" softkey and the RUN CONT key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, the "Continuous Sweep" softkey only controls the sweep mode for the currently selected channel; however, the sweep mode only has an effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in continuous sweep mode is swept repeatedly. Furthermore, the RUN CONT key on the front panel controls the Sequencer, not individual sweeps. RUN CONT starts the Sequencer in continuous mode.

Remote command:
`INITiate:CONTinuous` on page 244

Single Sweep/ RUN SINGLE
After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, the "Single Sweep" softkey and the RUN SINGLE key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, the "Single Sweep" softkey only controls the sweep mode for the currently selected channel; however, the sweep mode only has an effect the next time the Sequencer activates that channel, and only for a channel-defined sequence. In this case, a channel in single sweep mode is swept only once by the Sequencer.
Furthermore, the RUN SINGLE key on the front panel controls the Sequencer, not individual sweeps. RUN SINGLE starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed measurement channel is updated.

For details on the Sequencer, see the R&S FSW User Manual.

Remote command:
`INITiate[:IMMediate]` on page 244

Continue Single Sweep
After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.

While the measurement is running, the "Continue Single Sweep" softkey and the RUN SINGLE key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:
`INITiate:CONMeas` on page 243

6.9 Display Configuration

The captured signal can be displayed using various evaluation methods. All evaluation methods available for the current application are displayed in the evaluation bar in SmartGrid mode when you do one of the following:

- Select the "SmartGrid" icon from the toolbar.
- Select the "Display Config" button in the "Overview".
- Select the "Display Config" softkey in the main application menu.

For a description of the available evaluation methods see chapter 4, "Measurement and Result Displays", on page 16.

As of firmware version 1.60, up to 6 evaluations can be displayed in the I/Q Analyzer at any time, including several graphical diagrams, marker tables or peak lists.

The selected evaluation method not only affects the result display in a window, but also the results of the trace data query in remote control (see `TRACe<n>[:DATA]?` on page 276).

6.10 Adjusting Settings Automatically

Some settings can be adjusted by the R&S FSW automatically according to the current measurement settings. In order to do so, a measurement is performed. The duration of this measurement can be defined automatically or manually.

To activate the automatic adjustment of a setting, select the corresponding function in the AUTO SET menu or in the configuration dialog box for the setting, where available.

MSRA operating mode

In MSRA operating mode, settings related to data acquisition can only be adjusted automatically for the MSRA Master, not the applications.

Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust funtion for a triggered measurement, you are asked how the R&S FSW should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger.
  The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows:
  – For IF Power and RF Power triggers:
  Trigger Level = Reference Level - 15 dB
  – For Video trigger:
  Trigger Level = 85 %

Remote command:

`[SENSe:]ADJust:CONFigure:TRIG` on page 234

Adjusting all Determinable Settings Automatically (Auto All)....117
Adjusting the Center Frequency Automatically (Auto Freq)....117
Setting the Reference Level Automatically (Auto Level)....118
Resetting the Automatic Measurement Time (Meastime Auto)....118
Changing the Automatic Measurement Time (Meastime Manual)....118
Upper Level Hysteresis....118
Lower Level Hysteresis....118

Adjusting all Determinable Settings Automatically (Auto All)

Activates all automatic adjustment functions for the current measurement settings.

This includes:

- Auto Frequency
- Auto Level

Remote command:

`[SENSe:]ADJust:ALL` on page 232

Adjusting the Center Frequency Automatically (Auto Freq)

This function adjusts the center frequency automatically.

The optimum center frequency can be determined as the highest frequency level in the frequency span. As this function uses the signal counter, it is intended for use with sinusoidal signals.

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17).

Remote command:

`[SENSe:]ADJust:FREQuency` on page 234

Setting the Reference Level Automatically (Auto Level)
Automatically determines the optimal reference level for the current input data. At the same time, the internal attenuators and the preamplifier (for analog baseband input: the fullscale level) are adjusted so the signal-to-noise ratio is optimized, while signal compression, clipping and overload conditions are minimized.

In order to do so, a level measurement is performed to determine the optimal reference level.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meastime Manual)" on page 118).

Remote command:
`[SENSe:]ADJust:LEVel` on page 235

Resetting the Automatic Measurement Time (Meastime Auto)
Resets the measurement duration for automatic settings to the default value.

Remote command:
`[SENSe:]ADJust:CONFigure:DURation:MODE` on page 233

Changing the Automatic Measurement Time (Meastime Manual)
This function allows you to change the measurement duration for automatic setting adjustments. Enter the value in seconds.

Remote command:
`[SENSe:]ADJust:CONFigure:DURation:MODE` on page 233
`[SENSe:]ADJust:CONFigure:DURation` on page 233

Upper Level Hysteresis
When the reference level is adjusted automatically using the Auto Level function, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Remote command:
`[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer` on page 234

Lower Level Hysteresis
When the reference level is adjusted automatically using the Auto Level function, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:
`[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer` on page 233

6.11 Configuring an I/Q Analyzer as an MSRA Application

In principle, the I/Q Analyzer in MSRA mode is configured as in Signal and Spectrum Analyzer mode.

However, as of firmware version 1.60, the I/Q Analyzer application (*not Master*) in MSRA mode can also perform measurements on the captured I/Q data in the time and frequency domain (see also chapter 5.6, "I/Q Analyzer in MSRA Operating Mode", on page 54). Which type of measurement is to be performed - conventional I/Q data analysis or a time or frequency domain measurement - is selected in the "Select Measurement" dialog box, which is now displayed when you do one of the following:

- In the "I/Q Analyzer" menu, select the "Select Meas" softkey.
- Press the MEAS key.

The common measurements as in the Spectrum application are listed. In addition, "IQ Analyzer" is provided under "Basic Measurements" to return to the default I/Q Analysis functions.

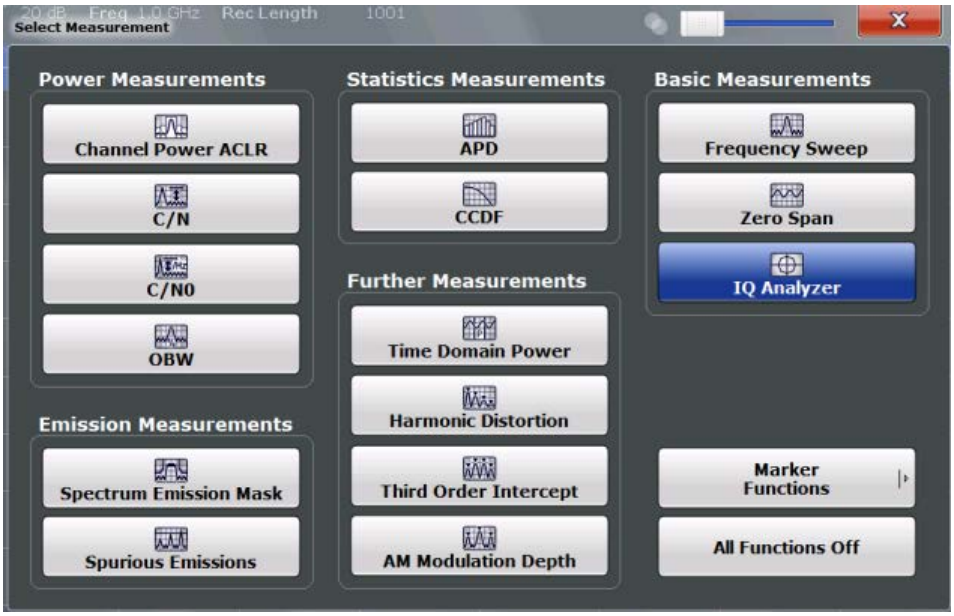

The time and frequency domain measurements and the required settings are described in detail in the R&S FSW User Manual.

Multiple measurements

Only one measurement type can be configured per channel; however, several channels for time or frequency-based measurements on I/Q data can be configured in parallel on the R&S FSW. Thus, you can configure one channel for conventional I/Q Analysis, for example, and another for an SEM or power measurement on the same data. Then you can switch through the results easily by switching tabs, or monitor all results at the same time in the "MSRA View".

Remote command:

CALCulate:IQ:MODE on page 153

7 Analysis

General result analysis settings concerning the trace, markers, lines etc. can be configured via the "Analysis" button in the "Overview". They are identical to the analysis functions in the Spectrum application except for the special marker functions, which are not available for I/Q data.

In MSRA operating mode, an additional analysis line is available. For details see the R&S FSW MSRA User Manual.

The remote commands required to perform these tasks are described in chapter 7, "Analysis", on page 121.

Analysis functions exclusive to I/Q data:

- Trace Settings.....121
- Marker Usage.....124
- Zoom Functions.....135

7.1 Trace Settings

You can configure the settings for up to 6 individual traces.

Trace settings can be configured via the TRACE key, in the "Traces" dialog box, or in the vertical "Traces" tab of the "Analysis" dialog box.

For I/Q Vector evaluation mode, only 1 trace is available and the detector is not editable.

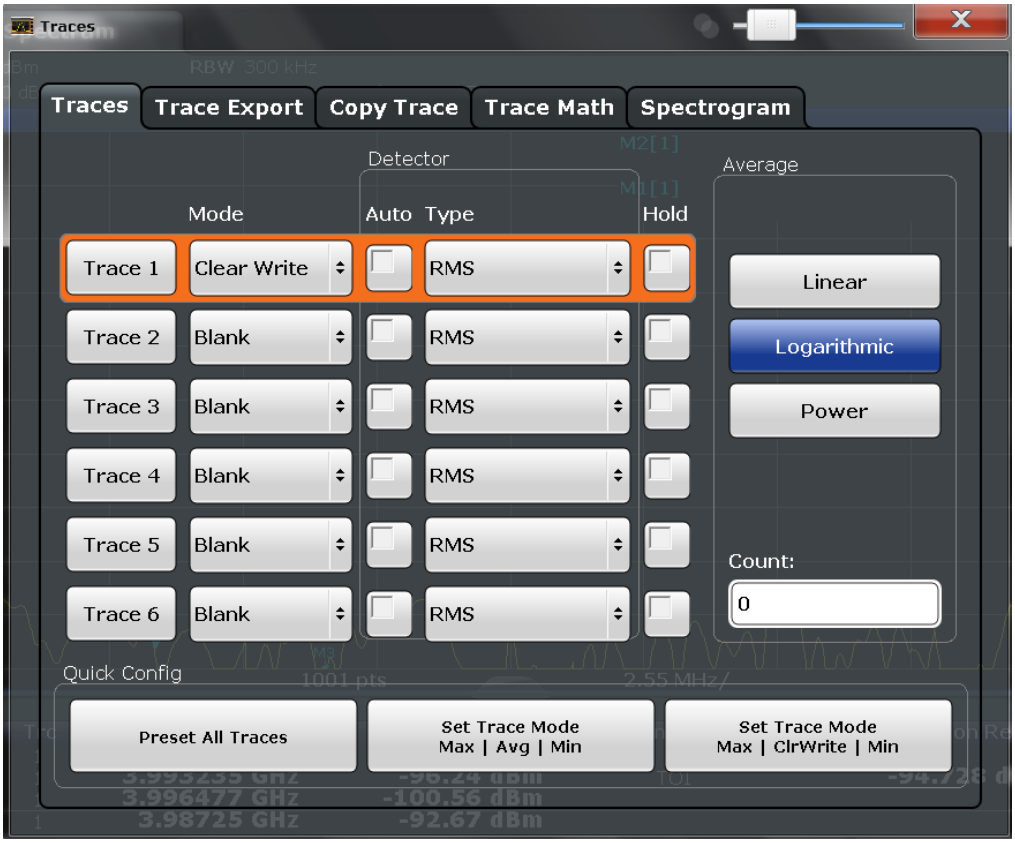

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6 122
Trace Mode 122
Detector 123
Hold 123
Average Mode 123
Predefined Trace Settings - Quick Config 124
Trace 1/Trace 2/Trace 3/Trace 4 (Softkeys) 124

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the corresponding trace for configuration. The currently selected trace is highlighted orange.

Remote command:
Selected via numeric suffix of:`TRACe<1...6>` commands

Trace Mode
Defines the update mode for subsequent traces.

"Clear Write" Overwrite mode: the trace is overwritten by each sweep. This is the default setting.
The "Detector" is automatically set to "Auto Peak".

"Max Hold" The maximum value is determined over several sweeps and displayed. The R&S FSW saves the sweep result in the trace memory only if the new value is greater than the previous one.
The "Detector" is automatically set to "Positive Peak".

"Min Hold" The minimum value is determined from several measurements and displayed. The R&S FSW saves the sweep result in the trace memory only if the new value is lower than the previous one.
The "Detector" is automatically set to "Negative Peak".

"Average" The average is formed over several sweeps.
The Sweep/Average Count determines the number of averaging procedures.
The "Detector" is automatically set to "Sample".

"View" The current contents of the trace memory are frozen and displayed.

"Blank" Removes the selected trace from the display.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:MODE` on page 249

Detector
Defines the trace detector to be used for trace analysis.

"Auto" Selects the optimum detector for the selected trace and filter mode. This is the default setting.

"Type" Defines the selected detector type.

Note: If the EMI (R&S FSW-K54) measurement option is installed and the filter type "CISPR" is selected, additional detectors are available, even if EMI measurement is not active.

Remote command:
`[SENSe:][WINDow:]DETector<trace>[:FUNCtion]` on page 251
`[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO` on page 252

Hold
If activated, traces in "Min Hold", "Max Hold" and "Average" mode are not reset after specific parameter changes have been made.

Normally, the measurement is started anew after parameter changes, before the measurement results are analyzed (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

The default setting is off.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous` on page 250

Average Mode
Defines the mode with which the trace is averaged over several sweeps. A different averaging mode can be defined for each trace.

This setting is only applicable if trace mode "Average" is selected.

How many sweeps are averaged is defined by the "Sweep/Average Count" on page 115.

"Linear" The power level values are converted into linear units prior to averaging. After the averaging, the data is converted back into its original unit.

"Logarithmic" For logarithmic scaling, the values are averaged in dBm. For linear scaling, the behavior is the same as with linear averaging.

"Power" Activates linear power averaging.
The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.
Use this mode to average power values in Volts or Amperes correctly.

Remote command:
`[SENSe:]AVERage<n>:TYPE` on page 251

Predefined Trace Settings - Quick Config
Commonly required trace settings have been predefined and can be applied very quickly by selecting the appropriate button.

Function	Trace Settings	
Preset All Traces	Trace 1:	Clear Write
	Traces 2-6:	Blank
Set Trace Mode Max | Avg | Min	Trace 1:	Max Hold
	Trace 2:	Average
	Trace 3:	Min Hold
	Traces 4-6:	Blank
Set Trace Mode Max | ClrWrite | Min	Trace 1:	Max Hold
	Trace 2:	Clear Write
	Trace 3:	Min Hold
	Traces 4-6:	Blank

Trace 1/Trace 2/Trace 3/Trace 4 (Softkeys)
Displays the "Traces" settings and focuses the "Mode" list for the selected trace.

Remote command:
`DISPlay[:WINDow<n>]:TRACe<t>[:STATe]` on page 250

7.2 Marker Usage

The following marker settings and functions are available in the I/Q Analyzer application.

For "I/Q Vector" displays markers are not available.

In the I/Q Analyzer application, the resolution with which the frequency can be measured with a marker is always the filter bandwidth, which is derived from the defined sample rate (see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22).

As of firmware version 1.60, marker settings are window-specific, since several diagrams can be displayed at the same time now.

- Marker Settings....125
- Marker Search Settings and Positioning Functions....129
- Marker Peak List Configuration....133

7.2.1 Marker Settings

Marker settings can be configured via the MARKER key or in the "Marker" dialog box. To display the "Marker" dialog box, do one of the following:

- Press the MKR key, then select the "Marker Config" softkey.
- In the "Overview", select "Analysis", and switch to the vertical "Marker" tab.

The remote commands required to define these settings are described in chapter 10.7.2.1, "Setting Up Individual Markers", on page 253.

- Individual Marker Setup....125
- General Marker Settings....128

7.2.1.1 Individual Marker Setup

Up to 17 markers or delta markers can be activated for each window simultaneously. Initial marker setup is performed using the "Marker" dialog box.

The markers are distributed among 3 tabs for a better overview. By default, the first marker is defined as a normal marker, whereas all others are defined as delta markers with reference to the first marker. All markers are assigned to trace 1, but only the first marker is active.

Selected Marker....126
Marker State....126
Marker Position (X-value)....127
Marker Type....127
Reference Marker....127
Linking to Another Marker....127
Assigning the Marker to a Trace....127
Select Marker....128
All Markers Off....128

Selected Marker
Marker name. The marker which is currently selected for editing is highlighted orange.

Remote command:
Marker selected via suffix <m> in remote commands.

Marker State
Activates or deactivates the marker in the diagram.

Remote command:
`CALCulate<n>:MARKer<m>[:STATe]` on page 256
`CALCulate<n>:DELTamarker<m>[:STATe]` on page 255

Marker Position (X-value)
Defines the position (x-value) of the marker in the diagram.

Remote command:
CALCulate<n>:MARKer<m>:X on page 257
CALCulate<n>:DELTamarker<m>:X on page 255

Marker Type
Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

Note: If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal" A normal marker indicates the absolute value at the defined position in the diagram.

"Delta" A delta marker defines the value of the marker relative to the specified reference marker (marker 1 by default).

Remote command:
CALCulate<n>:MARKer<m>[:STATe] on page 256
CALCulate<n>:DELTamarker<m>[:STATe] on page 255

Reference Marker
Defines a marker as the reference marker which is used to determine relative analysis results (delta marker values).

Remote command:
CALCulate<n>:DELTamarker<m>:MREF on page 254

Linking to Another Marker
Links the current marker to the marker selected from the list of active markers. If the x-axis value of the inital marker is changed, the linked marker follows on the same x-position. Linking is off by default.

Using this function you can set two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

Remote command:
CALCulate<n>:MARKer<m1>:LINK:TO:MARKer<m2> on page 256
CALCulate<n>:DELTamarker<m1>:LINK:TO:MARKer<m2> on page 254
CALCulate<n>:DELTamarker<m>:LINK on page 253

Assigning the Marker to a Trace
The "Trace" setting assigns the selected marker to an active trace. The trace determines which value the marker shows at the marker position. If the marker was previously assigned to a different trace, the marker remains on the previous frequency or time, but indicates the value of the new trace.

The marker can also be assigned to the currently active trace using the "Marker to Trace" softkey in the "Marker" menu.

If a trace is turned off, the assigned markers and marker functions are also deactivated.

Remote command:
CALCulate<n>:MARKer<m>:TRACe on page 256

Select Marker
Opens a dialog box to select and activate or deactivate one or more markers quickly.

Remote command:
Marker selected via suffix <m> in remote commands.

All Markers Off
Deactivates all markers in one step.

Remote command:
CALCulate<n>:MARKer<m>:AOFF on page 256

7.2.1.2 General Marker Settings

Some general marker settings allow you to influence the marker behavior for all markers.

These settings are located in the "Marker Settings" tab of the "Marker" dialog box. To display this tab, do one of the following:

- Press the MKR key, then select the "Marker Config" softkey.
- In the "Overview", select "Analysis", and switch to the vertical "Marker" tab. Then select the horizontal "Marker Settings" tab.

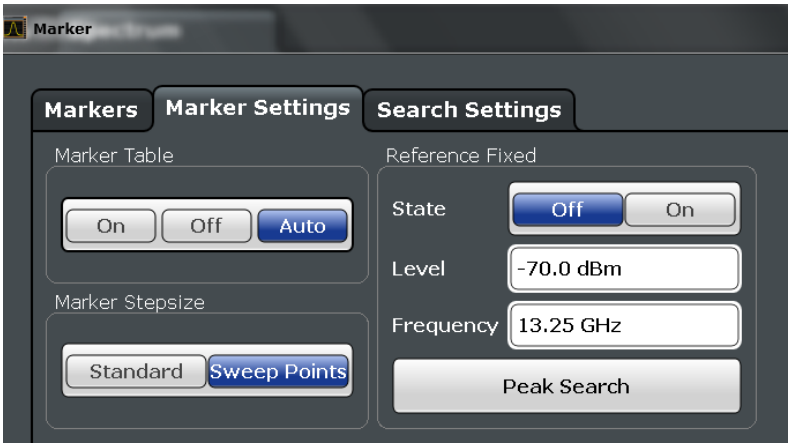

Marker Table Display.....129
Marker Stepsize.....129

Marker Table Display
Defines how the marker information is displayed.

"On" Displays the marker information in a table in a separate area beneath the diagram.

"Off" Displays the marker information within the diagram area.

"Auto" (Default) Up to two markers are displayed in the diagram area. If more markers are active, the marker table is displayed automatically.

Remote command:
`DISPlay:MTABle` on page 257

Marker Stepsize
Defines the size of the steps that the marker position is moved using the rotary knob.

"Standard" The marker position is moved from pixel to pixel on the display. This is the default and most suitable to move the marker over a larger distance.

"Sweep Points" The marker position is moved from one sweep point to the next. This setting is required for a very precise positioning if more sweep points are collected than the number of pixels that can be displayed on the screen.

Remote command:
`CALCulate:MARKer:X:SSIZe` on page 257

7.2.2 Marker Search Settings and Positioning Functions

Several functions are available to set the marker to a specific position very quickly and easily, or to use the current marker position to define another characteristic value. In order to determine the required marker position, searches may be performed. The search results can be influenced by special settings.

Most marker positioning functions and the search settings are available in the MKR -> menu.

Search settings are also available via the MARKER key or in the vertical "Marker Config" tab of the "Analysis" dialog box (horizontal "Search Settings" tab).

In I/Q Analyzer mode, the search settings for "Real/Imag (I/Q)" evaluation include an additional parameter, see "Branch for Peak Search" on page 132.

The remote commands required to define these settings are described in chapter 10.7.2.4, "Positioning the Marker", on page 261.

- Marker Search Settings....130
- Positioning Functions....132

7.2.2.1 Marker Search Settings

Markers are commonly used to determine peak values, i.e. maximum or minimum values, in the measured signal. Configuration settings allow you to influence the peak search results.

These settings are are available as softkeys in the "Marker To" menu, or in the "Search Settings" tab of the "Marker" dialog box. To display this tab, do one of the following:

- Press the MKR key, then select the "Marker Config" softkey. Then select the horizontal "Search Settings" tab.
- In the "Overview", select "Analysis", and switch to the vertical "Marker Config" tab. Then select the horizontal "Search Settings" tab.

Search Mode for Next Peak....130
Peak Excursion....131
Search Limits....131
└ Search Limits (Left / Right)....131
└ Search Threshold....131
└ Using Zoom Limits....132
└ Deactivating All Search Limits....132
Branch for Peak Search....132

Search Mode for Next Peak
Selects the search mode for the next peak search.

"Left" Determines the next maximum/minimum to the left of the current peak.

"Absolute" Determines the next maximum/minimum to either side of the current peak.

"Right" Determines the next maximum/minimum to the right of the current peak.

Remote command:
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT on page 264
CALCulate<n>:MARKer<m>:MAXimum:LEFT on page 262
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 264
CALCulate<n>:MARKer<m>:MAXimum:NEXT on page 262
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt on page 264
CALCulate<n>:MARKer<m>:MAXimum:RIGHt on page 262
CALCulate<n>:DELTamarker<m>:MINimum:LEFT on page 264
CALCulate<n>:MARKer<m>:MINimum:LEFT on page 263
CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 265
CALCulate<n>:MARKer<m>:MINimum:NEXT on page 263
CALCulate<n>:DELTamarker<m>:MINimum:RIGHt on page 265
CALCulate<n>:MARKer<m>:MINimum:RIGHt on page 263

Peak Excursion
Defines the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

Remote command:
CALCulate<n>:MARKer:PEXCursion on page 258

Search Limits
The search results can be restricted by limiting the search area or adding search conditions.

Search Limits (Left / Right) ← Search Limits
If activated, limit lines are defined and displayed for the search. Only results within the limited search range are considered.

Remote command:
CALCulate:MARKer:X:SLIMits[:STATe] on page 259
CALCulate:MARKer:X:SLIMits:LEFT on page 259
CALCulate:MARKer:X:SLIMits:RIGHT on page 260

Search Threshold ← Search Limits
Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Remote command:
CALCulate:THReshold on page 260

Using Zoom Limits ← Search Limits
If activated, the peak search is restricted to the active zoom area defined for a single zoom (see "Single Zoom" on page 135).

Remote command:
CALCulate:MARKer:X:SLIMits:ZOOM[:STATe] on page 260

Deactivating All Search Limits ← Search Limits
Deactivates the search range limits.

Remote command:
CALCulate:MARKer:X:SLIMits[:STATe] on page 259
CALCulate:THReshold:STATe on page 261

Branch for Peak Search
Defines which data is used for marker search functions in I/Q data.

This function is only available for the display configuration "Real/Imag (I/Q)" (see "Real/Imag (I/Q)" on page 18).

Note: The search settings apply to all markers, not only the currently selected one.

"Real"
Marker search functions are performed on the real trace of the I/Q measurement.

"Imag"
Marker search functions are performed on the imaginary trace of the I/Q measurement.

"Magnitude"
Marker search functions are performed on the magnitude of the I and Q data.

Remote command:
CALCulate<n>:MARKer:SEARch on page 259

7.2.2.2 Positioning Functions

The following functions set the currently selected marker to the result of a peak search or set other characteristic values to the current marker value. These functions are available as softkeys in the "Marker To" menu, which is displayed when you press the MKR -> key.

Peak Search....133
Search Next Peak....133
Search Minimum....133
Search Next Minimum....133
Center Frequency = Marker Frequency....133
Reference Level = Marker Level....133

Peak Search
Sets the selected marker/delta marker to the maximum of the trace. If no marker is active, marker 1 is activated.

Remote command:
CALCulate<n>:MARKer<m>:MAXimum[:PEAK] on page 262
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK] on page 264

Search Next Peak
Sets the selected marker/delta marker to the next (lower) maximum of the assigned trace. If no marker is active, marker 1 is activated.

Remote command:
CALCulate<n>:MARKer<m>:MAXimum:NEXT on page 262
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 264

Search Minimum
Sets the selected marker/delta marker to the minimum of the trace. If no marker is active, marker 1 is activated.

Remote command:
CALCulate<n>:MARKer<m>:MINimum[:PEAK] on page 263
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK] on page 265

Search Next Minimum
Sets the selected marker/delta marker to the next (higher) minimum of the selected trace. If no marker is active, marker 1 is activated.

Remote command:
CALCulate<n>:MARKer<m>:MINimum:NEXT on page 263
CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 265

Center Frequency = Marker Frequency
Sets the center frequency to the selected marker or delta marker frequency. A peak can thus be set as center frequency, for example to analyze it in detail with a smaller span.

This function is not available for zero span measurements.

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:CENTer on page 214

Reference Level = Marker Level
Sets the reference level to the selected marker level.

Remote command:
CALCulate<n>:MARKer<m>:FUNCtion:REFerence on page 208

7.2.3 Marker Peak List Configuration

To display the "Marker Peak List" dialog, do one of the following:

- Press the MKR FUNC key, then select the "Marker Peak List" softkey.
- In the "Overview", select "Analysis", and switch to the vertical "Peak List" tab.

Peak List State....134
Sort Mode....134
Maximum Number of Peaks....134
Peak Excursion....134
Displaying Marker Numbers....135
Exporting the Peak List....135

Peak List State
Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

For each listed peak the frequency/time ("X-value") and level ("Y-value") values are given.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT` on page 267

Sort Mode
Defines whether the peak list is sorted according to the x-values or y-values. In either case the values are sorted in ascending order.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT` on page 267

Maximum Number of Peaks
Defines the maximum number of peaks to be determined and displayed.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE` on page 266

Peak Excursion
Defines the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

Remote command:
`CALCulate<n>:MARKer:PEXCursion` on page 258

Displaying Marker Numbers
By default, the marker numbers are indicated in the diagram so you can find the peaks from the list. However, for large numbers of peaks the marker numbers may decrease readability; in this case, deactivate the marker number display.

Remote command:
`CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe]` on page 265

Exporting the Peak List
The peak list can be exported to an ASCII file (`.DAT`) for analysis in an external application.

Remote command:
`MMEMory:STORe:LIST` on page 279
`FORMat:DEXPort:DSEParator` on page 275

7.3 Zoom Functions

The zoom functions are only available from the toolbar.

Single Zoom....135
Multiple Zoom....135
Restore Original Display....136
Deactivating Zoom (Selection mode)....136

Single Zoom

A single zoom replaces the current diagram by a new diagram which displays an enlarged extract of the trace. This function can be used repetitively until the required details are visible.

Remote command:
`DISPlay[:WINDow<n>]:ZOOM:STATe` on page 268
`DISPlay[:WINDow<n>]:ZOOM:AREA` on page 268

Multiple Zoom

In multiple zoom mode, you can enlarge several different areas of the trace simultaneously. An overview window indicates the zoom areas in the original trace, while the zoomed trace areas are displayed in individual windows. The zoom area that corresponds to the individual zoom display is indicated in the lower right corner, between the scrollbars.

Remote command:
`DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:STATe` on page 269
`DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:AREA` on page 269

Restore Original Display

Restores the original display and closes all zoom windows.

Remote command:
DISPlay[:WINDow<n>]:ZOOM:STATe on page 268 (single zoom)
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:STATe on page 269 (for each multiple zoom window)

Deactivating Zoom (Selection mode)

Deactivates zoom mode; tapping the screen no longer invokes a zoom, but selects an object.

Remote command:
DISPlay[:WINDow<n>]:ZOOM:STATe on page 268 (single zoom)
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:STATe on page 269 (for each multiple zoom window)

8 How to Work with I/Q Data

The following step-by-step procedures demonstrate in detail how to perform various tasks when working with I/Q data.

- How to Perform Measurements in the I/Q Analyzer Application.....137
- How to Capture or Output I/Q Data via Optional Interfaces (R&S FSW-B17/-B71) 139
- How to Export and Import I/Q Data.....143

8.1 How to Perform Measurements in the I/Q Analyzer Application

The following step-by-step instructions demonstrate how to capture I/Q data on the R&S FSW and how to analyze data in the I/Q Analyzer application.

How to perform a measurement in the time or frequency domain on I/Q data (in MSRA mode only) is described in the R&S FSW MSRA User Manual.

- How to Capture Baseband (I/Q) Data as RF Input.....137
- How to Analyze Data in the I/Q Analyzer.....138

8.1.1 How to Capture Baseband (I/Q) Data as RF Input

By default, the I/Q Analyzer assumes the I/Q data is modulated on a carrier frequency and input via the RF INPUT connector on the R&S FSW.

1. Press the MODE key on the front panel and select the "I/Q Analyzer" application.
2. Select the "Overview" softkey to display the "Overview" for an I/Q Analyzer measurement.
3. Select the "Input" button to select and configure the "RF Input" signal source.
4. Select the "Amplitude" button to define the attenuation, reference level or other settings that affect the input signal's amplitude and scaling.
5. Select the "Frequency" button to define the input signal's center frequency.
6. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example an IQ Power trigger to start capturing data only when a specific power is exceeded.
7. Select the "Bandwidth" button and define the bandwidth parameters for data acquisition:

- "Sample rate" or "Analysis Bandwidth:" the span of the input signal to be captured for analysis, or the rate at which samples are captured (both values are correlated)
- Optionally, if R&S FSW-B160/-B320 is installed, the "Maximum Bandwidth", depending on whether you require a larger bandwidth or fewer spurious emissions.
- "Measurement Time:" how long the data is to be captured
- "Record Length": the number of samples to be captured (also defined by sample rate and measurement time)

8. Select the "Display Config" button and select up to six displays that are of interest to you.
   Arrange them on the display to suit your preferences.
9. Exit the SmartGrid mode.
10. Start a new sweep with the defined settings.
    In MSRA mode you may want to stop the continuous measurement mode by the Sequencer and perform a single data acquisition:
    a) Select the Sequencer icon ( ) from the toolbar.
    b) Set the Sequencer state to "OFF".
    c) Press the RUN SINGLE key.

8.1.2 How to Analyze Data in the I/Q Analyzer

1. Press the MODE key on the front panel and select the "I/Q Analyzer" application.
2. Select the "Overview" softkey to display the "Overview" for an I/Q Analyzer measurement.
3. Select the "Display Config" button and select up to six displays that are of interest to you.
   Arrange them on the display to suit your preferences.
4. Exit the SmartGrid mode and select the "Overview" softkey to display the "Overview" again.
5. Select the "Analysis" button in the "Overview" to make use of the advanced analysis functions in the displays.
   - Configure a trace to display the average over a series of sweeps (on the "Trace" tab; if necessary, increase the "Average Count").
   - Configure markers and delta markers to determine deviations and offsets within the signal (on the "Marker" tab).

8.2 How to Capture or Output I/Q Data via Optional Interfaces (R&S FSW-B17/-B71)

The following step-by-step instructions demonstrate how to capture I/Q data on the R&S FSW using the optional Digital Baseband Interface (R&S FSW-B17) or the Analog Baseband Interface (R&S FSW-B71).

- How to Capture Data via the Optional Digital Baseband Interface (R&S FSW-B17) 139
- How to Capture Analog Baseband Input via the Optional Analog Baseband Interface (R&S FSW-B71).....140
- How to Capture Data from the Optional Baseband Input Connectors (R&S FSW-B71) as RF Input.....142
- How to Output I/Q Data via the Optional Digital Baseband Interface (R&S FSW-B17) 143

8.2.1 How to Capture Data via the Optional Digital Baseband Interface (R&S FSW-B17)

Alternatively to capturing (analog) I/Q data from the standard RF Input connector on the front panel of the R&S FSW, digital I/Q data can be captured from the optional **Digital Baseband Interface (R&S FSW-B17)**, if installed.

The digital input and output cannot be used simultaneously.

1. Connect the device that provides digital input to the DIGITAL BASEBAND INPUT connector at the rear of the R&S FSW.
2. Press the INPUT/OUTPUT key on the front panel of the R&S FSW.
3. Select "Input Source Config" and switch to the "Digital IQ" tab to configure the Digital Baseband Interface.

   Information on the detected input device is shown under "Connected Instrument".
4. Set the state of the "Digital IQ" signal source to "On".
5. Define the "Sample Rate" as provided by the connected device, or select "Auto" mode to have it set automatically according to the detected device.
6. Define the level and unit that corresponds to an I/Q sample with the magnitude "1" as the "Full scale level", or select "Auto" mode to have it set automatically according to the input from the detected device.
7. Enable the "Adjust Reference Level to Full Scale Level" option to adjust the reference level to input changes continuously, or press the AMPT key to define the reference level manually. Select the "Amplitude Config" softkey to change the reference level offset or to set the level automatically only once.

8. Select the "Frequency" button to define the input signal's center frequency.
9. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example a Baseband Power trigger to start capturing data only when a specific input power is exceeded.
10. Select the "Bandwidth" button and define the bandwidth parameters for data acquisition:
    - "Sample rate" (the rate at which samples are captured) or "Analysis Bandwidth" (the span of the input signal to be captured for analysis); both values are correlated
    - Optionally, enable "No Filter" to suppress the use of the digital decimation filter and increase the analysis bandwidth to the input sample rate from the connected device.
    - "Measurement Time:" how long the data is to be captured
    - "Record Length": the number of samples to be captured (also defined by sample rate and measurement time)
11. Select the "Display Config" button and select up to six displays that are of interest to you.
    Arrange them on the display to suit your preferences.
12. Exit the SmartGrid mode.
13. Start a new sweep with the defined settings.

8.2.2 How to Capture Analog Baseband Input via the Optional Analog Baseband Interface (R&S FSW-B71)

Analog baseband signals can also be captured via the optional **Analog Baseband Interface (R&S FSW-B71)**, if installed.

1. Connect the device that provides analog baseband input to the BASEBAND INPUT connectors at the front of the R&S FSW.
   For single-ended input signals, use the I or Q connector, or both.
   For differential input signals, connect the positive input to the I and Q connectors, and the negative input to the $\bar{I}$ and $\bar{Q}$ connectors.
2. Press the INPUT/OUTPUT key on the front panel of the R&S FSW.
3. Select "Input Source Config" and switch to the "Analog Baseband" tab to configure the Analog Baseband Interface.
   a) Set the state of the "Analog Baseband" signal source to "On".
   b) Select the "I/Q Mode" depending on the signal at the input connectors, or how you want to interpret it.

c) If necessary, change the input configuration setting depending on whether a single-ended or differential signal is being input.
Note that both differential and single-ended active probes are supported. However, since a probe only uses a single connector (either BASEBAND INPUT I or Q), the input configuration must be set to single-ended. The type of probe is indicated in the "Probes" subtab of the Input dialog box.

d) If necessary, for example due to a mixed up connection or inverse data from the connected device, swap the I and Q values for correct analysis.

e) If only one component of the input signal is of interest (I/Q mode: "I only/ Low IF I" or "Q only/ Low IF Q"), define how to interpret the signal: as modulated or real data. For modulated data, change the "Center Frequency" to use for down-conversion. Select a value between 10 Hz and +40 MHz (or 80 MHz with option R&S FSW-B71E).

4. Press the AMPT key and select "Amplitude Config".
5. Define the reference level for the input. If a probe is connected, consider the probe's attenuation when defining the reference level.
6. Select the maximum power level you expect to input at the BASEBAND INPUT connector as the "Full scale level", or select "Auto" mode to have it set automatically according to the selected reference level.
7. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example a Baseband Power trigger to start capturing data only when a specific input power is exceeded.
8. Press the MEAS CONFIG key and select "Data Acquisition" to configure the signal capture.
   - "Sample rate" selected for analysis data or "Analysis Bandwidth" (the bandwidth range in which the signal remains unchanged by the digital decimation filter and thus remains undistorted; this range can be used for accurate analysis by the R&S FSW); both values are correlated
   - "Measurement Time:" how long the signal is to be captured
   - "Record Length": the number of samples to be captured (also defined by sample rate and measurement time)
9. Select the "Display Config" button and select up to six displays that are of interest to you.
   To analyze the complex spectrum of the analog baseband signal, for instance, select the Spectrum result display (and the I/Q mode "I+jQ" in the input settings). The displayed span corresponds to the selected sample rate.
   Arrange the windows on the display to suit your preferences.
10. Exit the SmartGrid mode.
11. Start a new sweep with the defined settings.

8.2.3 How to Capture Data from the Optional Baseband Input Connectors (R&S FSW-B71) as RF Input

RF signals can also be input via the optional BASEBAND INPUT connectors, if the Analog Baseband Interface (option R&S FSW-B71) is installed. Thus, RF signals can also be input using an active R&S probe. The probe input can then be processed as common RF input.

1. Connect the device (for example a probe) that provides analog baseband data modulated on a carrier frequency to the BASEBAND INPUT I connector at the front of the R&S FSW.
2. Press the INPUT/OUTPUT key on the front panel of the R&S FSW.
3. Select the "Input Source Config" button to configure the "Radio Frequency" signal source.
4. Set the state of the "Radio Frequency" signal source to "On".
5. As the "Input Connector", select "Baseband Input I".
6. Select the "Amplitude" button to define the attenuation, reference level or other settings that affect the input signal's amplitude and scaling.
7. Select the "Frequency" button to define the input signal's center frequency.
8. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example an IQ Power trigger to start capturing data only when a specific power is exceeded.
9. Select the "Bandwidth" button and define the bandwidth parameters for data acquisition:
   - "Sample rate" or "Analysis Bandwidth:" the span of the input signal to be captured for analysis, or the rate at which samples are captured (both values are correlated)
   - Optionally, if R&S FSW-B160/-B320 is installed, the "Maximum Bandwidth", depending on whether you require a larger bandwidth or fewer spurious emissions.
   - "Measurement Time:" how long the data is to be captured
   - "Record Length": the number of samples to be captured (also defined by sample rate and measurement time)
10. Select the "Display Config" button and select up to six displays that are of interest to you.
    Arrange them on the display to suit your preferences.
11. Exit the SmartGrid mode.
12. Start a new sweep with the defined settings.

8.2.4 How to Output I/Q Data via the Optional Digital Baseband Interface (R&S FSW-B17)

The I/Q data processed by the I/Q Analyzer can also be output to the optional **Digital Baseband Interface (R&S FSW-B17)**, if installed.

The digital input and output cannot be used simultaneously.

1. Connect the device to which digital output will be provided to the DIGITAL BASEBAND OUTPUT connector at the rear of the R&S FSW.
2. Press the INPUT/OUTPUT key on the front panel of the R&S FSW.
3. Select "Output Config" and switch to the "Digital IQ" tab to configure the Digital Baseband output.

   Information on the detected output device is shown under "Connected Instrument". The output settings only become available once a device has been detected.
4. Set the state of the "Digital Baseband Output" to "On".
5. If the maximum sample rate displayed for the detected output device is lower than the currently defined sample rate for the I/Q Analyzer, press the MEAS CONFIG key and select "Data Acquisition" to change the "Sample Rate" setting.
6. Select the "Frequency" button to define the center frequency for the measurement.
7. Optionally, select the "Trigger" button and define a trigger for data acquisition, for example an IQ Power trigger to start capturing data only when a specific power is exceeded.
8. Select the "Display Config" button and select up to six displays that are of interest to you.
   Arrange them on the display to suit your preferences.
9. Exit the SmartGrid mode.
10. Start a new sweep with the defined settings.

    The captured data is written to the Digital Baseband Output connector continuously.

8.3 How to Export and Import I/Q Data

I/Q data can only be exported in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

Capturing and exporting I/Q data

1. Press the PRESET key.
2. Press the MODE key and select the "IQ Analyzer" or any other application that supports I/Q data.
3. Configure the data acquisition.
4. Press the RUN SINGLE key to perform a single sweep measurement.
5. Select the "Save" icon in the toolbar.
6. Select the "I/Q Export" softkey.
7. In the file selection dialog box, select a storage location and enter a file name.
8. Select "Save".

   The captured data is stored to a file with the extension `.iq.tar`.

Importing I/Q data

1. Press the MODE key and select the "IQ Analyzer" or any other application that supports I/Q data.
2. If necessary, switch to single sweep mode by pressing the RUN SINGLE key.
3. Select the "Open" icon in the toolbar.
4. Select the "I/Q Import" softkey.
5. Select the storage location and the file name with the `.iq.tar` file extension.
6. Select "Open".

   The stored data is loaded from the file and displayed in the current application.

Previewing the I/Q data in a web browser

The `iq-tar` file format allows you to preview the I/Q data in a web browser.

1. Use an archive tool (e.g. WinZip® or PowerArchiver®) to unpack the `iq-tar` file into a folder.
2. Locate the folder using Windows Explorer.
3. Open your web browser.

4. Drag the I/Q parameter XML file, e.g. `example.xml`, into your web browser.

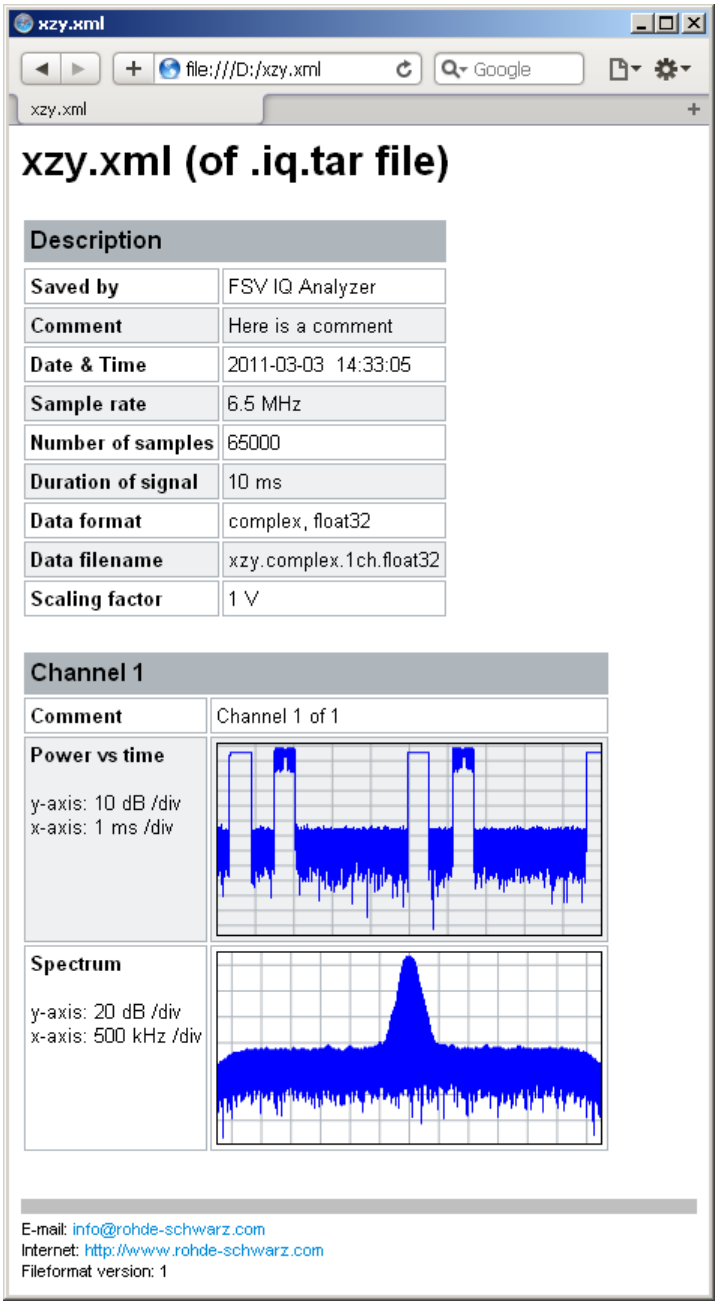

9 Optimizing and Troubleshooting the Measurement

If the results do not meet your expectations, try the following methods to optimize the measurement:

Error Messages

If errors occur during I/Q data acquisition or data output using the Digital Baseband Interface (R&S FSW-B17) , a message is displayed in the status bar. When data acquisition errors occur, a status bit in the `STATus:QUESTionable:SYNC` register is also set. Errors concerning the Digital Baseband Interface connection between instruments are indicated by a status bit in the `STATus:QUESTionable:DIQ` register. See chapter 10.10, "Querying the Status Registers", on page 281.

The following tables describe the most common errors and possible solutions.

Table 9-1: I/Q data acquisition errors using the Digital Baseband Interface (B17) and possible solutions

Message	Possible solutions
"Sample rate too high in respect to input sample rate!"	• Reduce the sample rate • Increase the input sample rate (See table 5-1)
"Sample rate too low in respect to input sample rate!"	• Increase the sample rate • Reduce the input sample rate (See table 5-1)
"Number of IQ Capture samples too high!"	• Reduce the number of I/Q samples to capture • Decrease the sample rate or increase the input sample rate to reduce the ratio of sample rate / input sample rate
Keyword "DATA ERR"	• Re-establish the Digital I/Q connection NOTE: If this error is indicated repeatedly either the Digital I/Q LVDS connection cable or the receiving or transmitting device might be defect.
Keyword "PLL UNLOCKED"	• Re-establish the Digital I/Q connection after the clock from the input device has been restored

Table 9-2: I/Q data output errors using the Digital Baseband Interface (B17) and possible solutions

Message	Possible solutions
"Sample rate exceeds limit of connected instrument on Digital I/Q OUT port!"	• Reduce the sample rate
Keyword: "FIFO OVLD"	The sample rate on the connected instrument is higher than the input sample rate setting on the R&S FSW. • Reduce the sample rate on the connected instrument • Increase the input sample rate setting on the R&S FSW

10 Remote Commands to Perform Measurements with I/Q Data

The following commands are specific to performing measurements in the I/Q Analyzer application or using the optional Digital Baseband Interface (R&S FSW-B17) in a remote environment. The R&S FSW must already be set up for remote operation in a network as described in the base unit manual.

Note that basic tasks that are also performed in the base unit in the same way are not described here. For a description of such tasks, see the R&S FSW User Manual.

In particular, this includes:

- Basic instrument configuration, e.g. checking the system configuration, customizing the screen layout, or configuring networks and remote operation
- Using the common status registers

The following tasks specific to the I/Q Analyzer application are described here:

- Introduction....147
- Common Suffixes....152
- Activating I/Q Analyzer Measurements....152
- Configuring I/Q Analyzer Measurements....158
- Configuring the Result Display....235
- Capturing Data and Performing Sweeps....242
- I/Q Analysis....248
- Retrieving Results....272
- Importing and Exporting I/Q Data and Results....279
- Querying the Status Registers....281
- Programming Examples....287

10.1 Introduction

Commands are program messages that a controller (e.g. a PC) sends to the instrument or software. They operate its functions ('setting commands' or 'events') and request information ('query commands'). Some commands can only be used in one way, others work in two ways (setting and query). If not indicated otherwise, the commands can be used for settings and queries.

The syntax of a SCPI command consists of a header and, in most cases, one or more parameters. To use a command as a query, you have to append a question mark after the last header element, even if the command contains a parameter.

A header contains one or more keywords, separated by a colon. Header and parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). If there is more than one parameter for a command, these are separated by a comma from one another.

Only the most important characteristics that you need to know when working with SCPI commands are described here. For a more complete description, refer to the User Manual of the R&S FSW.

Remote command examples

Note that some remote command examples mentioned in this general introduction may not be supported by this particular application.

10.1.1 Conventions used in Descriptions

Note the following conventions used in the remote command descriptions:

- **Command usage**
  If not specified otherwise, commands can be used both for setting and for querying parameters.
  If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitely.
- **Parameter usage**
  If not specified otherwise, a parameter can be used to set a value and it is the result of a query.
  Parameters required only for setting are indicated as **Setting parameters**.
  Parameters required only to refine a query are indicated as **Query parameters**.
  Parameters that are only returned as the result of a query are indicated as **Return values**.
- **Conformity**
  Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S FSW follow the SCPI syntax rules.
- **Asynchronous commands**
  A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.
- **Reset values (*RST)**
  Default parameter values that are used directly after resetting the instrument (`*RST` command) are indicated as ***RST** values, if available.
- **Manual operation**
  If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

10.1.2 Long and Short Form

The keywords have a long and a short form. You can use either the long or the short form, but no other abbreviations of the keywords.

The short form is emphasized in upper case letters. Note however, that this emphasis only serves the purpose to distinguish the short from the long form in the manual. For the instrument, the case does not matter.

Example:

`SENSe:FREQuency:CENTer` is the same as `SENS:FREQ:CENT`.

10.1.3 Numeric Suffixes

Some keywords have a numeric suffix if the command can be applied to multiple instances of an object. In that case, the suffix selects a particular instance (e.g. a measurement window).

Numeric suffixes are indicated by angular brackets (<n>) next to the keyword.

If you don't quote a suffix for keywords that support one, a 1 is assumed.

Example:

`DISPlay[:WINDow<1...4>]:ZOOM:STATe` enables the zoom in a particular measurement window, selected by the suffix at `WINDow`.

`DISPlay:WINDow4:ZOOM:STATe ON` refers to window 4.

10.1.4 Optional Keywords

Some keywords are optional and are only part of the syntax because of SCPI compliance. You can include them in the header or not.

Note that if an optional keyword has a numeric suffix and you need to use the suffix, you have to include the optional keyword. Otherwise, the suffix of the missing keyword is assumed to be the value 1.

Optional keywords are emphasized with square brackets.

Example:

Without a numeric suffix in the optional keyword:

`[SENSe:]FREQuency:CENTer` is the same as `FREQuency:CENTer`

With a numeric suffix in the optional keyword:

`DISPlay[:WINDow<1...4>]:ZOOM:STATe`

`DISPlay:ZOOM:STATe ON` enables the zoom in window 1 (no suffix).

`DISPlay:WINDow4:ZOOM:STATe ON` enables the zoom in window 4.

10.1.5 Alternative Keywords

A vertical stroke indicates alternatives for a specific keyword. You can use both keywords to the same effect.

Example:

`[SENSe:]BANDwidth|BWIDth[:RESolution]`

In the short form without optional keywords, `BAND 1MHZ` would have the same effect as `BWID 1MHZ`.

10.1.6 SCPI Parameters

Many commands feature one or more parameters.

If a command supports more than one parameter, these are separated by a comma.

Example:

```
LAYout:ADD:WINDow Spectrum,LEFT,MTABle
```

Parameters may have different forms of values.

- Numeric Values....150
- Boolean....151
- Character Data....151
- Character Strings....152
- Block Data....152

10.1.6.1 Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point or exponent. In case of physical quantities, you can also add the unit. If the unit is missing, the command uses the basic unit.

Example:

with unit: `SENSe:FREQuency:CENTer 1GHZ`

without unit: `SENSe:FREQuency:CENTer 1E9` would also set a frequency of 1 GHz.

Values exceeding the resolution of the instrument are rounded up or down.

If the number you have entered is not supported (e.g. in case of discrete steps), the command returns an error.

Instead of a number, you can also set numeric values with a text parameter in special cases.

- MIN/MAX
  Defines the minimum or maximum numeric value that is supported.
- DEF
  Defines the default value.
- UP/DOWN
  Increases or decreases the numeric value by one step. The step size depends on the setting. In some cases you can customize the step size with a corresponding command.

Querying numeric values

When you query numeric values, the system returns a number. In case of physical quantities, it applies the basic unit (e.g. Hz in case of frequencies). The number of digits after the decimal point depends on the type of numeric value.

Example:

Setting: `SENSe:FREQuency:CENTer 1GHZ`

Query: `SENSe:FREQuency:CENTer?` would return `1E9`

In some cases, numeric values may be returned as text.

- INF/NINF
  Infinity or negative infinity. Represents the numeric values 9.9E37 or -9.9E37.
- NAN
  Not a number. Represents the numeric value 9.91E37. NAN is returned in case of errors.

10.1.6.2 Boolean

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0.

Querying boolean parameters

When you query boolean parameters, the system returns either the value 1 ("ON") or the value 0 ("OFF").

Example:

Setting: `DISPlay:WINDow:ZOOM:STATe ON`

Query: `DISPlay:WINDow:ZOOM:STATe?` would return `1`

10.1.6.3 Character Data

Character data follows the syntactic rules of keywords. You can enter text using a short or a long form. For more information see chapter 10.1.2, "Long and Short Form", on page 148.

Querying text parameters

When you query text parameters, the system returns its short form.

Example:

Setting: `SENSe:BANDwidth:RESolution:TYPE NORMal`

Query: `SENSe:BANDwidth:RESolution:TYPE?` would return `NORM`

10.1.6.4 Character Strings

Strings are alphanumeric characters. They have to be in straight quotation marks. You can use a single quotation mark (') or a double quotation mark (").

Example:

```
INSTRument:DELete 'Spectrum'
```

10.1.6.5 Block Data

Block data is a format which is suitable for the transmission of large amounts of data.

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted. #0 specifies a data block of indefinite length. The use of the indefinite format requires a NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

10.2 Common Suffixes

The following common suffixes are used in remote commands specific to the I/Q Analyzer application:

Suffix	Value range	Description
<m>	1..16	Marker
<n>	1..6	Window
<t>	1..6	Trace

10.3 Activating I/Q Analyzer Measurements

I/Q Analyzer measurements require a special measurement channel on the R&S FSW. It can be activated using the common `INSTrument:CREate[:NEW]` or `INSTrument:CREate:REPLace` commands. In this case, some - but not all - parameters from the previously selected application are passed on to the I/Q Analyzer channel (see chapter 6.1, "Default Settings for I/Q Analyzer measurements", on page 57. In order to retain *all* relevant parameters from the current application for the I/Q measurement, use the `TRACe:IQ[:STATe]` command to change the application of the current channel.

A measurement is started immediately with the default settings when the channel is activated.

Different remote modes available

In remote control, two different modes for the I/Q Analyzer measurements are available:

- A quick mode for pure data acquisition
  This mode is activated by default with the `TRACe:IQ[:STATe]` command. The evaluation functions are not available; however, performance is slightly improved.
- A more sophisticated mode for acquisition and analysis.
  This mode is activated when a new channel is opened for the I/Q Analyzer application (`INST:CRE:NEW`/ `INST:CRE:REPL`) or by an additional command (see `TRACe:IQ:EVAL` on page 157).

Switching the data basis for measurement

By default, the I/Q Analyzer captures and processes I/Q data. As of firmware version 1.60, however, the I/Q Analyzer application (*not Master*) **in MSRA mode** can also perform measurements on the captured I/Q data in the time and frequency domain. In order to do so, the I/Q Analyzer performs an FFT sweep on the captured I/Q data, providing power vs frequency results, or uses the RBW filter to obtain power vs time (zero span) results. This data is then used for the common frequency or time domain measurements. In order to switch between these measurements, you must select the data basis before performing a measurement.

For a description of remote commands required to perform measurements in the time and frequency domain, see the R&S FSW User Manual.

CALCulate:IQ:MODE 153
INSTrument:CREate:DUPLicate 154
INSTrument:CREate[:NEW] 154
INSTrument:CREate:REPLace 154
INSTrument:DELete 155
INSTrument:LIST? 155
INSTrument:REName 156
INSTrument[:SELect] 157
SYSTem:PRESet:CHANnel[:EXECute] 157
TRACe:IQ:EVAL 157
TRACe:IQ[:STATe] 158

CALCulate:IQ:MODE <EvalMode>

This command defines whether the captured I/Q data is evaluated directly, or if it is converted (via FFT) to spectral or time data first.

It is currently only available for I/Q Analyzer applications in MSRA mode (not the MSRA Master).

Parameters:

<EvalMode>

TDOMain
Evaluation in time domain (zero span).

FDOMain
Evaluation in frequency domain.

IQ
Evaluation using I/Q data.

INSTrument:CREate:DUPLicate

This command duplicates the currently selected measurement channel, i.e starts a new measurement channel of the same type and with the identical measurement settings. The name of the new channel is the same as the copied channel, extended by a consecutive number (e.g. "Spectrum" -> "Spectrum 2").

The channel to be duplicated must be selected first using the `INST:SEL` command.

This command is not available if the MSRA Master channel is selected.

Example:

```
INST:SEL 'Spectrum'
INST:CRE:DUPL
```

Duplicates the channel named 'Spectrum' and creates a new measurement channel named 'Spectrum 2'.

Usage: Event

INSTrument:CREate[:NEW] <ChannelType>, <ChannelName>

This command adds an additional measurement channel. The number of measurement channels you can configure at the same time depends on available memory.

Parameters:

<ChannelType>
Channel type of the new channel.
For a list of available channel types see table 10-1.

<ChannelName>
String containing the name of the channel. The channel name is displayed as the tab label for the measurement channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see table 10-1).

Example:

```
INST:CRE SAN, 'Spectrum 2'
```

Adds an additional spectrum display named "Spectrum 2".

INSTrument:CREate:REPLace <ChannelName1>,<ChannelType>,<ChannelName2>

This command replaces a measurement channel with another one.

Parameters:

<ChannelName1>
String containing the name of the measurement channel you want to replace.

<ChannelType> Channel type of the new channel.
For a list of available channel types see table 10-1.

<ChannelName2> String containing the name of the new channel.
Note: If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel (see table 10-1).

Example: `INST:CRE:REPL 'Spectrum2',IQ,'IQAnalyzer'`
Replaces the channel named 'Spectrum2' by a new measurement channel of type 'IQ Analyzer' named 'IQAnalyzer'.

INSTrument:DELete <ChannelName>

This command deletes a measurement channel. If you delete the last measurement channel, the default "Spectrum" channel is activated.

Parameters:

<ChannelName> String containing the name of the channel you want to delete.
A measurement channel must exist in order to be able delete it.

Example: `INST:DEL 'Spectrum4'`
Deletes the spectrum channel with the name 'Spectrum4'.

INSTrument:LIST?

This command queries all active measurement channels. This is useful in order to obtain the names of the existing measurement channels, which are required in order to replace or delete the channels.

Return values:

<ChannelType>, <ChannelName> For each channel, the command returns the channel type and channel name (see table 10-1).
Tip: to change the channel name, use the `INSTrument:REName` command.

Example: `INST:LIST?`
Result for 3 measurement channels:
`'ADEM','Analog Demod','IQ','IQ Analyzer','SANALYZER','Spectrum'`

Usage: Query only

Table 10-1: Available measurement channel types and default channel names

Application	<ChannelType> Parameter	Default Channel Name*)
Spectrum	SANALYZER	Spectrum
I/Q Analyzer	IQ	IQ Analyzer
Pulse (R&S FSW-K6)	PULSE	Pulse
Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.		

Application	<ChannelType> Parameter	Default Channel Name*)
Analog Demodulation (R&S FSW-K7)	ADEM	Analog Demod
GSM (R&S FSW-K10)	GSM	GSM
Multi-Carrier Group Delay (R&S FSW-K17)	MCGD	MC Group Delay
Noise (R&S FSW-K30)	NOISE	Noise
Phase Noise (R&S FSW-K40)	PNOISE	Phase Noise
VSA (R&S FSW-K70)	DDEM	VSA
3GPP FDD BTS (R&S FSW-K72)	BWCD	3G FDD BTS
3GPP FDD UE (R&S FSW-K73)	MWCD	3G FDD UE
TD-SCDMA BTS (R&S FSW-K76)	BTDS	TD-SCDMA BTS
TD-SCDMA UE (R&S FSW-K77)	MTDS	TD-SCDMA UE
cdma2000 BTS (R&S FSW-K82)	BC2K	CDMA2000 BTS
cdma2000 MS (R&S FSW-K83)	MC2K	CDMA2000 MS
1xEV-DO BTS (R&S FSW-K84)	BDO	1xEV-DO BTS
1xEV-DO MS (R&S FSW-K85)	MDO	1xEV-DO MS
WLAN (R&S FSW-K91)	WLAN	WLAN
LTE (R&S FSW-K10x)	LTE	LTE
Note: the default channel name is also listed in the table. If the specified name for a new channel already exists, the default name, extended by a sequential number, is used for the new channel.		

INSTrument:RENAme <ChannelName1>, <ChannelName2>

This command renames a measurement channel.

Parameters:

<ChannelName1> String containing the name of the channel you want to rename.

<ChannelName2> String containing the new channel name.
Note that you can not assign an existing channel name to a new channel; this will cause an error.

Example: `INST:REN 'Spectrum2','Spectrum3'`
Renames the channel with the name 'Spectrum2' to 'Spectrum3'.

INSTrument[:SELect] <ChannelType> | <ChannelName>

This command activates a new measurement channel with the defined channel type, or selects an existing measurement channel with the specified name.

Also see

- `INSTrument:CREate[:NEW]` on page 154

Parameters:

<ChannelType> Channel type of the new channel.
For a list of available channel types see table 10-1.

<ChannelName> String containing the name of the channel.

Example: `INST SAN`
Activates a measurement channel for the Spectrum application.
`INST 'MySpectrum'`
Selects the measurement channel named 'MySpectrum' (for example before executing further commands for that channel).

Usage: SCPI confirmed

SYSTem:PRESet:CHANnel[:EXECute]

This command restores the default instrument settings in the current channel.

Use `INST:SEL` to select the channel.

Example: `INST 'Spectrum2'`
Selects the channel for "Spectrum2".
`SYST:PRES:CHAN:EXEC`
Restores the factory default settings to the "Spectrum2" channel.

Usage: Event

Manual operation: See "Preset Channel" on page 60

TRACe:IQ:EVAL <State>

This command turns I/Q data analysis on and off.

Before you can use this command, you have to turn on the I/Q data acquisition using `INST:CRE:NEW IQ` or `INST:CRE:REPL`, or using the `TRACe:IQ[:STATe]` command to replace the current measurement channel while retaining the settings.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `TRAC:IQ ON`
Enables I/Q data acquisition
`TRAC:IQ:EVAL ON`
Enables the I/Q data analysis mode.

TRACe:IQ[:STATe] <State>

This command changes the application of the current measurement channel to I/Q Analyzer, activating the simple I/Q data acquisition mode (see "Different remote modes available" on page 153).

Executing this command also has the following effects:

- The sweep, amplitude, input and trigger settings from the previous application are retained
- All measurements from the previous application (e.g. Spectrum) are turned off
- All traces are set to "Blank" mode
- The I/Q data analysis mode is turned off (`TRAC:IQ:EVAL OFF`, if previous application was also I/Q Analyzer)

Note: To turn trace display back on or to enable the evaluation functions of the I/Q Analyzer, execute the `TRAC:IQ:EVAL ON` command (see `TRACe:IQ:EVAL` on page 157).

Parameters:

<State> ON | OFF

*RST: OFF

Example: `TRAC:IQ ON`

Switches on I/Q data acquisition

10.4 Configuring I/Q Analyzer Measurements

The following commands configure the I/Q Analyzer measurements.

- Configuring the Data Input and Output....158
- Configuring the Vertical Axis (Amplitude, Scaling)....208
- Frequency....214
- Triggering....216
- Configuring Data Acquisition....227
- Adjusting Settings Automatically....232

10.4.1 Configuring the Data Input and Output

- RF Input....159
- Input from I/Q Data Files....162
- Configuring Digital I/Q Input and Output....162
- Configuring Input via the Analog Baseband Interface (R&S FSW-B71)....167
- Using External Mixers....170
- Setting up Probes....183
- External Generator Control....186
- Working with Power Sensors....196
- Configuring the Outputs....206

10.4.1.1 RF Input

INPut:ATTenuation:PROTection:RESet 159
INPut:CONNector....159
INPut:COUPling....159
INPut:FILTer:HPASs[:STATe]....160
INPut:FILTer:YIG[:STATe]....160
INPut:IMPedance....160
INPut:SELect....161

INPut:ATTenuation:PROTection:RESet

This command resets the attenuator and reconnects the RF input with the input mixer after an overload condition occured and the protection mechanism intervened.The error status bit (bit 3 in the `STAT:QUES:POW` status register) and the `INPUT OVLD` message in the status bar are cleared.

The command works only if the overload condition has been eliminated first.

For details on the protection mechanism see chapter 5.4.1, "RF Input Protection", on page 38.

Usage: Event

INPut:CONNector <ConnType>

Determines whether the RF input data is taken from the RF input connector or the optional Analog Baseband I connector. This command is only available if the Analog Baseband interface (R&S FSW-B71) is installed and active for input.

For more information on the Analog Baseband Interface (R&S FSW-B71) see the R&S FSW I/Q Analyzer and I/Q Input User Manual.

Parameters:

<CouplingType>
RF
RF input connector
AIQI
Analog Baseband I connector
*RST: RF

Example: `INP:CONN:AIQI`

Usage: SCPI confirmed

Manual operation: See "Input Connector" on page 64

INPut:COUPling <CouplingType>

This command selects the coupling type of the RF input.

The command is not available for measurements with the Digital Baseband Interface (R&S FSW-B17).

Parameters:

<CouplingType>

AC
AC coupling

DC
DC coupling

*RST: AC

Example: `INP:COUP:DC`

Usage: SCPI confirmed

Manual operation: See "Input Coupling" on page 62

INPut:FILTer:HPASs[:STATe] <State>

Activates an additional internal high-pass filter for RF input signals from 1 GHz to 3 GHz. This filter is used to remove the harmonics of the R&S FSW in order to measure the harmonics for a DUT, for example.

This function requires option R&S FSW-B13.

(Note: for RF input signals outside the specified range, the high-pass filter has no effect. For signals with a frequency of approximately 4 GHz upwards, the harmonics are suppressed sufficiently by the YIG filter.)

Parameters:

<State> ON | OFF

*RST: OFF

Usage: SCPI confirmed

Manual operation: See "High-Pass Filter 1...3 GHz" on page 63

INPut:FILTer:YIG[:STATe] <State>

This command turns the YIG-preselector on and off.

Note the special conditions and restrictions for the YIG filter described in "YIG-Preselector" on page 63.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1 (0 for I/Q Analyzer, GSM, VSA and MC Group Delay measurements)

Example: `INP:FILT:YIG OFF`
Deactivates the YIG-preselector.

Manual operation: See "YIG-Preselector" on page 63

INPut:IMPedance <Impedance>

This command selects the nominal input impedance of the RF input.

75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a matching pad of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The power loss correction value in this case is 1.76 dB = 10 log (75Ω/50Ω).

The command is not available for measurements with the Digital Baseband Interface (R&S FSW-B17).

Parameters:

<Impedance> 50 | 75

*RST: 50 Ω

Example: `INP:IMP 75`

Usage: SCPI confirmed

Manual operation: See "Impedance" on page 63
See "Reference Level" on page 94
See "Unit" on page 95

INPut:SELect <Source>

This command selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S FSW. If no additional options are installed, only RF input is supported.

Tip: The I/Q data to be analyzed for I/Q Analyzer can not only be measured by the WLAN application itself, it can also be imported to the application, provided it has the correct format. Furthermore, the analyzed I/Q data from the WLAN application can be exported for further analysis in external applications. See chapter 5.5, "I/Q Data Import and Export", on page 54.

Parameters:

<Source>

RF
Radio Frequency ("RF INPUT" connector)

DIQ
Digital IQ data (only available with optional Digital Baseband Interface R&S FSW-B17)
For details on I/Q input see the R&S FSW I/Q Analyzer User Manual.

AIQ
Analog Baseband signal (only available with optional Analog Baseband Interface R&S FSW-B71)
For details on Analog Baseband input see the R&S FSW I/Q Analyzer User Manual.

*RST: RF

Manual operation: See "Radio Frequency State" on page 62
See "IQ Input File State" on page 65
See "Digital I/Q Input State" on page 76
See "Analog Baseband Input State" on page 78

10.4.1.2 Input from I/Q Data Files

The input for measurements can be provided from I/Q data files.The commands required to configure the use of such files are described here.

Currently, this input source is **only available in the R&S FSW Pulse application**.

For details see chapter 5.4.5, "Basics on Input from I/Q Data Files", on page 51.

Useful commands for retrieving results described elsewhere:

- `INPut:SELect` on page 161

Remote commands exclusive to input from I/Q data files:

INPut:FILE:PATH.....162

INPut:FILE:PATH <FileName>

This command selects the I/Q data file to be used as input for further measurements.

The I/Q data must have a specific format as described in chapter A.4, "I/Q Data File Format (iq-tar)", on page 299.

For details see chapter 5.4.5, "Basics on Input from I/Q Data Files", on page 51.

Parameters:

<FileName> String containing the path and name of the source file. The file extension is `*.iq.tar`.

Example: `INP:FILE:PATH 'C:\R_S\Instr\user\data.iq.tar'`
Uses I/Q data from the specified file as input.

Usage: Setting only

Manual operation: See "Select I/Q Data File" on page 65

10.4.1.3 Configuring Digital I/Q Input and Output

Useful commands for digital I/Q data described elsewhere:

- `INST:SEL DIQ` (see `INPut:SELect` on page 161)
- `TRIGger[:SEQuence]:LEVel:BBPower` on page 218
- `TRACe:IQ:DIQFilter` on page 228

Remote commands for the R&S DigIConf software

Remote commands for the R&S DigIConf software always begin with `SOURce:EBOX`. Such commands are passed on from the R&S FSW to the R&S DigIConf automatically which then configures the R&S EX-IQ-BOX via the USB connection.

All remote commands available for configuration via the R&S DigIConf software are described in the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Example 1:

```
SOURce:EBOX:*RST
SOURce:EBOX:*IDN?
```

Result:

"Rohde&Schwarz,DigIConf,02.05.436 Build 47"

Example 2:

```
SOURce:EBOX:USER:CLOCk:REFerence:FREQuency 5MHZ
```

Defines the frequency value of the reference clock.

Remote commands exclusive to digital I/Q data input and output

INPut:DIQ:CDEVice....163
INPut:DIQ:RANGe[:UPPer]:AUTO....164
INPut:DIQ:RANGe:COUPling....165
INPut:DIQ:RANGe[:UPPer]....165
INPut:DIQ:RANGe[:UPPer]:UNIT....165
INPut:DIQ:SRATe....165
INPut:DIQ:SRATe:AUTO....166
OUTPut:DIQ....166
OUTPut:DIQ:CDEVice....166

INPut:DIQ:CDEVice

This command queries the current configuration and the status of the digital I/Q input from the optional Digital Baseband Interface (R&S FSW-B17).

For details see the section "Interface Status Information" for the Digital Baseband Interface (R&S FSW-B17) in the R&S FSW I/Q Analyzer User Manual.

Return values:

<ConnState> Defines whether a device is connected or not.

0
No device is connected.

1
A device is connected.

<DeviceName> Device ID of the connected device

<SerialNumber> Serial number of the connected device

<PortName> Port name used by the connected device

<SampleRate> Maximum or currently used sample rate of the connected device in Hz (depends on the used connection protocol version; indicated by <SampleRateType> parameter)

<MaxTransferRate> Maximum data transfer rate of the connected device in Hz

<ConnProtState> State of the connection protocol which is used to identify the connected device.

Not Started

Has to be Started

Started

Passed

Failed

Done

<PRBSTestState> State of the PRBS test.

Not Started

Has to be Started

Started

Passed

Failed

Done

<SampleRateType> **0**
Maximum sample rate is displayed

1
Current sample rate is displayed

<FullScaleLevel> The level (in dBm) that should correspond to an I/Q sample with the magnitude "1" (if transferred from connected device);
If not available, `9.97e37` is returned

Example:
```
INP:DIQ:CDEV?
```
Result:
```
1,SMU200A,103634,Out
A,70000000,100000000,Passed,Not Started,0,0
```

Manual operation: See "Connected Instrument" on page 77

INPut:DIQ:RANGe[:UPPer]:AUTO <State>

If enabled, the digital input full scale level is automatically set to the value provided by the connected device (if available).

This command is only available if the optional Digital Baseband interface (option R&S FSW-B17) is installed.

Parameters:

<State> ON | OFF

*RST: OFF

Manual operation: See "Full Scale Level" on page 76

INPut:DIQ:RANGe:COUPling <State>

If enabled, the reference level for digital input is adjusted to the full scale level automatically if the full scale level changes.

This command is only available if the optional Digital Baseband Interface (R&S FSW-B17) is installed.

Parameters:
<State> ON | OFF
*RST: OFF

Manual operation: See "Adjust Reference Level to Full Scale Level" on page 77

INPut:DIQ:RANGe[:UPPer] <Level>

Defines or queries the "Full Scale Level", i.e. the level that corresponds to an I/Q sample with the magnitude "1".

This command is only available if the optional Digital Baseband Interface (R&S FSW-B17) is installed.

Parameters:
<Level> <numeric value>
Range: 1 µV to 7.071 V
*RST: 1 V

Manual operation: See "Full Scale Level" on page 76

INPut:DIQ:RANGe[:UPPer]:UNIT <Unit>

Defines the unit of the full scale level (see "Full Scale Level" on page 76). The availability of units depends on the measurement application you are using.

This command is only available if the optional Digital Baseband Interface (R&S FSW-B17) is installed.

Parameters:
<Level> VOLT | DBM | DBPW | WATT | DBMV | DBUV | DBUA | AMPere
*RST: Volt

Manual operation: See "Full Scale Level" on page 76

INPut:DIQ:SRATe <SampleRate>

This command specifies or queries the sample rate of the input signal from the Digital Baseband Interface (R&S FSW-B17, see "Input Sample Rate" on page 76).

Note: the final user sample rate of the R&S FSW may differ and is defined using `TRAC:IQ:SRAT` (see `TRACe:IQ:SRATe` on page 230).

Parameters:

<SampleRate> Range: 1 Hz to 10 GHz
*RST: 32 MHz

Example: INP:DIQ:SRAT 200 MHz

Manual operation: See "Input Sample Rate" on page 76

INPut:DIQ:SRATe:AUTO <State>

If enabled, the sample rate of the digital I/Q input signal is set automatically by the connected device.

This command is only available if the optional Digital Baseband Interface (R&S FSW-B17) is installed.

Parameters:

<State> ON | OFF
*RST: OFF

Manual operation: See "Input Sample Rate" on page 76

OUTPut:DIQ <State>

This command turns continuous output of I/Q data to the Digital Baseband Interface (R&S FSW-B17) on and off.

Using the digital input and digital output simultaneously is not possible.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `OUTP:DIQ ON`

Manual operation: See "Digital Baseband Output" on page 92

OUTPut:DIQ:CDEVice

This command queries the current configuration and the status of the digital I/Q data output to the optional Digital Baseband Interface (R&S FSW-B17).

Return values:

<ConnState> Defines whether a device is connected or not.

0
No device is connected.

1
A device is connected.

<DeviceName> Device ID of the connected device

<SerialNumber> Serial number of the connected device

<PortName> Port name used by the connected device

<NotUsed> to be ignored

<MaxTransferRate> Maximum data transfer rate of the connected device in Hz

<ConnProtState> State of the connection protocol which is used to identify the connected device.

Not Started
Has to be Started
Started
Passed
Failed
Done

<PRBSTestState> State of the PRBS test.

Not Started
Has to be Started
Started
Passed
Failed
Done

<NotUsed> to be ignored

<Placeholder> for future use; currently "0"

Example:
```
OUTP:DIQ:CDEV?
```
Result:
```
1,SMU200A,103634,Out
A,70000000,100000000,Passed,Not Started,0,0
```

Manual operation: See "Output Settings Information" on page 92
See "Connected Instrument" on page 93

10.4.1.4 Configuring Input via the Analog Baseband Interface (R&S FSW-B71)

The following commands are required to control the Analog Baseband Interface (R&S FSW-B71) in a remote environment.They are only available if this option is installed.

For more information on the Analog Baseband Interface see chapter 5.3, "Processing Data From the Analog Baseband Interface", on page 32.

For a programming example, see chapter 10.11.6, "Data Acquisition via the Optional Analog Baseband Interface (R&S FSW-B71)", on page 293.

Useful commands for Analog Baseband data described elsewhere:

- `INP:SEL AIQ` (see `INPut:SELect` on page 161)
- `[SENSe:]FREQuency:CENTer` on page 214

Commands for the Analog Baseband calibration signal are described in the R&S FSW User Manual.

Remote commands exclusive to Analog Baseband data input and output

INPut:IQ:BALanced[:STATe]....168
INPut:IQ:FULLscale:AUTO....168
INPut:IQ:FULLscale:LEVel....168
INPut:IQ:TYPE....169
[SENSe:]SWAPiq....169

INPut:IQ:BALanced[:STATe] <State>

This command defines whether the input is provided as a differential signal via all 4 Analog Baseband connectors or as a plain I/Q signal via 2 simple-ended lines.

Parameters:

<State>
ON
Differential
OFF
Simple-ended
*RST: ON

Example: `INP:IQ:BAL OFF`

Manual operation: See "Input configuration" on page 79

INPut:IQ:FULLscale:AUTO <State>

This command defines whether the fullscale level (i.e. the maximum input power on the Baseband Input connector) is defined automatically according to the reference level, or manually.

Parameters:

<State>
ON
Automatic definition
OFF
Manual definition according to `INPut:IQ:FULLscale:LEVel` on page 168
*RST: ON

Example: `INP:IQ:FULL:AUTO OFF`

Manual operation: See "Fullscale Level Mode / Value" on page 99

INPut:IQ:FULLscale:LEVel <PeakVoltage>

This command defines the peak voltage at the Baseband Input connector if the fullscale level is set to manual mode (see `INPut:IQ:FULLscale:AUTO` on page 168).

Parameters:

<PeakVoltage> 0.25 V | 0.5 V | 1 V | 2 V

Peak voltage level at the connector.
For probes, the possible fullscale values are adapted according to the probe's attenuation and maximum allowed power.

*RST: 1V

Example: `INP:IQ:FULL 0.5V`

Manual operation: See "Fullscale Level Mode / Value" on page 99

INPut:IQ:TYPE <DataType>

This command defines the format of the input signal.

Parameters:

<DataType> IQ | I | Q

IQ
The input signal is filtered and resampled to the sample rate of the application.
Two input channels are required for each input signal, one for the in-phase component, and one for the quadrature component.

I
The in-phase component of the input signal is filtered and resampled to the sample rate of the application. If the center frequency is not 0 (see `[SENSe:]FREQuency:CENTer` on page 214), the in-phase component of the input signal is down-converted first (Low IF I).

Q
The quadrature component of the input signal is filtered and resampled to the sample rate of the application. If the center frequency is not 0, the quadrature component of the input signal is down-converted first (Low IF Q).

*RST: IQ

Example: `INP:IQ:TYPE Q`

Manual operation: See "I/Q Mode" on page 78

[SENSe:]SWAPiq <State>

This command defines whether or not the recorded IQ pairs should be swapped (I<->Q) before being processed. Swapping I and Q inverts the sideband.

This is useful if the DUT interchanged the I and Q parts of the signal; then the R&S FSW can do the same to compensate for it.

Parameters:

<State>

ON
I and Q signals are interchanged
Inverted sideband, Q+j*I

OFF
I and Q signals are not interchanged
Normal sideband, I+j*Q

*RST: OFF

Manual operation: See "Swap I/Q" on page 79

10.4.1.5 Using External Mixers

The commands required to work with external mixers in a remote environment are described here. Note that these commands require the R&S FSW-B21 option to be installed and an external mixer to be connected to the front panel of the R&S FSW. In MSRA mode, external mixers are not supported.

For details on working with external mixers see the R&S FSW User Manual.

- Basic Settings....170
- Mixer Settings....172
- Conversion Loss Table Settings....177
- Programming Example: Working with an External Mixer....181

Basic Settings

The basic settings concern general usage of an external mixer.

[SENSe:]MIXer[:STATe]....170
[SENSe:]MIXer:BIAS:HIGH....171
[SENSe:]MIXer:BIAS[:LOW]....171
[SENSe:]MIXer:LOPower....171
[SENSe:]MIXer:SIGNal....171
[SENSe:]MIXer:THReshold....172

[SENSe:]MIXer[:STATe] <State>

Activates or deactivates the use of a connected external mixer as input for the measurement. This command is only available if the R&S FSW-B21 option is installed and an external mixer is connected.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `MIX ON`

Manual operation: See "External Mixer State" on page 66

[SENSe:]MIXer:BIAS:HIGH <BiasSetting>

This command defines the bias current for the high (second) range.

This command is only available if the external mixer is active (see `[SENSe:]MIXer[:STATe]` on page 170).

Parameters:

<BiasSetting>
*RST: 0.0 A
Default unit: A

Manual operation: See "Bias Settings" on page 70

[SENSe:]MIXer:BIAS[:LOW] <BiasSetting>

This command defines the bias current for the low (first) range.

This command is only available if the external mixer is active (see `[SENSe:]MIXer[:STATe]` on page 170).

Parameters:

<BiasSetting>
*RST: 0.0 A
Default unit: A

Manual operation: See "Bias Settings" on page 70

[SENSe:]MIXer:LOPower <Level>

This command specifies the LO level of the external mixer's LO port.

Parameters:

<Level>
numeric value

Range: 13.0 dBm to 17.0 dBm
Increment: 0.1 dB
*RST: 15.5 dBm

Example:
```
MIX:LOP 16.0dBm
```

Manual operation: See "LO Level" on page 69

[SENSe:]MIXer:SIGNal <State>

This command specifies whether automatic signal detection is active or not.

Note that automatic signal identification is only available for measurements that perform frequency sweeps (not in vector signal analysis or the I/Q Analyzer, for instance).

Parameters:

<State> **OFF | ON | AUTO | ALL**

OFF
No automatic signal detection is active.

ON
Automatic signal detection (Signal ID) is active.

AUTO
Automatic signal detection (Auto ID) is active.

ALL
Both automatic signal detection functions (Signal ID+Auto ID) are active.

*RST: OFF

Manual operation: See "Signal ID" on page 70
See "Auto ID" on page 70

[SENSe:]MIXer:THReshold <Value>

This command defines the maximum permissible level difference between test sweep and reference sweep to be corrected during automatic comparison (see `[SENSe:]MIXer:SIGNal` on page 171).

Parameters:

<Value> <numeric value>

Range: 0.1 dB to 100 dB
*RST: 10 dB

Example: `MIX:PORT 3`

Manual operation: See "Auto ID Threshold" on page 70

Mixer Settings

The following commands are required to configure the band and specific mixer settings.

[SENSe:]MIXer:FREQuency:HANDover....173
[SENSe:]MIXer:FREQuency:STARt?....173
[SENSe:]MIXer:FREQuency:STOP?....173
[SENSe:]MIXer:HARMonic:BAND:PRESet....173
[SENSe:]MIXer:HARMonic:BAND[:VALue]....174
[SENSe:]MIXer:HARMonic:HIGH:STATe....174
[SENSe:]MIXer:HARMonic:HIGH[:VALue]....175
[SENSe:]MIXer:HARMonic:TYPE....175
[SENSe:]MIXer:HARMonic[:LOW]....175
[SENSe:]MIXer:LOSS:HIGH....175
[SENSe:]MIXer:LOSS:TABLe:HIGH....176
[SENSe:]MIXer:LOSS:TABLe[:LOW]....176
[SENSe:]MIXer:LOSS[:LOW]....176
[SENSe:]MIXer:PORTs....177
[SENSe:]MIXer:RFOVerrange[:STATe]....177

[SENSe:]MIXer:FREQuency:HANDover <Frequency>

This command defines the frequency at which the mixer switches from one range to the next (if two different ranges are selected). The handover frequency for each band can be selected freely within the overlapping frequency range.

This command is only available if the external mixer is active (see `[SENSe:]MIXer[:STATe]` on page 170).

Parameters:
<Frequency> numeric value

Example: `MIX ON`
Activates the external mixer.
`MIX:FREQ:HAND 78.0299GHz`
Sets the handover frequency to 78.0299 GHz.

Manual operation: See "Handover Freq." on page 67

[SENSe:]MIXer:FREQuency:STARt?

This command queries the frequency at which the external mixer band starts.

Example: `MIX:FREQ:STAR?`
Queries the start frequency of the band.

Usage: Query only

Manual operation: See "RF Start / RF Stop" on page 66

[SENSe:]MIXer:FREQuency:STOP?

This command queries the frequency at which the external mixer band stops.

Example: `MIX:FREQ:STOP?`
Queries the stop frequency of the band.

Usage: Query only

Manual operation: See "RF Start / RF Stop" on page 66

[SENSe:]MIXer:HARMonic:BAND:PRESet

This command restores the preset frequency ranges for the selected standard waveguide band.

Note: Changes to the band and mixer settings are maintained even after using the PRESET function. Use this command to restore the predefined band ranges.

Example: `MIX:HARM:BAND:PRES`
Presets the selected waveguide band.

Usage: Event

Manual operation: See "Preset Band" on page 67

[SENSe:]MIXer:HARMonic:BAND[:VALue] <Band>

This command selects the external mixer band. The query returns the currently selected band.

This command is only available if the external mixer is active (see `[SENSe:]MIXer[:STATe]` on page 170).

Parameters:

<Band> KA | Q | U | V | E | W | F | D | G | Y | J | USER
Standard waveguide band or user-defined band.

Manual operation: See "Band" on page 67

Table 10-2: Frequency ranges for pre-defined bands

Band	Frequency start [GHz]	Frequency stop [GHz]
KA (A) *)	26.5	40.0
Q	33.0	50.0
U	40.0	60.0
V	50.0	75.0
E	60.0	90.0
W	75.0	110.0
F	90.0	140.0
D	110.0	170.0
G	140.0	220.0
J	220.0	325.0
Y	325.0	500.0
USER	32.18 (default)	68.22 (default)
***)** The band formerly referred to as "A" is now named "KA".		

[SENSe:]MIXer:HARMonic:HIGH:STATe <State>

This command specifies whether a second (high) harmonic is to be used to cover the band's frequency range.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `MIX:HARM:HIGH:STAT ON`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Range 1/2" on page 68

[SENSe:]MIXer:HARMonic:HIGH[:VALue] <HarmOrder>

This command specifies the harmonic order to be used for the high (second) range.

Parameters:

<HarmOrder> numeric value

Range: 2 to 61 (USER band); for other bands: see band definition

Example: `MIX:HARM:HIGH 2`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Harmonic Order" on page 68

[SENSe:]MIXer:HARMonic:TYPE <OddEven>

This command specifies whether the harmonic order to be used should be odd, even, or both.

Which harmonics are supported depends on the mixer type.

Parameters:

<OddEven> **ODD | EVEN | EODD**

*RST: EVEN

Example: `MIX:HARM:TYPE ODD`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Harmonic Type" on page 68

[SENSe:]MIXer:HARMonic[:LOW] <HarmOrder>

This command specifies the harmonic order to be used for the low (first) range.

Parameters:

<HarmOrder> numeric value

Range: 2 to 61 (USER band); for other bands: see band definition

*RST: 2 (for band F)

Example: `MIX:HARM 3`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Harmonic Order" on page 68

[SENSe:]MIXer:LOSS:HIGH <Average>

This command defines the average conversion loss to be used for the entire high (second) range.

Parameters:

<Average> numeric value

Range: 0 to 100
*RST: 24.0 dB
Default unit: dB

Example: `MIX:LOSS:HIGH 20dB`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Conversion loss" on page 68

[SENSe:]MIXer:LOSS:TABLe:HIGH <FileName>

This command defines the file name of the conversion loss table to be used for the high (second) range.

Parameters:

<FileName> string ('<file name>')

Example: `MIX:LOSS:TABL:HIGH 'MyCVLTable'`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Conversion loss" on page 68

[SENSe:]MIXer:LOSS:TABLe[:LOW] <FileName>

This command defines the file name of the conversion loss table to be used for the low (first) range.

Parameters:

<FileName> string ('<file name>')

Example: `MIX:LOSS:TABL 'mix_1_4'`
Specifies the conversion loss table *mix_1_4*.

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Conversion loss" on page 68

[SENSe:]MIXer:LOSS[:LOW] <Average>

This command defines the average conversion loss to be used for the entire low (first) range.

Parameters:

<Average> numeric value

Range: 0 to 100
*RST: 24.0 dB
Default unit: dB

Example: `MIX:LOSS 20dB`

Manual operation: See "Mixer Settings (Harmonics Configuration)" on page 67
See "Conversion loss" on page 68

[SENSe:]MIXer:PORTs <PortType>

This command specifies whether the mixer is a 2-port or 3-port type.

Parameters:

<PortType> **2 | 3**

*RST: 2

Example: `MIX:PORT 3`

Manual operation: See "Mixer Type" on page 67

[SENSe:]MIXer:RFOVerrange[:STATe] <State>

If enabled, the band limits are extended beyond "RF Start" and "RF Stop" due to the capabilities of the used harmonics.

Parameters:

<State> ON | OFF

*RST: OFF

Manual operation: See "RF Overrange" on page 67

Conversion Loss Table Settings

The following settings are required to configure and manage conversion loss tables.

[SENSe:]CORRection:CVL:BAND....177
[SENSe:]CORRection:CVL:BIAS....178
[SENSe:]CORRection:CVL:CATAlog?....178
[SENSe:]CORRection:CVL:CLEAr....179
[SENSe:]CORRection:CVL:COMMent....179
[SENSe:]CORRection:CVL:DATA....179
[SENSe:]CORRection:CVL:HARMonic....180
[SENSe:]CORRection:CVL:MIXer....180
[SENSe:]CORRection:CVL:PORTs....180
[SENSe:]CORRection:CVL:SELect....181
[SENSe:]CORRection:CVL:SNUMber....181

[SENSe:]CORRection:CVL:BAND <Type>

This command defines the waveguide band for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Parameters:

<Band> K | A | KA | Q | U | V | E | W | F | D | G | Y | J | USER

Standard waveguide band or user-defined band.
Note: The band formerly referred to as "A" is now named "KA"; the input parameter "A" is still available and refers to the same band as "KA".
For a definition of the frequency range for the pre-defined bands, see table 10-2).

*RST: F (90 GHz - 140 GHz)

Example:
```
CORR:CVL:SEL 'LOSS_TAB_4'
```
Selects the conversion loss table.
```
CORR:CVL:BAND KA
```
Sets the band to KA (26.5 GHz - 40 GHz).

Manual operation: See "Band" on page 74

[SENSe:]CORRection:CVL:BIAS <BiasSetting>

This command defines the bias setting to be used with the conversion loss table.

Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181.

This command is only available with option B21 (External Mixer) installed.

Parameters:

<BiasSetting> numeric value

*RST: 0.0 A
Default unit: A

Example:
```
CORR:CVL:SEL 'LOSS_TAB_4'
```
Selects the conversion loss table.
```
CORR:CVL:BIAS 3A
```

Manual operation: See "Bias Settings" on page 70
See "Write to <CVL table name>" on page 71
See "Bias" on page 74

[SENSe:]CORRection:CVL:CATAlog?

This command queries all available conversion loss tables saved in the `C:\r_s\instr\user\cvl\` directory on the instrument.

This command is only available with option B21 (External Mixer) installed.

Usage: Query only

[SENSe:]CORRection:CVL:CLEAr

This command deletes the selected conversion loss table. Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Example:
```
CORR:CVL:SEL 'LOSS_TAB_4'
```
Selects the conversion loss table.
```
CORR:CVL:CLE
```

Usage: Event

Manual operation: See "Delete Table" on page 72

[SENSe:]CORRection:CVL:COMMent <Text>

This command defines a comment for the conversion loss table. Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Parameters:
<Text>

Example:
```
CORR:CVL:SEL 'LOSS_TAB_4'
```
Selects the conversion loss table.
```
CORR:CVL:COMM 'Conversion loss table for FS_Z60'
```

Manual operation: See "Comment" on page 74

[SENSe:]CORRection:CVL:DATA <Freq>,<Level>

This command defines the reference values of the selected conversion loss tables. The values are entered as a set of frequency/level pairs. A maximum of 50 frequency/level pairs may be entered. Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Parameters:
<Freq> numeric value

The frequencies have to be sent in ascending order.

<Level>

Example:
```
CORR:CVL:SEL 'LOSS_TAB_4'
```
Selects the conversion loss table.
```
CORR:CVL:DATA 1MHZ,-30DB,2MHZ,-40DB
```

Manual operation: See "Position/Value" on page 75

[SENSe:]CORRection:CVL:HARMonic <HarmOrder>

This command defines the harmonic order for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181.

This command is only available with option B21 (External Mixer) installed.

Parameters:

<HarmOrder> numeric value

Range: 2 to 65

Example: `CORR:CVL:SEL 'LOSS_TAB_4'`
Selects the conversion loss table.
`CORR:CVL:HARM 3`

Manual operation: See "Harmonic Order" on page 74

[SENSe:]CORRection:CVL:MIXer <Type>

This command defines the mixer name in the conversion loss table. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Parameters:

<Type> string

Name of mixer with a maximum of 16 characters

Example: `CORR:CVL:SEL 'LOSS_TAB_4'`
Selects the conversion loss table.
`CORR:CVL:MIX 'FS_Z60'`

Manual operation: See "Mixer Name" on page 74

[SENSe:]CORRection:CVL:PORTs <PortNo>

This command defines the mixer type in the conversion loss table. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Parameters:

<PortType> 2 | 3

*RST: 2

Example: `CORR:CVL:SEL 'LOSS_TAB_4'`
Selects the conversion loss table.
`CORR:CVL:PORT 3`

Manual operation: See "Mixer Type" on page 75

[SENSe:]CORRection:CVL:SELect <FileName>

This command selects the conversion loss table with the specified file name. If <file_name> is not available, a new conversion loss table is created.

This command is only available with option B21 (External Mixer) installed.

Parameters:
<FileName> '<File name>'

Example: `CORR:CVL:SEL 'LOSS_TAB_4'`

Manual operation: See "New Table" on page 71
See "Edit Table" on page 72
See "File Name" on page 73

[SENSe:]CORRection:CVL:SNUMber <SerialNo>

This command defines the serial number of the mixer for which the conversion loss table is to be used. This setting is checked against the current mixer setting before the table can be assigned to the range.

Before this command can be performed, the conversion loss table must be selected (see `[SENSe:]CORRection:CVL:SELect` on page 181).

This command is only available with option B21 (External Mixer) installed.

Parameters:
<SerialNo> Serial number with a maximum of 16 characters

Example: `CORR:CVL:SEL 'LOSS_TAB_4'`
Selects the conversion loss table.
`CORR:CVL:MIX '123.4567'`

Manual operation: See "Mixer S/N" on page 74

Programming Example: Working with an External Mixer

This example demonstrates how to work with an external mixer in a remote environment. It is performed in the Spectrum application in the default layout configuration. Note that without a real input signal and connected mixer, this measurement will not return useful results.

```
//--------------Preparing the instrument -----------
//Reset the instrument
*RST
//Activate the use of the connected external mixer.
SENS:MIX ON
```

```
//----------- Configuring basic mixer behavior -------------
//Set the LO level of the mixer's LO port to 15 dBm.
SENS:MIX:LOP 15dBm
//Set the bias current to -1 mA .
SENS:MIX:BIAS:LOW -1mA
//----------- Configuring the mixer and band settings -------------
//Use band "V" to full possible range extent for assigned harmonic (6).
SENS:MIX:HARM:BAND V
SENS:MIX:RFOV ON
//Query the possible range
SENS:MIX:FREQ:STAR?
//Result: 47480000000 (47.48 GHz)
SENS:MIX:FREQ:STOP?
//Result: 138020000000 (138.02 GHz)
//Use a 3-port mixer type
SENS:MIX:PORT 3
//Split the frequency range into two ranges;
//range 1 covers 47.48 GHz GHz to 80 GHz; harmonic 6, average conv. loss of 20 dB
//range 2 covers 80 GHz to 138.02 GHz; harmonic 8, average conv.loss of 30 dB
SENS:MIX:HARM:TYPE EVEN
SENS:MIX:HARM:HIGH:STAT ON
SENS:MIX:FREQ:HAND 80GHz
SENS:MIX:HARM:LOW 6
SENS:MIX:LOSS:LOW  20dB
SENS:MIX:HARM:HIGH 8
SENS:MIX:LOSS:HIGH 30dB
//--------- Activating automatic signal identification functions -----------
//Activate both automatic signal identification functions.
SENS:MIX:SIGN ALL
//Use auto ID threshold of 8 dB.
SENS:MIX:THR 8dB

//--------------Performing the Measurement-----
//Select single sweep mode.
INIT:CONT OFF
//Initiate a basic frequency sweep and wait until the sweep has finished.
INIT;*WAI
//---------------Retrieving Results-------------
//Return the trace data for the input signal without distortions
//(default screen configuration)
TRAC:DATA? TRACE3
```

Configuring a conversion loss table for a user-defined band

```
//--------------Preparing the instrument -----------
//Reset the instrument
*RST
//Activate the use of the connected external mixer.
SENS:MIX ON
```

```
//--------------Configuring a new conversion loss table --------------
//Define cvl table for range 1 of band as described in previous example
// (extended V band)
SENS:CORR:CVL:SEL 'UserTable'
SENS:CORR:CVL:COMM 'User-defined conversion loss table for USER band'
SENS:CORR:CVL:BAND USER
SENS:CORR:CVL:HARM 6
SENS:CORR:CVL:BIAS -1mA
SENS:CORR:CVL:MIX 'FS_Z60'
SENS:CORR:CVL:SNUM '123.4567'
SENS:CORR:CVL:PORT 3
//Conversion loss is linear from 55 GHz to 75 GHz
SENS:CORR:CVL:DATA 55GHZ,-20DB,75GHZ,-30DB
//----------- Configuring the mixer and band settings -------------
//Use user-defined band and assign new cvl table.
SENS:MIX:HARM:BAND USER
//Define band by two ranges;
//range 1 covers 47.48 GHz to 80 GHz; harmonic 6, cvl table 'UserTable'
//range 2 covers 80 GHz to 138.02 GHz; harmonic 8, average conv.loss of 30 dB
SENS:MIX:HARM:TYPE EVEN
SENS:MIX:HARM:HIGH:STAT ON
SENS:MIX:FREQ:HAND 80GHz
SENS:MIX:HARM:LOW 6
SENS:MIX:LOSS:TABL:LOW 'UserTable'
SENS:MIX:HARM:HIGH 8

SENS:MIX:LOSS:HIGH 30dB
//Query the possible range
SENS:MIX:FREQ:STAR?
//Result: 47480000000 (47.48 GHz)
SENS:MIX:FREQ:STOP?
//Result: 138020000000 (138.02 GHz)

//--------------Performing the Measurement-----
//Select single sweep mode.
INIT:CONT OFF
//Initiate a basic frequency sweep and wait until the sweep has finished.
INIT;*WAI
//---------------Retrieving Results-------------
//Return the trace data (default screen configuration)
TRAC:DATA? TRACe1
```

10.4.1.6 Setting up Probes

Probes can be connected to the optional BASEBAND INPUT connectors, if the Analog Baseband interface (option R&S FSW-B71) is installed.

[SENSe:]PROBe<p>:ID:PARTnumber?....184
[SENSe:]PROBe<p>:ID:SRNumber?....184
[SENSe:]PROBe<p>:SETup:MODE....184

[SENSe:]PROBe<p>:SETup:NAME?.....185
[SENSe:]PROBe<p>:SETup:STATe?.....185
[SENSe:]PROBe<p>:SETup:TYPE?.....185

[SENSe:]PROBe<p>:ID:PARTnumber?

Queries the R&S part number of the probe.

Suffix:
<p> 1 | 2 | 3
Selects the connector:
1 = Baseband Input I
2 = Baseband Input Q
3 = RF (currently not supported; use "1" with RF Input Connector setting "Baseband Input I")

Return values:
<PartNumber> Part number in a string.

Usage: Query only

[SENSe:]PROBe<p>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:
<p> 1 | 2 | 3
Selects the connector:
1 = Baseband Input I
2 = Baseband Input Q
3 = RF (currently not supported; use "1" with RF Input Connector setting "Baseband Input I")

Return values:
<SerialNo> Serial number in a string.

Usage: Query only

[SENSe:]PROBe<p>:SETup:MODE <Mode>

Select the action that is started with the micro button on the probe head.

See also: "Microbutton Action" on page 80.

Suffix:
<p> 1 | 2 | 3
Selects the connector:
1 = Baseband Input I
2 = Baseband Input Q
3 = RF (currently not supported; use "1" with RF Input Connector setting "Baseband Input I")

Parameters:

<Mode>

RSINgle
Run single: starts one data acquisition.

NOACtion
Nothing is started on pressing the micro button.

*RST: RSINgle

Manual operation: See "Microbutton Action" on page 80

[SENSe:]PROBe<p>:SETup:NAME?

Queries the name of the probe.

Suffix:

<p>

1 | 2 | 3
Selects the connector:
1 = Baseband Input I
2 = Baseband Input Q
3 = RF (currently not supported; use "1" with RF Input Connector setting "Baseband Input I")

Return values:

<Name>

Name string

Usage: Query only

[SENSe:]PROBe<p>:SETup:STATe?

Queries if the probe at the specified connector is active (detected) or not active (not detected). To switch the probe on, i.e. activate input from the connector, use `INP:SEL:AIQ` (see `INPut:SELect` on page 161).

Suffix:

<p>

1 | 2 | 3
Selects the connector:
1 = Baseband Input I
2 = Baseband Input Q
3 = RF (currently not supported; use "1" with RF Input Connector setting "Baseband Input I")

Return values:

<State>

DETected | NDETected

*RST: NDETected

Usage: Query only

[SENSe:]PROBe<p>:SETup:TYPE?

Queries the type of the probe.

Suffix:

<p> 1 | 2 | 3
Selects the connector:
1 = Baseband Input I
2 = Baseband Input Q
3 = RF (currently not supported; use "1" with RF Input Connector setting "Baseband Input I")

Return values:

<Type> String containing one of the following values:
– None (no probe detected)
– active differential
– active single-ended

Usage: Query only

10.4.1.7 External Generator Control

External generator control commands are available if the R&S FSW External Generator Control option (R&S FSW-B10) is installed. For each measurement channel one external generator can be configured. To switch between different configurations define multiple measurement channels.

For more information on external generator control see chapter 5.4.4, "Basics on External Generator Control", on page 40.

- Measurement Configuration....186
- Interface Configuration....189
- Source Calibration....191
- Programming Example for External Generator Control....195

Measurement Configuration

The following commands are required to activate external generator control and to configure a calibration measurement with an external tracking generator.

SOURce:EXTernal:FREQuency....186
SOURce:EXTernal:FREQuency:COUPling[:STATe]....187
SOURce:EXTernal:FREQuency[:FACTor]:DENominator....187
SOURce:EXTernal:FREQuency[:FACTor]:NUMerator....188
SOURce:EXTernal:FREQuency:OFFSet....188
SOURce:EXTernal:POWer[:LEVel]....188
SOURce:EXTernal[:STATe]....189
SOURce:POWer[:LEVel][:IMMediate]:OFFSet....189

SOURce:EXTernal:FREQuency <Frequency>

This command defines a fixed source frequency for the external generator.

Parameters:

<Frequency> Source frequency of the external generator.
*RST: 1100050000

Example: SOUR:EXT:FREQ 10MHz

Manual operation: See "(Manual) Source Frequency" on page 84

SOURce:EXTernal:FREQuency:COUPling[:STATe] <State>

This command couples the frequency of the external generator output to the R&S FSW.

Parameters:

<State> ON | OFF | 0 | 1

ON | 1
Default setting: a series of frequencies is defined (one for each sweep point), based on the current frequency at the RF input of the R&S FSW; the RF frequency range covers the currently defined span of the R&S FSW (unless limited by the range of the signal generator)

OFF | 0
The generator uses a single fixed frequency, defined by `SOURce:EXTernal:FREQuency`.

*RST: 1

Example: SOUR:EXT:FREQ:COUP ON

Manual operation: See "Source Frequency Coupling" on page 84

SOURce:EXTernal:FREQuency[:FACTor]:DENominator <Value>

This command defines the denominator of the factor with which the analyzer frequency is multiplied in order to obtain the transmit frequency of the selected generator.

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$\text{Source Freq} = \text{RF} \cdot \frac{\text{Numerator}}{\text{Denominator}} + \text{Offset}$$

Parameters:

<Value> <numeric value>

*RST: 1

Example: `SOUR:EXT:FREQ:NUM 4"`
`"SOUR:EXT:FREQ:DEN 3"`
Sets a multiplication factor of 4/3, i.e. the transmit frequency of the generator is 4/3 times the analyzer frequency.

Manual operation: See "(Automatic) Source Frequency (Numerator/Denominator/Offset)" on page 85

SOURce:EXTernal:FREQuency[:FACTor]:NUMerator <Value>

This command defines the numerator of the factor with which the analyzer frequency is multiplied in order to obtain the transmit frequency of the selected generator.

Select the multiplication factor such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$\text{Source Freq} = \text{RF} \cdot \frac{\text{Numerator}}{\text{Denominator}} + \text{Offset}$$

Parameters:

<Value> <numeric value>

*RST: 1

Example: `SOUR:EXT:FREQ:NUM 4"`
`"SOUR:EXT:FREQ:DEN 3"`
Sets a multiplication factor of 4/3, i.e. the transmit frequency of the generator is 4/3 times the analyzer frequency.

Manual operation: See "(Automatic) Source Frequency (Numerator/Denominator/Offset)" on page 85

SOURce:EXTernal:FREQuency:OFFSet <Offset>

This command defines the frequency offset of the generator with reference to the analyzer frequency.

Select the offset such that the frequency range of the generator is not exceeded if the following formula is applied to the start and stop frequency of the analyzer:

$$\text{Source Freq} = \text{RF} \cdot \frac{\text{Numerator}}{\text{Denominator}} + \text{Offset}$$

Parameters:

<Offset> <numeric value>, specified in Hz, kHz, MHz or GHz, rounded to the nearest Hz

*RST: 0 Hz

Example: `SOUR:EXT:FREQ:OFFS 10HZ`
Sets an offset of the generator output frequency compared to the analyzer frequency of 10 Hz.

Manual operation: See "(Automatic) Source Frequency (Numerator/Denominator/Offset)" on page 85

SOURce:EXTernal:POWer[:LEVel] <Level>

This command sets the output power of the selected generator.

Parameters:

<Level> <numeric value>

*RST: -20 dBm

Example: `SOUR:EXT:POW -30dBm`
Sets the generator level to -30 dBm

Manual operation: See "Source Power" on page 84

SOURce:EXTernal[:STATe] <State>

This command activates or deactivates the connected external generator.

Parameters:
<State> ON | OFF
*RST: OFF

Manual operation: See "Source State" on page 84

SOURce:POWer[:LEVel][:IMMediate]:OFFSet <Offset>

This command defines a level offset for the external generator level. Thus, for example, attenuators or amplifiers at the output of the external generator can be taken into account for the setting.

Parameters:
<Offset> Range: -200 dB to +200 dB
*RST: 0dB

Example: `SOUR:POW:OFFS -10dB`
Sets the level offset of the external generator to – 20 dBm.

Usage: SCPI confirmed

Manual operation: See "Source Offset" on page 84

Interface Configuration

The following commands are required to configure the interface for the connection to the external generator.

SOURce:EXTernal:ROSCillator[:SOURce] 189
SYSTem:COMMunicate:GPIB:RDEVice:GENerator:ADDRess 190
SYSTem:COMMunicate:RDEVice:GENerator:INTerface 190
SYSTem:COMMunicate:RDEVice:GENerator:LINK 190
SYSTem:COMMunicate:RDEVice:GENerator:TYPE 191
SYSTem:COMMunicate:TCPip:RDEVice:GENerator:ADDRess 191

SOURce:EXTernal:ROSCillator[:SOURce] <Source>

This command controls selection of the reference oscillator for the external generator.

If the external reference oscillator is selected, the reference signal must be connected to the rear panel of the instrument.

Parameters:

<Source>

INTernal
the internal reference is used

EXTernal
the external reference is used; if none is available, an error flag is displayed in the status bar

*RST: INT

Example: SOUR:EXT:ROSC EXT
Switches to external reference oscillator

Manual operation: See "Reference" on page 82

SYSTem:COMMunicate:GPIB:RDEVice:GENerator:ADDRess <Number>

Changes the IEC/IEEE-bus address of the external generator.

Parameters:

<Number>

Range: 0 to 30
*RST: 28

Example: SYST:COMM:GPIB:RDEV:GEN:ADDR 15

Manual operation: See "GPIB Address / TCP/IP Address" on page 82

SYSTem:COMMunicate:RDEVice:GENerator:INTerface <Type>

Defines the interface used for the connection to the external generator.

This command is only available if external generator control is active (see SOURce:EXTernal[:STATe] on page 189).

Parameters:

<Type>

GPIB | TCPip
*RST: GPIB

Example: SYST:COMM:RDEV:GEN:INT TCP

Manual operation: See "Interface" on page 82

SYSTem:COMMunicate:RDEVice:GENerator:LINK <Type>

This command selects the link type of the external generator if the GPIB interface is used.

The difference between the two GPIB operating modes is the execution speed. While, during GPIB operation, each frequency to be set is transmitted to the generator separately, a whole frequency list can be programmed in one go if the TTL interface is also used. Frequency switching can then be performed per TTL handshake which results in considerable speed advantages.

This command is only available if external generator control is active (see SOURce:EXTernal[:STATe] on page 189).

Parameters:

<Type> GPIB | TTL

GPIB
GPIB connection without TTL synchronization (for all generators of other manufacturers and some Rohde & Schwarz devices)

TTL
GPIB connection with TTL synchronization (if available; for most Rohde&Schwarz devices)

*RST: GPIB

Example: `SYST:COMM:RDEV:GEN:LINK TTL`
Selects GPIB + TTL interface for generator operation.

Manual operation: See "TTL Handshake" on page 82

SYSTem:COMMunicate:RDEVice:GENerator:TYPE <Type>

This command selects the type of external generator.

For a list of the available generator types see the "External Generator Control Basics" section in the R&S FSW User Manual.

Parameters:

<Name> <Generator name as string value>

*RST: SMU02

Example: `SYST:COMM:RDEV:GEN2:TYPE 'SME02'`
Selects SME02 as generator 2

Manual operation: See "Generator Type" on page 82

SYSTem:COMMunicate:TCPip:RDEVice:GENerator:ADDRess <Address>

Configures the TCP/IP address for the external generator.

Parameters:

<Address> TCP/IP address between 0.0.0.0 and 0.255.255.255

*RST: 0.0.0.0

Example: `SYST:COMM:TCP:RDEV:GEN:ADDR 130.094.122.195`

Manual operation: See "GPIB Address / TCP/IP Address" on page 82

Source Calibration

The following commands are required to activate the calibration functions of the external tracking generator. However, they are only available if external generator control is active (see `SOURce:EXTernal[:STATe]` on page 189).

Remote commands exclusive to source calibration:

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition....192
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RVALue....192
[SENSe:]CORRection:COLLect[:ACQuire]....192
[SENSe:]CORRection:METHod....193
[SENSe:]CORRection:RECall....194
[SENSe:]CORRection[:STATe]....194
[SENSe:]CORRection:TRANsducer:GENerator....194

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition <Position>

This command defines the vertical position of the reference level on the display grid.

The R&S FSW adjusts the scaling of the y-axis accordingly.

For measurements with the external generator (R&S FSW-B10) the command defines the position of the reference value.

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.

*RST: 100 PCT = frequency display; 50 PCT = time display

Example: `DISP:TRAC:Y:RPOS 50PCT`

Usage: SCPI confirmed

Manual operation: See "Reference Position" on page 87
See "Ref Level Position" on page 101

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RVALue <Value>

The command defines the power value assigned to the reference position in the grid.

For external generator calibration measurements (requires External Generator Control option R&S FSW-B10), this command defines the power offset value assigned to the reference position.

Parameters:

<Value> *RST: 0 dBm, coupled to reference level

Example: `DISP:TRAC:Y:RVAL -20dBm`
Sets the power value assigned to the reference position to -20 dBm

Manual operation: See "Reference Value" on page 88

[SENSe:]CORRection:COLLect[:ACQuire] <MeasType>

This command initiates a reference measurement (calibration). The reference measurement is the basis for the measurement normalization. The result depends on whether a reflection measurement or transmission measurement is performed (see `[SENSe:]CORRection:METHod` on page 193).

To obtain a correct reference measurement, a complete sweep with synchronization to the end of the sweep must have been carried out. This is only possible in the single sweep mode.

This command is only available if external generator control is active (see SOURce:EXTernal[:STATe] on page 189).

Parameters:

<MeasType>

THRough
"TRANsmission" mode: calibration with direct connection between external generator and device input
"REFLection" mode: calibration with short circuit at the input

OPEN
only allowed in "REFLection" mode: calibration with open input

Example:

```
INIT:CONT OFF
```
Selects single sweep operation
```
CORR:METH TRAN
```
Selects a transmission measurement.
```
CORR:COLL THR;*WAI
```
Starts the measurement of reference data using direct connection between generator and device input and waits for the sweep end.

Usage: Setting only
SCPI confirmed

Manual operation: See "Calibrate Reflection Short" on page 86
See "Calibrate Reflection Open" on page 87

[SENSe:]CORRection:METHod

This command selects the type of measurement to be performed with the external generator.

This command is only available if external generator control is active (see SOURce:EXTernal[:STATe] on page 189).

Parameters:

REFLection
Selects reflection measurements.

TRANsmission
Selects transmission measurements.

*RST: TRANsmission

Example:

```
CORR:METH TRAN
```
Sets the type of measurement to "transmission".

Manual operation: See "Calibrate Transmission" on page 86
See "Calibrate Reflection Short" on page 86
See "Calibrate Reflection Open" on page 87

[SENSe:]CORRection:RECall

This command restores the measurement configuration used for calibration.

This command is only available if external generator control is active (see SOURce:EXTernal[:STATe] on page 189).

Example: CORR:REC

Usage: Event
SCPI confirmed

Manual operation: See "Recall" on page 87

[SENSe:]CORRection[:STATe] <State>

This command turns correction of measurement results (normalization) on and off.

The command is available after you have created a reference trace for the selected measurement type with [SENSe:]CORRection:COLLect[:ACQuire] on page 192.

This command is only available if external generator control is active (see SOURce:EXTernal[:STATe] on page 189).

Parameters:
<State> ON | OFF
*RST: OFF

Example: CORR ON
Activates normalization.

Usage: SCPI confirmed

Manual operation: See "Source Calibration Normalize" on page 87

[SENSe:]CORRection:TRANsducer:GENerator <Name>

This command uses the normalized measurement data to generate a transducer factor with up to 1001 points. The trace data is converted to a transducer with unit dB and stored in a file with the specified name and the suffix .trd under c:\r_s\instr\trd. The frequency points are allocated in equidistant steps between start and stop frequency.

The generated transducer factor can be further adapted using the commands described in the "Remote Commands > Configuring the R&S FSW > Working with Transducers" section in the R&S FSW User Manual.

Parameters:
<Name> '<name>

Example: CORR:TRAN:GEN 'SMU01'
Creates the transducer file C:\r_s\instr\trd\SMU01.trd.

Usage: SCPI confirmed

Manual operation: See "Save As Trd Factor" on page 87

Programming Example for External Generator Control

The following example demonstrates how to work with an external generator in a remote environment. It assumes a signal generator of the type SMU04 is connected to the R&S FSW, including TTL synchronization, as described in chapter 5.4.4.1, "External Generator Connections", on page 41.

```
//--------------Preparing the instrument -----------

//Reset the instrument
*RST

//Set the frequency span.
SENS:FREQ:STAR 10HZ
SENS:FREQ:STOP 1MHZ

//--------------Configuring the interface -----------

//Set the generator type to SMU04 with a frequency range of 100 kHz to 4GHz
SYST:COMM:RDEV:GEN:TYPE 'SMU04'

//Set the interface used to the GPIB address 28
SYST:COMM:RDEV:GEN:INT GPIB
SYST:COMM:GPIB:RDEV:GEN:ADDR 28

//Activate the use of TTL synchronization to optimize measurement speed
SYST:COMM:RDEV:GEN:LINK TTL

//Activate the use of the external reference frequency at 10 MHz on the generator
SOUR:EXT:ROSC EXT

//--------------Configuring the calibration measurement -----------

//Activate external generator control.
SOUR:EXT:STAT ON
//Set the generator output level to -10 dBm.
SOUR:EXT:POW -10DBM
//Set the frequency coupling to automatic
SOUR:EXT:FREQ:COUP:STAT ON

//--------------Configuring the generator frequency range -----------

//Define a series of frequencies (one for each sweep point) based on the current
//frequency at the RF input of the analyzer; the generator frequency is half the
//frequency of the analyzer, with an offset of 100 kHz;
// analyzer start:            10 Hz
// analyzer stop:             1 MHz
// analyzer span:             999.99 KHz
// generator frequency start: 100.005 KHz
// generator frequency stop:  600 KHz
// generator span:            499.995 KHz
```

```
SOUR:EXT:FREQ:FACT:NUM 1
SOUR:EXT:FREQ:FACT:DEN 2
SOUR:EXT:FREQ:OFFS 100KHZ

//--------------Performing the calibration measurement -----------

//Perform a transmission measurement with direct connection between the generator
//and the analyzer and wait till the end
SENS:CORR:METH TRAN
SENS:CORR:COLL:ACQ THR; *WAI

//--------------Retrieving the calibration trace results -----------

//Retrieve the measured frequencies (10 Hz - 600 kHz)
TRAC:DATA:X? TRACE1

//Retrieve the measured power levels; = 0 between 10 Hz and 100 kHz (below
//generator minimum frequency); nominal -5dBm as of 100 kHz;
TRAC:DATA? TRACE1

//--------------Normalizing the calibration trace results -----------

//Retrieve the normalized power levels (= power offsets from calibration results)
//Should be 0 for all sweep points directly after calibration
SENS:CORR:STAT ON
TRAC:DATA? TRACE1

//--------------Changing the display of the calibration results -----------
//Shift the reference line so the -5 dB level is displayed in the center
DISP:TRAC:Y:SCAL:RVAL -5DB
DISP:TRAC:Y:SCAL:RPOS 50PCT
```

10.4.1.8 Working with Power Sensors

The following commands describe how to work with power sensors.

- Configuring Power Sensors....196
- Configuring Power Sensor Measurements....198
- Triggering with Power Sensors....204

Configuring Power Sensors

SYSTem:COMMunicate:RDEVice:PMETer<p>:CONFigure:AUTO[:STATe]....197
SYSTem:COMMunicate:RDEVice:PMETer:COUNt?....197
SYSTem:COMMunicate:RDEVice:PMETer<p>:DEFine....197

SYSTem:COMMunicate:RDEVice:PMETer<p>:CONFigure:AUTO[:STATe] <State>

This command turns automatic assignment of a power sensor to the power sensor index on and off.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> ON | OFF | 0 | 1
*RST: 1

Example: `SYST:COMM:RDEV:PMET:CONF:AUTO OFF`

SYSTem:COMMunicate:RDEVice:PMETer:COUNt?

This command queries the number of power sensors currently connected to the R&S FSW.

Parameters:
<NumberSensors> Number of connected power sensors.

Example: `SYST:COMM:RDEV:PMET:COUN?`

Usage: Query only

SYSTem:COMMunicate:RDEVice:PMETer<p>:DEFine <Placeholder>, <Type>, <Interface>, <SerialNo>

This command assigns the power sensor with the specified serial number to the selected power sensor index (configuration).

The query returns the power sensor type and serial number of the sensor assigned to the specified index.

Suffix:
<p> 1...4
Power sensor index

Setting parameters:
<Placeholder> Currently not evaluated

<SerialNo> Serial number of a connected power sensor

Query parameters:
<Type> The power sensor type, e.g. "NRP-Z81".

<Interface> Currently not evaluated

Return values:
<Placeholder> Currently not used

<Type> Detected power sensor type, e.g. "NRP-Z81".

<Interface> Interface the power sensor is connected to; always "USB"

<SerialNo> Serial number of the power sensor assigned to the specified index

Example: `SYST:COMM:RDEV:PMET2:DEF '','NRP-Z81','','123456'`
Assigns the power sensor with the serial number '123456' to the configuration "Power Sensor 2".
`SYST:COMM:RDEV:PMET2:DEF?`
Queries the sensor assigned to "Power Sensor 2".
Result:
`'','NRP-Z81','USB','123456'`
The NRP-Z81 power sensor with the serial number '123456' is assigned to the "Power Sensor 2".

Configuring Power Sensor Measurements

CALibration:PMETer<p>:ZERO:AUTO ONCE....198
CALCulate<n>:PMETer<p>:RELative[:MAGNitude]....199
CALCulate<n>:PMETer<p>:RELative[:MAGNitude]:AUTO ONCE....199
CALCulate<n>:PMETer<p>:RELative:STATe....199
FETCh:PMETer<p>?....199
READ:PMETer<p>?....200
[SENSe:]PMETer<p>:DCYCle[:STATe]....200
[SENSe:]PMETer<p>:DCYCle:VALue....200
[SENSe:]PMETer<p>:FREQuency....201
[SENSe:]PMETer<p>:FREQuency:LINK....201
[SENSe:]PMETer<p>:MTIMe....201
[SENSe:]PMETer<p>:MTIMe:AVERage:COUNt....202
[SENSe:]PMETer<p>:MTIMe:AVERage[:STATe]....202
[SENSe:]PMETer<p>:ROFFset[:STATe]....202
[SENSe:]PMETer<p>[:STATe]....203
[SENSe:]PMETer<p>:UPDate[:STATe]....203
UNIT<n>:PMETer<p>:POWer....203
UNIT<n>:PMETer<p>:POWer:RATio....204

CALibration:PMETer<p>:ZERO:AUTO ONCE

This commands starts to zero the power sensor.

Note that you have to disconnect the signals from the power sensor input before you start to zero the power sensor. Otherwise, results are invalid.

Suffix:
<p> 1...4
Power sensor index

Parameters:
ONCE

Example: `CAL:PMET2:ZERO:AUTO ONCE;*WAI`
Starts zeroing the power sensor 2 and delays the execution of further commands until zeroing is concluded.

Usage: Event

CALCulate<n>:PMETer<p>:RELative[:MAGNitude] <RefValue>

This command defines the reference value for relative measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<RefValue> Range: -200 dBm to 200 dBm
*RST: 0

Example: `CALC:PMET2:REL -30`
Sets the reference value for relative measurements to -30 dBm for power sensor 2.

CALCulate<n>:PMETer<p>:RELative[:MAGNitude]:AUTO ONCE

This command sets the current measurement result as the reference level for relative measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:
ONCE

Example: `CALC:PMET2:REL:AUTO ONCE`
Takes the current measurement value as reference value for relative measurements for power sensor 2.

Usage: Event

CALCulate<n>:PMETer<p>:RELative:STATe <State>

This command turns relative power sensor measurements on and off.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:PMET2:REL:STAT ON`
Activates the relative display of the measured value for power sensor 2.

FETCh:PMETer<p>?

This command queries the results of power sensor measurements.

Suffix:
<p> 1...4
Power sensor index

Return values:
<Level> Power level that has been measured by a power sensor.
The unit is either dBm (absolute measurements) or dB (relative measurements).

Usage: Query only

READ:PMETer<p>?

This command initiates a power sensor measurement and queries the results.

Suffix:
<p> 1...4
Power sensor index

Usage: Query only

[SENSe:]PMETer<p>:DCYCle[:STATe] <State>

This command turns the duty cycle correction on and off.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> ON | OFF
*RST: OFF

Example: `PMET2:DCYC:STAT ON`

[SENSe:]PMETer<p>:DCYCle:VALue <Percentage>

This command defines the duty cycle for the correction of pulse signals.

The power sensor uses the duty cycle in combination with the mean power to calculate the power of the pulse.

Suffix:
<p> 1...4
Power sensor

Parameters:
<Percentage> Range: 0.001 to 99.999
*RST: 99.999
Default unit: %

Example: `PMET2:DCYC:STAT ON`
Activates the duty cycle correction.
`PMET2:DCYC:VAL 0.5`
Sets the correction value to 0.5%.

[SENSe:]PMETer<p>:FREQuency <Frequency>

This command defines the frequency of the power sensor.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Frequency> The available value range is specified in the data sheet of the power sensor in use.
*RST: 50 MHz

Example: `PMET2:FREQ 1GHZ`
Sets the frequency of the power sensor to 1 GHz.

[SENSe:]PMETer<p>:FREQuency:LINK <Coupling>

This command selects the frequency coupling for power sensor measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Coupling> **CENTer**
Couples the frequency to the center frequency of the analyzer
MARKer1
Couples the frequency to the position of marker 1
OFF
Switches the frequency coupling off
*RST: CENTer

Example: `PMET2:FREQ:LINK CENT`
Couples the frequency to the center frequency of the analyzer

---

[SENSe:]PMETer<p>:MTIMe <Duration>

This command selects the duration of power sensor measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:

<Duration> SHORt | NORMal | LONG

*RST: NORMal

Example: `PMET2:MTIM SHOR`

Sets a short measurement duration for measurements of stationary high power signals for the selected power sensor.

[SENSe:]PMETer<p>:MTIMe:AVERage:COUNt <NumberReadings>

This command sets the number of power readings included in the averaging process of power sensor measurements.

Extended averaging yields more stable results for power sensor measurements, especially for measurements on signals with a low power, because it minimizes the effects of noise.

Suffix:

<p> 1...4
Power sensor index

Parameters:

<NumberReadings> An average count of 0 or 1 performs one power reading.

Range: 0 to 256
Increment: binary steps (1, 2, 4, 8, ...)

Example: `PMET2:MTIM:AVER ON`

Activates manual averaging.

`PMET2:MTIM:AVER:COUN 8`

Sets the number of readings to 8.

[SENSe:]PMETer<p>:MTIMe:AVERage[:STATe] <State>

This command turns averaging for power sensor measurements on and off.

Suffix:

<p> 1...4
Power sensor index

Parameters:

<State> ON | OFF

*RST: OFF

Example: `PMET2:MTIM:AVER ON`

Activates manual averaging.

[SENSe:]PMETer<p>:ROFFset[:STATe] <State>

This command includes or excludes the reference level offset of the analyzer for power sensor measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> **ON | 1**
Includes the reference level offset in the results.

OFF | 0
Ignores the reference level offset.

*RST: 1

Example: `PMET2:ROFF OFF`
Takes no offset into account for the measured power.

[SENSe:]PMETer<p>[:STATe] <State>

This command turns a power sensor on and off.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> ON | OFF

*RST: OFF

Example: `PMET1 ON`
Switches the power sensor measurements on.

[SENSe:]PMETer<p>:UPDate[:STATe] <State>

This command turns continuous update of power sensor measurements on and off.

If on, the results are update even if a single sweep is complete.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> ON | OFF

*RST: OFF

Example: `PMET1:UPD ON`
The data from power sensor 1 is updated continuously.

UNIT<n>:PMETer<p>:POWer <Unit>

This command selects the unit for absolute power sensor measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Unit> DBM | WATT | W
*RST: DBM

Example: `UNIT:PMET:POW DBM`

UNIT<n>:PMETer<p>:POWer:RATio <Unit>

This command selects the unit for relative power sensor measurements.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Unit> DB | PCT
*RST: DB

Example: `UNIT:PMET:POW:RAT DB`

Triggering with Power Sensors

[SENSe:]PMETer<p>:TRIGger:DTIMe....204
[SENSe:]PMETer<p>:TRIGger:HOLDoff....204
[SENSe:]PMETer<p>:TRIGger:HYSTeresis....205
[SENSe:]PMETer<p>:TRIGger:LEVel....205
[SENSe:]PMETer<p>:TRIGger:SLOPe....206
[SENSe:]PMETer<p>:TRIGger[:STATe]....206

[SENSe:]PMETer<p>:TRIGger:DTIMe <Time>

This command defines the time period that the input signal has to stay below the IF power trigger level before the measurement starts.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Time> Range: 0 s to 1 s
Increment: 100 ns
*RST: 100 µs

Example: `PMET2:TRIG:DTIMe 0.001`

[SENSe:]PMETer<p>:TRIGger:HOLDoff <Holdoff>

This command defines the trigger holdoff for external power triggers.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Holdoff> Time period that has to pass between the trigger event and the start of the measurement, in case another trigger event occurs.

Range: 0 s to 1 s
Increment: 100 ns
*RST: 0 s

Example: `PMET2:TRIG:HOLD 0.1`
Sets the holdoff time of the trigger to 100 ms

[SENSe:]PMETer<p>:TRIGger:HYSTeresis <Hysteresis>

This command defines the trigger hysteresis for external power triggers.

The hysteresis in dB is the value the input signal must stay below the IF power trigger level in order to allow a trigger to start the measurement.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Hysteresis> Range: 3 dB to 50 dB
Increment: 1 dB
*RST: 0 dB

Example: `PMET2:TRIG:HYST 10`
Sets the hysteresis of the trigger to 10 dB.

[SENSe:]PMETer<p>:TRIGger:LEVel <Level>

This command defines the trigger level for external power triggers.

This command requires the use of an R&S NRP-Z81 power sensor.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Level> -20 to +20 dBm

Range: -20 dBm to 20 dBm
*RST: -10 dBm

Example: `PMET2:TRIG:LEV -10 dBm`
Sets the level of the trigger

[SENSe:]PMETer<p>:TRIGger:SLOPe <Edge>

This command selects the trigger condition for external power triggers.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<Edge> **POSitive**
The measurement starts in case the trigger signal shows a positive edge.

NEGative
The measurement starts in case the trigger signal shows a negative edge.

*RST: POSitive

Example: `PMET2:TRIG:SLOP NEG`

[SENSe:]PMETer<p>:TRIGger[:STATe] <State>

This command turns the external power trigger on and off.

This command requires the use of an R&S NRP-Z81 power sensor.

Suffix:
<p> 1...4
Power sensor index

Parameters:
<State> ON | OFF

*RST: OFF

Example: `PMET2:TRIG ON`
Switches the external power trigger on

10.4.1.9 Configuring the Outputs

Configuring trigger input/output is described in chapter 10.4.4.2, "Configuring the Trigger Output", on page 222.

DIAGnostic:SERVice:NSOurce....206
OUTPut:IF[:SOURce]....207
OUTPut:IF:IFFRequency....207

DIAGnostic:SERVice:NSOurce <State>

This command turns the 28 V supply of the BNC connector labeled NOISE SOURCE CONTROL on the front panel on and off.

For details see chapter 5.4.6, "Input from Noise Sources", on page 52.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `DIAG:SERV:NSO ON`

Manual operation: See "Noise Source" on page 90

OUTPut:IF[:SOURce] <Source>

Defines the type of signal sent to the IF/VIDEO/DEMOD connector on the rear panel of the R&S FSW.

The command is only available in the time domain.

For restrictions and more information see chapter 5.4.8, "IF and Video Signal Output", on page 53.

Parameters:

<Source>

IF
Sends the measured IF value at the frequency defined using `OUTPut:IF:IFFRequency` to the IF/VIDEO/DEMOD output connector.

VIDeo
Sends the displayed video signal (i.e. the filtered and detected IF signal, 200mV) to the IF/VIDEO/DEMOD output connector. This setting is required to send demodulated audio frequencies to the output.

*RST: IF

Example: `OUTP:IF VID`
Selects the video signal for the IF output connector.

Manual operation: See "IF/Video Output" on page 89

OUTPut:IF:IFFRequency <Frequency>

This command defines the frequency for the IF output. The IF frequency of the signal is converted accordingly.

This command is available in the time domain and if the IF/VIDEO/DEMOD output is configured for IF.

If the IF WIDE OUTPUT connector is used (`TRACe:IQ:WBANd ON`, see `TRACe:IQ:WBANd[:STATe]` on page 231, this command is available as a query only. It returns the used IF output frequency which is defined automatically by the application according to the center frequency.

For more information see chapter 5.4.8, "IF and Video Signal Output", on page 53.

Parameters:

<Frequency> *RST: 50.0 MHz

Manual operation: See "IF (Wide) Out Frequency" on page 89

10.4.2 Configuring the Vertical Axis (Amplitude, Scaling)

The following commands are required to configure the amplitude and vertical axis settings in a remote environment.

- Amplitude Settings....208
- Configuring the Attenuation....209
- Configuring a Preamplifier....211
- Scaling the Y-Axis....212

10.4.2.1 Amplitude Settings

Useful commands for amplitude configuration described elsewhere:

- `[SENSe:]ADJust:LEVel` on page 235

Remote commands exclusive to amplitude configuration:

CALCulate<n>:MARKer<m>:FUNCtion:REFerence....208
CALCulate<n>:UNIT:POWer....208
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel....209
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel:OFFSet....209

CALCulate<n>:MARKer<m>:FUNCtion:REFerence

This command matches the reference level to the power level of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Example: `CALC:MARK2:FUNC:REF`
Sets the reference level to the level of marker 2.

Usage: Event

Manual operation: See "Reference Level = Marker Level" on page 133

CALCulate<n>:UNIT:POWer <Unit>

This command selects the unit of the y-axis.

The unit applies to all measurement windows.

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere

*RST: dBm

Example: `CALC:UNIT:POW DBM`
Sets the power unit to dBm.

Manual operation: See "Reference Level" on page 94
See "Unit" on page 95

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level.

Example: `DISP:TRAC:Y:RLEV -60dBm`

Usage: SCPI confirmed

Manual operation: See "Reference Level" on page 94

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel:OFFSet <Offset>

This command defines a reference level offset.

Parameters:
<Offset> Range: -200 dB to 200 dB
*RST: 0dB

Example: `DISP:TRAC:Y:RLEV:OFFS -10dB`

Manual operation: See "Reference Level" on page 94
See "Shifting the Display (Offset)" on page 94

10.4.2.2 Configuring the Attenuation

INPut:ATTenuation....209
INPut:ATTenuation:AUTO....210
INPut:EATT....210
INPut:EATT:AUTO....211
INPut:EATT:STATe....211

INPut:ATTenuation <Attenuation>

This command defines the total attenuation for RF input.

If an electronic attenuator is available and active, the command defines a mechanical attenuation (see `INPut:EATT:STATe` on page 211).

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

This function is not available if the Digital Baseband Interface (R&S FSW-B17) is active.

Parameters:

<Attenuation>
Range: see data sheet
Increment: 5 dB
*RST: 10 dB (AUTO is set to ON)

Example: `INP:ATT 30dB`
Defines a 30 dB attenuation and decouples the attenuation from the reference level.

Usage: SCPI confirmed

Manual operation: See "RF Attenuation" on page 95
See "Attenuation Mode / Value" on page 96

INPut:ATTenuation:AUTO <State>

This command couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the R&S FSW determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

This function is not available if the Digital Baseband Interface (R&S FSW-B17) is active.

Parameters:

<State>
ON | OFF | 0 | 1
*RST: 1

Example: `INP:ATT:AUTO ON`
Couples the attenuation to the reference level.

Usage: SCPI confirmed

Manual operation: See "RF Attenuation" on page 95
See "Attenuation Mode / Value" on page 96

INPut:EATT <Attenuation>

This command defines an electronic attenuation manually. Automatic mode must be switched off (`INP:EATT:AUTO OFF`, see `INPut:EATT:AUTO` on page 211).

If the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

This command is only available with option R&S FSW-B25.

It is not available if R&S FSW-B17 is active.

Parameters:

<Attenuation>
attenuation in dB
Range: see data sheet
Increment: 1 dB
*RST: 0 dB (OFF)

Example:
```
INP:EATT:AUTO OFF
INP:EATT 10 dB
```

Manual operation: See "Using Electronic Attenuation (Option B25)" on page 96

INPut:EATT:AUTO <State>

This command turns automatic selection of the electronic attenuation on and off.

If on, electronic attenuation reduces the mechanical attenuation whenever possible.

This command is only available with option R&S FSW-B25.

It is not available if R&S FSW-B17 is active.

Parameters:
<State> ON | OFF | 0 | 1
*RST: 1

Example: `INP:EATT:AUTO OFF`

Manual operation: See "Using Electronic Attenuation (Option B25)" on page 96

INPut:EATT:STATe <State>

This command turns the electronic attenuator on and off.

This command is only available with option R&S FSW-B25.

It is not available if R&S FSW-B17 is active.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `INP:EATT:STAT ON`
Switches the electronic attenuator into the signal path.

Manual operation: See "Using Electronic Attenuation (Option B25)" on page 96

10.4.2.3 Configuring a Preamplifier

INPut:GAIN:STATe....211
INPut:GAIN[:VALue]....212

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off.

The command requires option R&S FSW-B24.

This function is not available for input from the Digital Baseband Interface (R&S FSW-B17).

Parameters:
<State> ON | OFF
*RST: OFF

Example: `INP:GAIN:STAT ON`
Switches on 30 dB preamplification.

Usage: SCPI confirmed

Manual operation: See "Input Settings" on page 96
See "Preamplifier (option B24)" on page 97

INPut:GAIN[:VALue] <Gain>

This command selects the preamplification level if the preamplifier is activated (`INP:GAIN:STAT ON`, see `INPut:GAIN:STATe` on page 211).

The command requires option R&S FSW-B24.

Parameters:

<Gain> 15 dB | 30 dB

The availability of preamplification levels depends on the R&S FSW model.
- R&S FSW8: 15dB and 30 dB
- R&S FSW13: 15dB and 30 dB
- R&S FSW26: 30 dB

All other values are rounded to the nearest of these two.

*RST: OFF

Example: `INP:GAIN:VAL 30`
Switches on 30 dB preamplification.

Usage: SCPI confirmed

Manual operation: See "Input Settings" on page 96
See "Preamplifier (option B24)" on page 97

10.4.2.4 Scaling the Y-Axis

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe] 212
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:AUTO ONCE 213
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MODE 213
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition 213
DISPlay[:WINDow<n>]:TRACe:Y:SPACing 213

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe] <Range>

This command defines the display range of the y-axis.

Example: `DISP:TRAC:Y 110dB`

Usage: SCPI confirmed

Manual operation: See "Range" on page 100
See "Y-Axis Max" on page 101

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:AUTO ONCE

Automatic scaling of the y-axis is performed once, then switched off again.

Usage: SCPI confirmed

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MODE <Mode>

This command selects the type of scaling of the y-axis.

When the display update during remote control is off, this command has no immediate effect.

Parameters:

<Mode> **ABSolute**
absolute scaling of the y-axis

RELative
relative scaling of the y-axis

*RST: ABSolute

Example:
```
DISP:TRAC:Y:MODE REL
```

Manual operation: See "Scaling" on page 101

DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition <Position>

This command defines the vertical position of the reference level on the display grid.

The R&S FSW adjusts the scaling of the y-axis accordingly.

For measurements with the external generator (R&S FSW-B10) the command defines the position of the reference value.

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corresponds to the upper display border.

*RST: 100 PCT = frequency display; 50 PCT = time display

Example:
```
DISP:TRAC:Y:RPOS 50PCT
```

Usage: SCPI confirmed

Manual operation: See "Reference Position" on page 87
See "Ref Level Position" on page 101

DISPlay[:WINDow<n>]:TRACe:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis.

Parameters:

<ScalingType>

LOGarithmic
Logarithmic scaling.

LINear
Linear scaling in %.

LDB
Linear scaling in the specified unit.

PERCent
Linear scaling in %.

*RST: LOGarithmic

Example: `DISP:TRAC:Y:SPAC LIN`
Selects linear scaling in %.

Usage: SCPI confirmed

Manual operation: See "Scaling" on page 101

10.4.3 Frequency

CALCulate<n>:MARKer<m>:FUNCtion:CENTer....214
[SENSe:]FREQuency:CENTer....214
[SENSe:]FREQuency:CENTer:STEP....215
[SENSe:]FREQuency:CENTer:STEP:AUTO....215
[SENSe:]FREQuency:OFFSet....216

CALCulate<n>:MARKer<m>:FUNCtion:CENTer

This command matches the center frequency to the frequency of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Example: `CALC:MARK2:FUNC:CENT`
Sets the center frequency to the frequency of marker 2.

Usage: Event

Manual operation: See "Center Frequency = Marker Frequency" on page 133

[SENSe:]FREQuency:CENTer <Frequency>

This command defines the center frequency.

Parameters:

<Frequency> The allowed range and f_{max} is specified in the data sheet.

UP
Increases the center frequency by the step defined using the `[SENSe:]FREQuency:CENTer:STEP` command.

DOWN
Decreases the center frequency by the step defined using the `[SENSe:]FREQuency:CENTer:STEP` command.

*RST: fmax/2
Default unit: Hz

Example:
```
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
```
Sets the center frequency to 110 MHz.

Usage: SCPI confirmed

Manual operation: See "Center Frequency" on page 79
See "Center" on page 102

[SENSe:]FREQuency:CENTer:STEP <StepSize>

This command defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the `SENS:FREQ UP` AND `SENS:FREQ DOWN` commands, see `[SENSe:]FREQuency:CENTer` on page 214.

Parameters:

<StepSize> f_{max} is specified in the data sheet.

Range: 1 to fMAX
*RST: 0.1 x span
Default unit: Hz

Example:
```
FREQ:CENT 100 MHz
FREQ:CENT:STEP 10 MHz
FREQ:CENT UP
```
Sets the center frequency to 110 MHz.

Manual operation: See "Center Frequency Stepsize" on page 102

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

This command couples or decouples the center frequency step size to the span.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: `FREQ:CENT:STEP:AUTO ON`
Activates the coupling of the step size to the span.

[SENSe:]FREQuency:OFFSet <Offset>

This command defines a frequency offset.

If this value is not 0 Hz, the application assumes that the input signal was frequency shifted outside the application. All results of type "frequency" will be corrected for this shift numerically by the application.

See also "Frequency Offset" on page 102.

Parameters:
<Offset> Range: -100 GHz to 100 GHz
*RST: 0 Hz

Example: `FREQ:OFFS 1GHZ`

Usage: SCPI confirmed

Manual operation: See "Frequency Offset" on page 102

10.4.4 Triggering

The following remote commands are required to configure a triggered measurement in a remote environment. More details are described for manual operation in chapter 6.7, "Trigger Settings", on page 103.

*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.

- Configuring the Triggering Conditions....216
- Configuring the Trigger Output....222
- Configuring I/Q Gating....224

10.4.4.1 Configuring the Triggering Conditions

TRIGger[:SEQuence]:BBPower:HOLDoff....217
TRIGger[:SEQuence]:DTIMe....217
TRIGger[:SEQuence]:HOLDoff[:TIME]....217
TRIGger[:SEQuence]:IFPower:HOLDoff....218
TRIGger[:SEQuence]:IFPower:HYSTeresis....218
TRIGger[:SEQuence]:LEVel:BBPower....218
TRIGger[:SEQuence]:LEVel[:EXTernal<port>]....219
TRIGger[:SEQuence]:LEVel:IFPower....219
TRIGger[:SEQuence]:LEVel:IQPower....219
TRIGger[:SEQuence]:LEVel:RFPower....220

TRIGger[:SEQuence]:SLOPe....220
TRIGger[:SEQuence]:SOURce....220
TRIGger[:SEQuence]:TIME:RINTerval....222

TRIGger[:SEQuence]:BBPower:HOLDoff <Period>

This command defines the holding time before the baseband power trigger event.

The command requires the **Digital Baseband Interface (R&S FSW-B17)** or the **Analog Baseband Interface (R&S FSW-B71)**.

Note that this command is maintained for compatibility reasons only. Use the `TRIGger[:SEQuence]:IFPower:HOLDoff` on page 218 command for new remote control programs.

Parameters:

<Period>
Range: 150 ns to 1000 s
*RST: 150 ns

Example:
```
TRIG:SOUR BBP
```
Sets the baseband power trigger source.
```
TRIG:BBP:HOLD 200 ns
```
Sets the holding time to 200 ns.

TRIGger[:SEQuence]:DTIMe <DropoutTime>

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

For input from the Analog Baseband Interface (R&S FSW-B71) using the baseband power trigger (BBP), the default drop out time is set to 100 ns to avoid unintentional trigger events (as no hysteresis can be configured in this case).

Parameters:

<DropoutTime>
Dropout time of the trigger.

Range: 0 s to 10.0 s
*RST: 0 s

Manual operation:
See "Trigger Source" on page 105
See "Drop-Out Time" on page 108

TRIGger[:SEQuence]:HOLDoff[:TIME] <Offset>

Defines the time offset between the trigger event and the start of the sweep (data capturing).

Parameters:

<Offset>
For measurements in the frequency domain, the range is 0 s to 30 s.
For measurements in the time domain, the range is the negative sweep time to 30 s.

*RST: 0 s

Example: `TRIG:HOLD 500us`

Manual operation: See "Trigger Source" on page 105
See "Trigger Offset" on page 108

TRIGger[:SEQuence]:IFPower:HOLDoff <Period>

This command defines the holding time before the next trigger event.

Note that this command is available for **any trigger source**, not just IF Power.

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FSW ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q data measurements.

Parameters:
<Period> *RST: 0 s

Example: `TRIG:SOUR IFP`
Sets the IF power trigger source.
`TRIG:IFP:HOLD 200 ns`
Sets the holding time to 200 ns.

Manual operation: See "Trigger Source" on page 105
See "Trigger Holdoff" on page 109

TRIGger[:SEQuence]:IFPower:HYSTeresis <Hysteresis>

This command defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

Parameters:
<Hysteresis> Range: 3 dB to 50 dB
*RST: 3 dB

Example: `TRIG:SOUR IFP`
Sets the IF power trigger source.
`TRIG:IFP:HYST 10DB`
Sets the hysteresis limit value.

Manual operation: See "Trigger Source" on page 105
See "Hysteresis" on page 109

TRIGger[:SEQuence]:LEVel:BBPower <Level>

This command sets the level of the baseband power trigger.

This command is available for the **Digital Baseband Interface (R&S FSW-B17)** and the **Analog Baseband Interface (R&S FSW-B71)**.

Parameters:
<Level> Range: -50 dBm to +20 dBm
*RST: -20 DBM

Example: `TRIG:LEV:BB -30DBM`

Manual operation: See "Trigger Source" on page 105
See "Trigger Level" on page 108

TRIGger[:SEQuence]:LEVel[:EXTernal<port>] <TriggerLevel>

This command defines the level the external signal must exceed to cause a trigger event.

In the I/Q Analyzer application only `EXTernal1` is supported.

Suffix:
<port> 1 | 2 | 3
Selects the trigger port.
1 = trigger port 1 (TRIGGER INPUT connector on front panel)
2 = trigger port 2 (TRIGGER INPUT/OUTPUT connector on front panel)
3 = trigger port 3 (TRIGGER3 INPUT/OUTPUT connector on rear panel)

Parameters:
<TriggerLevel> Range: 0.5 V to 3.5 V
*RST: 1.4 V

Example: `TRIG:LEV 2V`

Manual operation: See "Trigger Source" on page 105
See "Trigger Level" on page 108

TRIGger[:SEQuence]:LEVel:IFPower <TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

For compatibility reasons, this command is also available for the "baseband power" trigger source when using the Analog Baseband Interface (R&S FSW-B71).

Parameters:
<TriggerLevel> For details on available trigger levels and trigger bandwidths see the data sheet.
*RST: -10 dBm

Example: `TRIG:LEV:IFP -30DBM`

TRIGger[:SEQuence]:LEVel:IQPower <TriggerLevel>

This command defines the magnitude the I/Q data must exceed to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed.

Parameters:

<TriggerLevel> Range: -130 dBm to 30 dBm
*RST: -20 dBm

Example: `TRIG:LEV:IQP -30DBM`

TRIGger[:SEQuence]:LEVel:RFPower <TriggerLevel>

This command defines the power level the RF input must exceed to cause a trigger event. Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

The input signal must be between 500 MHz and 8 GHz.

Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths see the data sheet.
*RST: -20 dBm

Example: `TRIG:LEV:RFP -30dBm`

TRIGger[:SEQuence]:SLOPe <Type>

For all trigger sources except time you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Parameters:

<Type> POSitive | NEGative

POSitive
Triggers when the signal rises to the trigger level (rising edge).

NEGative
Triggers when the signal drops to the trigger level (falling edge).

*RST: POSitive

Example: `TRIG:SLOP NEG`

Manual operation: See "Trigger Source" on page 105
See "Slope" on page 109

TRIGger[:SEQuence]:SOURce <Source>

This command selects the trigger source.

Note on external triggers:

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure this situation is avoided in your remote control programs.

Parameters:

<Source>

IMMediate
Free Run

EXTernal
Trigger signal from the TRIGGER INPUT connector.

EXT2
Trigger signal from the TRIGGER INPUT/OUTPUT connector.
Note: Connector must be configured for "Input".

EXT3
Trigger signal from the TRIGGER 3 INPUT/ OUTPUT connector.
Note: Connector must be configured for "Input".

RFPower
First intermediate frequency
Not available for input from the Digital Baseband Interface (R&S FSW-B17) or the Analog Baseband Interface (R&S FSW-B71).

IFPower
Second intermediate frequency
Not available for input from the Digital Baseband Interface (R&S FSW-B17). For input from the Analog Baseband Interface (R&S FSW-B71), this command is interpreted as `BBPower` for compatibility reasons.

IQPower
Magnitude of sampled I/Q data
For applications that process I/Q data, such as the I/Q Analyzer or optional applications.
Not available for input from the Digital Baseband Interface (R&S FSW-B17) or the Analog Baseband Interface (R&S FSW-B71).

TIME
Time interval

BBPower
Baseband power (for digital input via the Digital Baseband Interface R&S FSW-B17 or the Analog Baseband interface R&S FSW-B71)

PSEN
External power sensor

*RST: IMMediate

Example:

```
TRIG:SOUR EXT
```

Selects the external trigger input as source of the trigger signal

Manual operation: See "Trigger Source" on page 105
See "Trigger Source" on page 105
See "Free Run" on page 105
See "External Trigger 1/2/3" on page 105
See "Video" on page 105
See "IF Power" on page 106
See "Baseband Power" on page 106
See "I/Q Power" on page 106
See "Digital I/Q" on page 106
See "RF Power" on page 107
See "Power Sensor" on page 107
See "Time" on page 108

TRIGger[:SEQuence]:TIME:RINTerval <Interval>

This command defines the repetition interval for the time trigger.

Parameters:
<Interval> 2.0 ms to 5000
Range: 2 ms to 5000 s
*RST: 1.0 s

Example: `TRIG:SOUR TIME`
Selects the time trigger input for triggering.
`TRIG:TIME:RINT 50`
The sweep starts every 50 s.

Manual operation: See "Trigger Source" on page 105
See "Repetition Interval" on page 108

10.4.4.2 Configuring the Trigger Output

The following commands are required to send the trigger signal to one of the variable TRIGGER INPUT/OUTPUT connectors. The tasks for manual operation are described in "Trigger 2/3" on page 90.

OUTPut:TRIGger<port>:DIRection....222
OUTPut:TRIGger<port>:LEVel....223
OUTPut:TRIGger<port>:OTYPe....223
OUTPut:TRIGger<port>:PULSe:IMMediate....224
OUTPut:TRIGger<port>:PULSe:LENGth....224

OUTPut:TRIGger<port>:DIRection <Direction>

This command selects the trigger direction.

Suffix:
<port> 2 | 3
Selects the trigger port to which the output is sent.
2 = trigger port 2 (front)
3 = trigger port 3 (rear)

Parameters:

<Direction>

INPut
Port works as an input.

OUTPut
Port works as an output.

*RST: INPut

Manual operation: See "Trigger 2/3" on page 90

OUTPut:TRIGger<port>:LEVel <Level>

This command defines the level of the signal generated at the trigger output.

This command works only if you have selected a user defined output with `OUTPut:TRIGger<port>:OTYPe`.

Suffix:

<port>

2 | 3
Selects the trigger port to which the output is sent.
2 = trigger port 2 (front)
3 = trigger port 3 (rear)

Parameters:

<Level>

HIGH
TTL signal.

LOW
0 V

*RST: LOW

Manual operation: See "Trigger 2/3" on page 90
See "Output Type" on page 90
See "Level" on page 91

OUTPut:TRIGger<port>:OTYPe <OutputType>

This command selects the type of signal generated at the trigger output.

Suffix:

<port>

2 | 3
Selects the trigger port to which the output is sent.
2 = trigger port 2 (front)
3 = trigger port 3 (rear)

Parameters:

<OutputType>

DEVice
Sends a trigger signal when the R&S FSW has triggered internally.

TARMed
Sends a trigger signal when the trigger is armed and ready for an external trigger event.

UDEFined
Sends a user defined trigger signal. For more information see `OUTPut:TRIGger<port>:LEVel`.

*RST: DEVice

Manual operation: See "Trigger 2/3" on page 90
See "Output Type" on page 90

OUTPut:TRIGger<port>:PULSe:IMMediate

This command generates a pulse at the trigger output.

Suffix:

<port>

2 | 3
Selects the trigger port to which the output is sent.
2 = trigger port 2 (front)
3 = trigger port 3 (rear)

Usage: Event

Manual operation: See "Trigger 2/3" on page 90
See "Output Type" on page 90
See "Send Trigger" on page 91

OUTPut:TRIGger<port>:PULSe:LENGth <Length>

This command defines the length of the pulse generated at the trigger output.

Suffix:

<port>

2 | 3
Selects the trigger port to which the output is sent.
2 = trigger port 2 (front)
3 = trigger port 3 (rear)

Parameters:

<Length>

Pulse length in seconds.

Manual operation: See "Trigger 2/3" on page 90
See "Output Type" on page 90
See "Pulse Length" on page 91

10.4.4.3 Configuring I/Q Gating

Usually in spectrum analysis, measurements are based on a certain length of time called the gate area. With I/Q gating, you can define the gate area using the gate length, the

distance between the capture periods and the number of periods. The gate length and the distance between the capture periods are specified in samples.

I/Q gating is only available using remote commands; manual configuration is not possible.

Using I/Q gating, the gate area can be defined using the following methods:

- Edge triggered capturing
  After a trigger signal, the gate period is defined by a gate length and a gate distance. All data in the gate period is captured until the required number of samples has been captured.

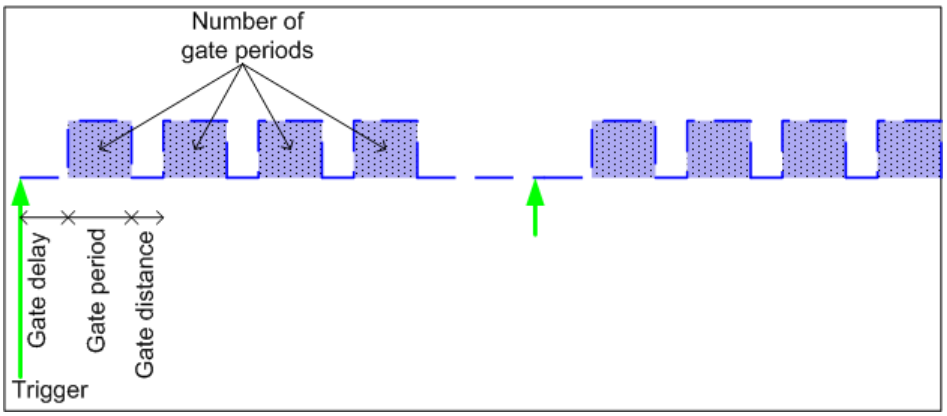

- Level triggered capturing
  After a trigger signal, all data is captured in which the gate signal is set to 1, which means it has exceeded a level. In this case, the gate signal can be generated by the IFP trigger, for example: each time the IFP level is exceeded, the IFP trigger signal is set to 1 and the samples in this area are captured as gate samples.

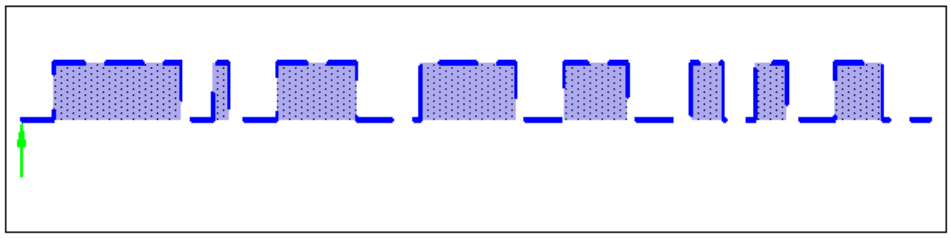

The number of complex samples to be captured prior to the trigger event can be selected (see `TRACe:IQ:SET` on page 229) for all available trigger sources, except for "Free Run".

TRACe:IQ:EGATe <State>

This command turns gated measurements with the I/Q analyzer on and off.

Before you can use the command you have to turn on the I/Q analyzer and select an external or IF power trigger source.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `TRAC:IQ:EGAT ON`

TRACe:IQ:EGATe:GAP <Samples>

This command defines the interval between several gate periods for gated measurements with the I/Q analyzer.

Parameters:
<Samples> <numeric value>
Max = (440 MS * sample rate/200MHz) -1
pretrigger samples defined by `TRACe:IQ:SET`;
sample rate defined by `TRACe:IQ:SRATe`)
Range: 1…Max (samples)
*RST: 1

Example: `TRAC:IQ:EGAT:GAP 2`

TRACe:IQ:EGATe:LENGth <GateLength>

This command defines the gate length for gated measurements with the I/Q analyzer.

Defines the gate length in samples in edge mode. For details see chapter 10.4.4.3, "Configuring I/Q Gating", on page 224.

Parameters:
<GateLength> <numeric value>
Max = (440 MS * sample rate/200MHz) -1
pretrigger samples defined by `TRACe:IQ:SET`;
sample rate defined by `TRACe:IQ:SRATe`)
Range: 1…Max (samples)
*RST: 100

Example: `TRAC:IQ:EGAT:LENG 2000`

TRACe:IQ:EGATe:NOFgateperiods <Number>

This command defines the number of gate periods after the trigger signal for gated measurements with the I/Q analyzer.

Parameters:
<Number> Range: 1 to 1023
*RST: 1

Example: `TRAC:IQ:EGAT:NOF 2`

TRACe:IQ:EGATe:TYPE <Type>

This command selects the gate mode for gated measurements with the I/Q analyzer.

Note: The IF power trigger holdoff time is ignored if you are using the "Level" gate mode in combination with an IF Power trigger.

Parameters:

<Type> **LEVel**
EDGE
*RST: EDGE

Example: `TRAC:IQ:EGAT:TYPE LEV`

10.4.5 Configuring Data Acquisition

The following commands are required to capture data in the I/Q Analyzer.

MSRA operating mode

Note that in MSRA operating mode, configuring data acquisition is only possible for the MSRA Master channel. In I/Q Analyzer application channels, these commands define the **analysis interval**. Be sure to select the correct measurement channel before using these commands.

For more commands related to the MSRA operating mode see chapter 10.7.4, "Configuring an Analysis Interval and Line (MSRA mode only)", on page 270.

Useful commands for I/Q data acquisition described elsewhere

- `[SENSe:]SWEep:COUNt` on page 247
- `[SENSe:]SWEep:POINts` on page 247
- `[SENSe:]SWEep:TIME` on page 247

Remote commands exclusive to I/Q data acquisition

TRACe:IQ:BWIDth....227
TRACe:IQ:DIQFilter....228
TRACe:IQ:RLENgth....228
TRACe:IQ:SET....229
TRACe:IQ:SRATe....230
TRACe:IQ:TPISample?....230
TRACe:IQ:WBANd[:STATe]....231
TRACe:IQ:WBANd:MBWIDTH....232

TRACe:IQ:BWIDth

This command defines or queries the bandwidth of the resampling filter.

The bandwidth of the resampling filter depends on the sample rate.

Parameters:

<Bandwidth> For details on the maximum bandwidth see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22.

Manual operation: See "Analysis Bandwidth" on page 112

TRACe:IQ:DIQFilter <State>

This command is only available when using the Digital Baseband Interface (R&S FSW-B17).

By default, a decimation filter is used during data acquisition to reduce the sample rate to the value defined using `TRACe:IQ:SRATe`.

If the filter is bypassed, the sample rate is identical to the input sample rate configured for the Digital I/Q input source (see `INPut:DIQ:SRATe` on page 165).

Parameters:

<State> ON | OFF

ON
The digital I/Q filter bypass is on, i.e. no filter or resampler is used during I/Q data acquisition.

OFF
The filter bypass is off, i.e. decimation filter and resampler are used during I/Q data acquisition.

*RST: OFF

Manual operation: See "Omitting the Digital Decimation Filter (No Filter)" on page 113

TRACe:IQ:RLENgth <NoOfSamples>

This command sets the record length for the acquired I/Q data.

Increasing the record length also increases the measurement time.

Note: Alternatively, you can define the measurement time using the `SENS:SWE:TIME` command.

Parameters:

<NoOfSamples> Number of samples values to record.
For digital input via the Digital Baseband Interface (R&S FSW-B17) the valid number of samples is described in chapter 5.2.3, "Sample Rates and Bandwidths for Digital I/Q Data", on page 29.

Range: 1 ... 461373440 (= 4400*1024*1024);
*RST: 691

Example: `TRAC:IQ:RLEN 256`

Manual operation: See "Record Length" on page 113

TRACe:IQ:SET NORM, 0, <SampleRate>, <TriggerMode>, <TriggerSlope>, <PretriggerSamp>, <NumberSamples>

This command sets up the R&S FSW for I/Q measurements.

If you do not use this command to set up I/Q measurements, the R&S FSW will use its current settings for I/Q measurements.

If the I/Q Analyzer has not been turned on previously, the command also switches to the I/Q Analyzer.

For more information on triggering measurements see chapter 6.7, "Trigger Settings", on page 103. You can set the trigger level with `TRIGger[:SEQuence]:LEVel:IFPower`. For details on trigger parameters see chapter 10.4.4, "Triggering", on page 216.

Note: If you use the default settings with `TRACe:IQ:DATA?`, the following minimum buffer sizes for the response data are recommended:

ASCII format: 10 kBytes

Binary format: 2 kBytes

Parameters:

NORM — This value is always `NORM`.

0 — This value is always `0`.

<SampleRate> — Sample rate for the data acquisition.

Range: 100 Hz to 10 GHz, continuously adjustable
*RST: 32000000

<TriggerMode> — Selection of the trigger source used for the measurement.

IMMediate | EXTernal | EXT2 | EXT3 | IFPower
For IMM mode, gating is automatically deactivated.

*RST: IMM

<TriggerSlope> — Used trigger slope.

POSitive | NEGative

*RST: POS

<PretriggerSamp> — Defines the trigger offset in terms of pretrigger samples. Negative values correspond to a trigger delay.
This value also defines the interval between the trigger signal and the gate edge in samples.

Range: -461373339 to 461373339
*RST: 0

<NumberSamples> — Number of measurement values to record (including the pretrigger samples).
When using the Digital Baseband interface (B17), the maximum number of samples is 100 MS.

Range: 1 … 461373339 (= (440*1024*1024) -1)
*RST: 1001

Example:
```
TRAC:IQ:SET NORM,0,32MHz,EXT,POS,0,2048
```
Reads 2048 I/Q-values starting at the trigger point.
sample rate = 32 MHz
trigger = External
slope = Positive
```
TRAC:IQ:SET NORM,0,4 MHz,EXT,POS,1024,512
```
Reads 512 I/Q-values from 1024 measurement points before the trigger point.
filter type = NORMAL
sample rate = 4 MHz
trigger = External
slope = Positive

Manual operation: See "Record Length" on page 113

TRACe:IQ:SRATe <SampleRate>

This command sets the final user sample rate for the acquired I/Q data. Thus, the user sample rate can be modified without affecting the actual data capturing settings on the R&S FSW.

Note: The smaller the user sample rate, the smaller the usable I/Q bandwidth, see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22.

Parameters:

<SampleRate> The valid sample rates are described in chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22.

Range: 100 Hz to 10 GHz continuously adjustable;
*RST: 32 MHz

Manual operation: See "Sample Rate" on page 112

TRACe:IQ:TPISample?

This command queries the time offset between the sample start and the trigger event (trigger point in sample = TPIS). Since the R&S FSW usually samples with a much higher sample rate than the specific application actually requires, the trigger point determined internally is much more precise than the one determined from the (downsampled) data in the application. Thus, the TPIS indicates the offset between the sample start and the actual trigger event.

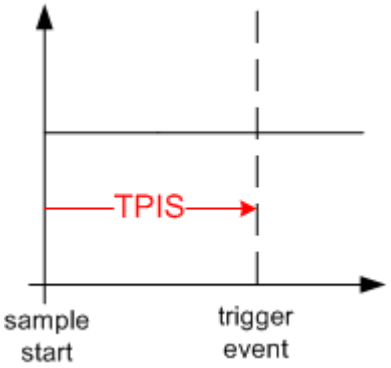

This value can only be determined in triggered measurements using external or IFPower triggers, otherwise the value is 0.

This command is not available if the Digital Baseband Interface (R&S FSW-B17) is active.

Example: `TRAC:IQ:TPIS?`
Result for a sample rate of 1 MHz: between 0 and 1/1 MHz, i.e. between 0 and 1 µs (the duration of 1 sample).

Usage: Query only

Manual operation: See "Trigger Source" on page 105
See "Trigger Offset" on page 108

TRACe:IQ:WBANd[:STATe] <State>

This command determines whether the wideband provided by bandwidth extension options is used or not (if installed).

Parameters:

<State> ON | OFF

ON
If enabled, the currently available maximum bandwidth is allowed. This value depends on which bandwidth extension options are installed, if any (see chapter 5.1.1, "Sample Rate and Maximum Usable I/Q Bandwidth for RF Input", on page 22). All installed bandwidth extension options are activated. Note that using bandwidth extension options R&S FSW-B160/-B320 may cause more spurious effects.

OFF
The maximum analysis bandwidth is restricted, the bandwidth extension option R&S FSW-B320, and possibly also B160, is deactivated. Which maximum bandwidth applies is determined by the subsequent `TRACe:IQ:WBANd:MBWIDTH` command.

*RST: ON

Manual operation: See "Maximum Bandwidth" on page 112

TRACe:IQ:WBANd:MBWIDTH <Limit>

Defines the maximum analysis bandwidth if `TRACe:IQ:WBANd[:STATe]` is OFF. The corresponding bandwidth extension option R&S FSW-B160 or B320 is deactivated.

Parameters:

<Limit> 80 MHz | 160 MHz

Numeric value (double);
Entries other than the given fixed values are rounded to the next higher fixed value.

*RST: 80 MHz
Default unit: Hz

Manual operation: See "Maximum Bandwidth" on page 112

10.4.6 Adjusting Settings Automatically

The commands required to adjust settings automatically in a remote environment are described here. The tasks for manual operation are described in chapter 6.10, "Adjusting Settings Automatically", on page 116.

MSRA operating mode

In MSRA operating mode, settings related to data acquisition (measurement time, hysteresis) can only be adjusted automatically in the MSRA Master, not in the MSRA applications.

[SENSe:]ADJust:ALL....232
[SENSe:]ADJust:CONFigure:DURation....233
[SENSe:]ADJust:CONFigure:DURation:MODE....233
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer....233
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer....234
[SENSe:]ADJust:CONFigure:TRIG....234
[SENSe:]ADJust:FREQuency....234
[SENSe:]ADJust:LEVel....235

[SENSe:]ADJust:ALL

This command initiates a measurement to determine and set the ideal settings for the current task automatically (only once for the current measurement).

This includes:

- Reference level

Example: `ADJ:ALL`

Usage: Event

Manual operation: See "Adjusting all Determinable Settings Automatically (Auto All)" on page 117

[SENSe:]ADJust:CONFigure:DURation <Duration>

In order to determine the ideal reference level, the R&S FSW performs a measurement on the current input data. This command defines the length of the measurement if `[SENSe:]ADJust:CONFigure:DURation:MODE` is set to `MANual`.

Parameters:

<Duration> Numeric value in seconds

Range: 0.001 to 16000.0
*RST: 0.001
Default unit: s

Example: `ADJ:CONF:DUR:MODE MAN`
Selects manual definition of the measurement length.
`ADJ:CONF:LEV:DUR 5ms`
Length of the measurement is 5 ms.

Manual operation: See "Changing the Automatic Measurement Time (Meastime Manual)" on page 118

[SENSe:]ADJust:CONFigure:DURation:MODE <Mode>

In order to determine the ideal reference level, the R&S FSW performs a measurement on the current input data. This command selects the way the R&S FSW determines the length of the measurement .

Parameters:

<Mode>

AUTO
The R&S FSW determines the measurement length automatically according to the current input data.

MANual
The R&S FSW uses the measurement length defined by `[SENSe:]ADJust:CONFigure:DURation` on page 233.

*RST: AUTO

Manual operation: See "Resetting the Automatic Measurement Time (Meastime Auto)" on page 118
See "Changing the Automatic Measurement Time (Meastime Manual)" on page 118

[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer <Threshold>

When the reference level is adjusted automatically using the `[SENSe:]ADJust:LEVel` on page 235 command, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold>
Range: 0 dB to 200 dB
*RST: +1 dB
Default unit: dB

Example: `SENS:ADJ:CONF:HYST:LOW 2`
For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

Manual operation: See "Lower Level Hysteresis" on page 118

[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer <Threshold>

When the reference level is adjusted automatically using the `[SENSe:]ADJust:LEVel` on page 235 command, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold>
Range: 0 dB to 200 dB
*RST: +1 dB
Default unit: dB

Example: `SENS:ADJ:CONF:HYST:UPP 2`

Example: For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

Manual operation: See "Upper Level Hysteresis" on page 118

[SENSe:]ADJust:CONFigure:TRIG <State>

Defines the behaviour of the measurement when adjusting a setting automatically (using `SENS:ADJ:LEV ON`, for example). See "Adjusting settings automatically during triggered measurements" on page 117.

Parameters:

<State>
ON | 1
The measurement for automatic adjustment waits for the trigger.
OFF | 0
The measurement for automatic adjustment is performed immediately, without waiting for a trigger.
*RST: 1

[SENSe:]ADJust:FREQuency

This command sets the center frequency to the highest signal level in the current frequency range.

Example: `ADJ:FREQ`

Usage: Event

Manual operation: See "Adjusting the Center Frequency Automatically (Auto Freq)" on page 117

[SENSe:]ADJust:LEVel

This command initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S FSW or limiting the dynamic range by an S/N ratio that is too small.

Example: `ADJ:LEV`

Usage: Event

Manual operation: See "Reference Level" on page 94
See "Setting the Reference Level Automatically (Auto Level)" on page 95

10.5 Configuring the Result Display

The commands required to configure the screen display in a remote environment are described here.

- General Window Commands....235
- Working with Windows in the Display....236

10.5.1 General Window Commands

The following commands are required to configure general window layout, independant of the application.

Note that the suffix <n> always refers to the window *in the currently selected measurement channel* (see `INSTrument[:SELect]` on page 157).

DISPlay:FORMat....235
DISPlay[:WINDow<n>]:SIZE....236

DISPlay:FORMat <Format>

This command determines which tab is displayed.

Parameters:

<Format>

SPLit
Displays the MultiView tab with an overview of all active channels

SINGle
Displays the measurement channel that was previously focused.

*RST: SPL

Example: `DISP:FORM SING`

DISPlay[:WINDow<n>]:SIZE <Size>

This command maximizes the size of the selected result display window *temporarily*. To change the size of several windows on the screen permanently, use the `LAY:SPL` command (see `LAYout:SPLitter` on page 239).

Parameters:

<Size>

LARGe
Maximizes the selected window to full screen.
Other windows are still active in the background.

SMALl
Reduces the size of the selected window to its original size.
If more than one measurement window was displayed originally, these are visible again.

*RST: SMALl

Example: `DISP:WIND2:LARG`

10.5.2 Working with Windows in the Display

The following commands are required to change the evaluation type and rearrange the screen layout for a measurement channel as you do using the SmartGrid in manual operation. Since the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected measurement channel.

Note that the suffix <n> always refers to the window *in the currently selected measurement channel* (see `INSTrument[:SELect]` on page 157).

LAYout:ADD[:WINDow]?....236
LAYout:CATalog[:WINDow]?....237
LAYout:IDENtify[:WINDow]?....238
LAYout:REMove[:WINDow]....238
LAYout:REPLace[:WINDow]....238
LAYout:SPLitter....239
LAYout:WINDow<n>:ADD?....240
LAYout:WINDow<n>:IDENtify?....241
LAYout:WINDow<n>:REMove....241
LAYout:WINDow<n>:REPLace....241

LAYout:ADD[:WINDow]? <WindowName>,<Direction>,<WindowType>

This command adds a window to the display.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the `LAYout:REPLace[:WINDow]` command.

Parameters:

<WindowName> String containing the name of the existing window the new window is inserted next to.
By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the `LAYout:CATalog[:WINDow]?` query.

<Direction> LEFT | RIGHt | ABOVe | BELow
Direction the new window is added relative to the existing window.

<WindowType> text value
Type of result display (evaluation method) you want to add.
See the table below for available parameter values.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example:
```
LAY:ADD? '1',LEFT,MTAB
```
Result:
```
'2'
```
Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

Manual operation: See "Magnitude" on page 16
See "Spectrum" on page 17
See "I/Q-Vector" on page 18
See "Real/Imag (I/Q)" on page 18
See "Marker Table" on page 19
See "Marker Peak List" on page 19

Table 10-3: <WindowType> parameter values for IQ Analyzer application

Parameter value	Window type
FREQ	Spectrum
MAGN	Magnitude
MTABle	Marker table
PEAKlist	Marker peak list
RIMAG	Real/Imag (I/Q)
VECT	I/Q Vector

LAYout:CATalog[:WINDow]?

This command queries the name and index of all active windows from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName_1>,<WindowIndex_1>..<WindowName_n>,<WindowIndex_n>

Return values:

<WindowName> string
Name of the window.
In the default state, the name of the window is its index.

<WindowIndex> **numeric value**
Index of the window.

Example: `LAY:CAT?`
Result:
`'2',2,'1',1`
Two windows are displayed, named '2' (at the top or left), and '1' (at the bottom or right).

Usage: Query only

LAYout:IDENtify[:WINDow]? <WindowName>

This command queries the **index** of a particular display window.

Note: to query the **name** of a particular window, use the `LAYout:WINDow<n>:IDENtify?` query.

Query parameters:

<WindowName> String containing the name of a window.

Return values:

<WindowIndex> Index number of the window.

Usage: Query only

LAYout:REMove[:WINDow] <WindowName>

This command removes a window from the display.

Parameters:

<WindowName> String containing the name of the window.
In the default state, the name of the window is its index.

Usage: Event

LAYout:REPLace[:WINDow] <WindowName>,<WindowType>

This command replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window while keeping its position, index and window name.

To add a new window, use the `LAYout:ADD[:WINDow]?` command.

Parameters:

<WindowName> String containing the name of the existing window.
By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the `LAYout:CATalog[:WINDow]?` query.

<WindowType> Type of result display you want to use in the existing window.
See `LAYout:ADD[:WINDow]?` on page 236 for a list of available window types.

Example: `LAY:REPL:WIND '1',MTAB`
Replaces the result display in window 1 with a marker table.

LAYout:SPLitter <Index1>,<Index2>,<Position>

This command changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

As opposed to the `DISPlay[:WINDow<n>]:SIZE` on page 236 command, the `LAYout:SPLitter` changes the size of all windows to either side of the splitter permanently, it does not just maximize a single window temporarily.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command will not work, but does not return an error.

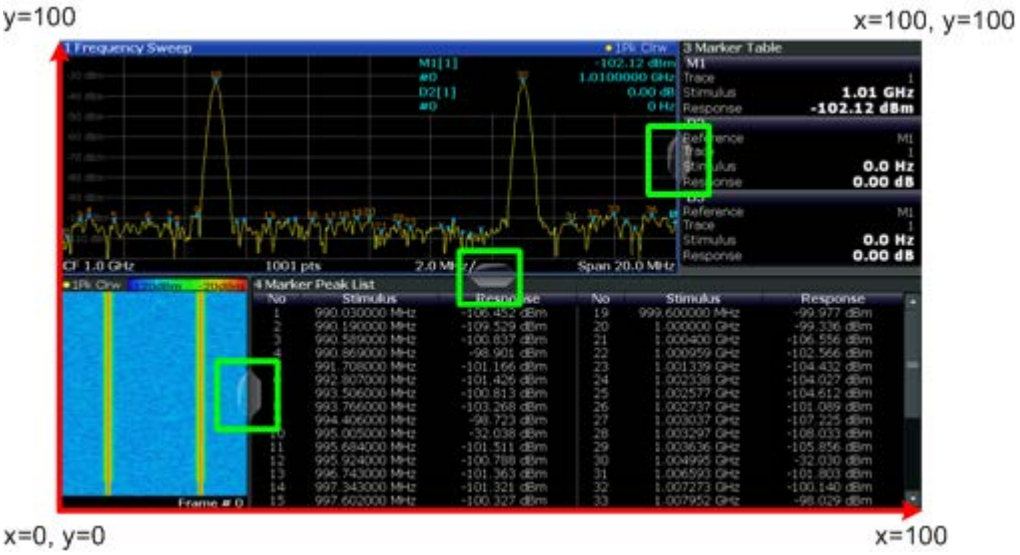

Fig. 10-1: SmartGrid coordinates for remote control of the splitters

Parameters:

<Index1> The index of one window the splitter controls.

<Index2> The index of a window on the other side of the splitter.

<Position> New vertical or horizontal position of the splitter as a fraction of the screen area (without channel and status bar and softkey menu).
The point of origin (x = 0, y = 0) is in the lower left corner of the screen. The end point (x = 100, y = 100) is in the upper right corner of the screen. (See figure 10-1.)
The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned vertically, the splitter also moves vertically.

Range: 0 to 100

Example: `LAY:SPL 1,3,50`
Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Table') to the center (50%) of the screen, i.e. in the figure above, to the left.

Example: `LAY:SPL 1,4,70`
Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Peak List') towards the top (70%) of the screen.
The following commands have the exact same effect, as any combination of windows above and below the splitter moves the splitter vertically.

```
LAY:SPL 3,2,70
LAY:SPL 4,1,70
LAY:SPL 2,1,70
```

LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

This command adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added, as opposed to `LAYout:ADD[:WINDow]?`, for which the existing window is defined by a parameter.

To replace an existing window, use the `LAYout:WINDow<n>:REPLace` command.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

Parameters:

<Direction> LEFT | RIGHt | ABOVe | BELow

<WindowType> Type of measurement window you want to add.
See `LAYout:ADD[:WINDow]?` on page 236 for a list of available window types.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by default the same as its number) as a result.

Example: `LAY:WIND1:ADD? LEFT,MTAB`
Result:
`'2'`
Adds a new window named '2' with a marker table to the left of window 1.

Usage: Query only

LAYout:WINDow<n>:IDENtify?

This command queries the **name** of a particular display window (indicated by the <n> suffix).

Note: to query the **index** of a particular window, use the `LAYout:IDENtify[:WINDow]?` command.

Return values:
<WindowName> String containing the name of a window.
In the default state, the name of the window is its index.

Usage: Query only

LAYout:WINDow<n>:REMove

This command removes the window specified by the suffix <n> from the display.

The result of this command is identical to the `LAYout:REMove[:WINDow]` command.

Usage: Event

LAYout:WINDow<n>:REPLace <WindowType>

This command changes the window type of an existing window (specified by the suffix <n>).

The result of this command is identical to the `LAYout:REPLace[:WINDow]` command.

To add a new window, use the `LAYout:WINDow<n>:ADD?` command.

Parameters:
<WindowType> Type of measurement window you want to replace another one with.
See `LAYout:ADD[:WINDow]?` on page 236 for a list of available window types.

10.6 Capturing Data and Performing Sweeps

Different measurement procedures

Two different procedures to capture I/Q data remotely are available:

- Measurement and result query with one command (see `TRACe:IQ:DATA?` on page 272)
  This method causes the least delay between measurement and output of the result data, but it requires the control computer to wait actively for the response data.
- Setting up the instrument, starting the measurement via `INIT` and querying the result list at the end of the measurement (see `TRACe:IQ:DATA:MEMory?` on page 274)
  With this method, the control computer can be used for other activities during the measurement. However, the additional time needed for synchronization via service request must be taken into account.

MSRA operating mode

Note that in MSRA operating mode, capturing data is only possible for the MSRA Master channel. In I/Q Analyzer application channels, the sweep configuration commands define the **analysis interval**. Be sure to select the correct measurement channel before using these commands.

ABORt....242
INITiate:CONMeas....243
INITiate:CONTinuous....244
INITiate[:IMMediate]....244
INITiate:SEQuencer:ABORt....245
INITiate:SEQuencer:IMMediate....245
INITiate:SEQuencer:MODE....245
INITiate:SEQuencer:REFResh[:ALL]....246
[SENSe:]SWEep:COUNt....247
[SENSe:]SWEep:COUNt:CURRent?....247
[SENSe:]SWEep:POINts....247
[SENSe:]SWEep:TIME....247
SYSTem:SEQuencer....248

ABORt

This command aborts a current measurement and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the `*OPC?` or `*WAI` command after `ABOR` and before the next command.

For details see the "Remote Basics" chapter in the R&S FSW User Manual.

To abort a sequence of measurements by the Sequencer, use the `INITiate:SEQuencer:ABORt` on page 245 command.

Note on blocked remote control programs:

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel (GPIB, LAN or other interface) to the R&S FSW is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S FSW on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

- **Visa**: `viClear()`
- **GPIB**: `ibclr()`
- **RSIB**: `RSDLLibclr()`

Now you can send the `ABORt` command on the remote channel performing the measurement.

Example: `ABOR;:INIT:IMM`
Aborts the current measurement and immediately starts a new one.

Example: `ABOR;*WAI`
`INIT:IMM`
Aborts the current measurement and starts a new one once abortion has been completed.

Usage: SCPI confirmed

INITiate:CONMeas

This command restarts a (single) measurement that has been stopped (using `INIT:CONT OFF`) or finished in single sweep mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

As opposed to `INITiate[:IMMediate]`, this command does not reset traces in maxhold, minhold or average mode. Therefore it can be used to continue measurements using maxhold or averaging functions.

Example: (for Spectrum application:)
`INIT:CONT OFF`
Switches to single sweep mode.
`DISP:WIND:TRAC:MODE AVER`
Switches on trace averaging.
`SWE:COUN 20`
Setting the sweep counter to 20 sweeps.
`INIT;*WAI`
Starts the measurement and waits for the end of the 20 sweeps.
`INIT:CONM;*WAI`
Continues the measurement (next 20 sweeps) and waits for the end.
Result: Averaging is performed over 40 sweeps.

Manual operation: See "Continue Single Sweep" on page 116

INITiate:CONTinuous <State>

This command controls the sweep mode.

Note that in single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

For details on synchronization see the "Remote Basics" chapter in the R&S FSW User Manual.

If the sweep mode is changed for a measurement channel while the Sequencer is active (see `INITiate:SEQuencer:IMMediate` on page 245) the mode is only considered the next time the measurement in that channel is activated by the Sequencer.

Parameters:

<State> ON | OFF | 0 | 1

ON | 1
Continuous sweep

OFF | 0
Single sweep

*RST: 1

Example:
`INIT:CONT OFF`
Switches the sweep mode to single sweep.
`INIT:CONT ON`
Switches the sweep mode to continuous sweep.

Manual operation: See "Continuous Sweep/RUN CONT" on page 115

INITiate[:IMMediate]

This command starts a (single) new measurement.

You can synchronize to the end of the measurement with *OPC, *OPC? or *WAI.

For details on synchronization see the "Remote Basics" chapter in the R&S FSW User Manual.

Example: (For Spectrum application:)
`INIT:CONT OFF`
Switches to single sweep mode.
`DISP:WIND:TRAC:MODE AVER`
Switches on trace averaging.
`SWE:COUN 20`
Sets the sweep counter to 20 sweeps.
`INIT;*WAI`
Starts the measurement and waits for the end of the 20 sweeps.

Manual operation: See "Single Sweep/ RUN SINGLE" on page 115

INITiate:SEQuencer:ABORt

This command stops the currently active sequence of measurements. The Sequencer itself is not deactivated, so you can start a new sequence immediately using `INITiate:SEQuencer:IMMediate` on page 245.

To deactivate the Sequencer use `SYSTem:SEQuencer` on page 248.

Usage: Event

INITiate:SEQuencer:IMMediate

This command starts a new sequence of measurements by the Sequencer. Its effect is similar to the `INITiate[:IMMediate]` command used for a single measurement.

Before this command can be executed, the Sequencer must be activated (see `SYSTem:SEQuencer` on page 248).

Example:
`SYST:SEQ ON`
Activates the Sequencer.
`INIT:SEQ:MODE SING`
Sets single sequence mode so each active measurement will be performed once.
`INIT:SEQ:IMM`
Starts the sequential measurements.

Usage: Event

INITiate:SEQuencer:MODE <Mode>

This command selects the way the R&S FSW application performs measurements sequentially.

Before this command can be executed, the Sequencer must be activated (see `SYSTem:SEQuencer` on page 248).

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSW User Manual.

Note: In order to synchronize to the end of a sequential measurement using *OPC, *OPC? or *WAI you must use `SINGle` Sequence mode.

For details on synchronization see the "Remote Basics" chapter in the R&S FSW User Manual.

Parameters:

<Mode>

SINGle
Each measurement is performed once (regardless of the channel's sweep mode), considering each channels' sweep count, until all measurements in all active channels have been performed.

CONTinuous
The measurements in each active channel are performed one after the other, repeatedly (regardless of the channel's sweep mode), in the same order, until the Sequencer is stopped.

CDEFined
First, a single sequence is performed. Then, only those channels in continuous sweep mode (`INIT:CONT ON`) are repeated.

*RST: CONTinuous

Example:

`SYST:SEQ ON`
Activates the Sequencer.
`INIT:SEQ:MODE SING`
Sets single sequence mode so each active measurement will be performed once.
`INIT:SEQ:IMM`
Starts the sequential measurements.

INITiate:SEQuencer:REFResh[:ALL]

This function is only available if the Sequencer is deactivated (`SYSTem:SEQuencer SYST:SEQ:OFF`) and only in MSRA mode.

The data in the capture buffer is re-evaluated by all active MSRA applications.

Example:

`SYST:SEQ:OFF`
Deactivates the scheduler
`INIT:CONT OFF`
Switches to single sweep mode.
`INIT;*WAI`
Starts a new data measurement and waits for the end of the sweep.
`INIT:SEQ:REFR`
Refreshes the display for all MSRA channels.

Usage: Event

[SENSe:]SWEep:COUNt <SweepCount>

This command defines the number of sweeps that the application uses to average traces.

In case of continuous sweeps, the application calculates the moving average over the average count.

In case of single sweep measurements, the application stops the measurement and calculates the average after the average count has been reached.

Example: `SWE:COUN 64`
Sets the number of sweeps to 64.
`INIT:CONT OFF`
Switches to single sweep mode.
`INIT;*WAI`
Starts a sweep and waits for its end.

Usage: SCPI confirmed

Manual operation: See "Sweep/Average Count" on page 115

[SENSe:]SWEep:COUNt:CURRent?

This query returns the current number of started sweeps or measurements. This command is only available if a sweep count value is defined and the instrument is in single sweep mode.

Example: `SWE:COUNt 64`
Sets sweep count to 64
`INIT:CONT OFF`
Switches to single sweep mode
`INIT`
Starts a sweep (without waiting for the sweep end!)
`SWE:COUN:CURR?`
Queries the number of started sweeps

Usage: Query only

[SENSe:]SWEep:POINts <SweepPoints>

This command defines the number of measurement points analyzed during a sweep.

Example: `SWE:POIN 251`

Usage: SCPI confirmed

Manual operation: See "Sweep Points" on page 114

[SENSe:]SWEep:TIME <Time>

This command defines the sweep (or: data capture) time.

Parameters:

<Time> refer to data sheet

*RST: (AUTO is set to ON)

Example: `SWE:TIME 10s`

Usage: SCPI confirmed

Manual operation: See "Meas Time" on page 113

SYSTem:SEQuencer <State>

This command turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (`INIT:SEQ...`) are executed, otherwise an error will occur.

A detailed programming example is provided in the "Operating Modes" chapter in the R&S FSW User Manual.

Parameters:

<State> ON | OFF | 0 | 1

ON | 1
The Sequencer is activated and a sequential measurement is started immediately.

OFF | 0
The Sequencer is deactivated. Any running sequential measurements are stopped. Further Sequencer commands (`INIT:SEQ...`) are not available.

*RST: 0

Example: `SYST:SEQ ON`
Activates the Sequencer.
`INIT:SEQ:MODE SING`
Sets single Sequencer mode so each active measurement will be performed once.
`INIT:SEQ:IMM`
Starts the sequential measurements.
`SYST:SEQ OFF`

10.7 I/Q Analysis

General result analysis settings concerning the trace, markers, etc. can be configured using the following commands. They are identical to the analysis functions in the Spectrum application except for the special marker functions.

- Configuring Standard Traces....249
- Using Markers....253
- Zooming into the Display....268
- Configuring an Analysis Interval and Line (MSRA mode only)....270

10.7.1 Configuring Standard Traces

Useful commands for trace configuration described elsewhere

- `DISPlay[:WINDow<n>]:TRACe:Y:SPACing` on page 213
- `DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]` on page 212

Remote commands exclusive to trace configuration

DISPlay[:WINDow<n>]:TRACe<t>:MODE....249
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous....250
DISPlay[:WINDow<n>]:TRACe<t>[:STATe]....250
[SENSe:]AVERage:COUNt....250
[SENSe:]AVERage<n>[:STATe<t>]....251
[SENSe:]AVERage<n>:TYPE....251
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]....251
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO....252
TRACe<n>:COPY....252

DISPlay[:WINDow<n>]:TRACe<t>:MODE <Mode>

This command selects the trace mode.

Parameters:

<Mode>

WRITe
Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

AVERage
The average is formed over several sweeps. The "Sweep/Average Count" determines the number of averaging procedures.

MAXHold
The maximum value is determined over several sweeps and displayed. The R&S FSW saves the sweep result in the trace memory only if the new value is greater than the previous one.

MINHold
The minimum value is determined from several measurements and displayed. The R&S FSW saves the sweep result in the trace memory only if the new value is lower than the previous one.

VIEW
The current contents of the trace memory are frozen and displayed.

BLANk
Hides the selected trace.

*RST: Trace 1: WRITe, Trace 2-6: BLANk

Example: `INIT:CONT OFF`
Switching to single sweep mode.
`SWE:COUN 16`
Sets the number of measurements to 16.
`DISP:TRAC3:MODE WRIT`
Selects clear/write mode for trace 3.
`INIT;*WAI`
Starts the measurement and waits for the end of the measurement.

Manual operation: See "Trace Mode" on page 122

DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous <State>

This command turns an automatic reset of a trace on and off after a parameter has changed.

The reset works for trace modes min hold, max hold and average.

Note that the command has no effect if critical parameters like the span have been changed to avoid invalid measurement results

Parameters:
<State>
ON
The automatic reset is off.
OFF
The automatic reset is on.
*RST: OFF

Example: `DISP:WIND:TRAC3:MODE:HCON ON`
Switches off the reset function.

Manual operation: See "Hold" on page 123

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command turns a trace on and off.

The measurement continues in the background.

Example: `DISP:TRAC3 ON`

Usage: SCPI confirmed

Manual operation: See "Trace 1/Trace 2/Trace 3/Trace 4 (Softkeys)" on page 124

[SENSe:]AVERage:COUNt <AverageCount>

This command defines the number of sweeps that the application uses to average traces.

In case of continuous sweeps, the application calculates the moving average over the average count.

In case of single sweep measurements, the application stops the measurement and calculates the average after the average count has been reached.

Parameters:

<AverageCount> If you set a average count of 0 or 1, the application performs one single sweep in single sweep mode.
In continuous sweep mode, if the average count is set to 0, a moving average over 10 sweeps is performed.

Range: 0 to 200000
*RST: 0

Usage: SCPI confirmed

Manual operation: See "Sweep/Average Count" on page 115

[SENSe:]AVERage<n>[:STATe<t>] <State>

This command turns averaging for a particular trace in a particular window on and off.

Parameters:

<State> ON | OFF

Usage: SCPI confirmed

[SENSe:]AVERage<n>:TYPE <Mode>

This command selects the trace averaging mode.

Parameters:

<Mode>

VIDeo
The logarithmic power values are averaged.

LINear
The power values are averaged before they are converted to logarithmic values.

POWer
The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

*RST: VIDeo

Example: `AVER:TYPE LIN`
Switches to linear average calculation.

Usage: SCPI confirmed

Manual operation: See "Average Mode" on page 123

[SENSe:][WINDow:]DETector<trace>[:FUNCtion] <Detector>

Defines the trace detector to be used for trace analysis.

Parameters:

<Detector>

APEak
Autopeak

NEGative
Negative peak

POSitive
Positive peak

QPEak
Quasipeak (CISPR filter only)

SAMPle
First value detected per trace point

RMS
RMS value

AVERage
Average

CAVerage
CISPR Average (CISPR filter only)

CRMS
CISPR RMS (CISPR filter only)

*RST: APEak

Example: `DET POS`
Sets the detector to "positive peak".

Manual operation: See "Detector" on page 123

[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO <State>

This command couples and decouples the detector to the trace mode.

Parameters:

<State>

ON | OFF | 0 | 1

*RST: 1

Example: `DET:AUTO OFF`
The selection of the detector is not coupled to the trace mode.

Manual operation: See "Detector" on page 123

TRACe<n>:COPY <TraceNumber>, <TraceNumber>

This command copies data from one trace to another.

Parameters:

<TraceNumber>, <TraceNumber>

TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
The first parameter is the destination trace, the second parameter is the source.

Example: `TRAC:COPY TRACe1,TRACe2`
Copies the data from trace 2 to trace 1.

Usage: SCPI confirmed

10.7.2 Using Markers

The following commands are available for marker settings and functions in the I/Q Analyzer application.

For "I/Q Vector" displays markers are not available.

- Setting Up Individual Markers....253
- General Marker Settings....257
- Configuring and Performing a Marker Search....258
- Positioning the Marker....261
- Marker Peak Lists....265

10.7.2.1 Setting Up Individual Markers

The following commands define the position of markers in the diagram.

CALCulate<n>:DELTamarker:AOFF....253
CALCulate<n>:DELTamarker<m>:LINK....253
CALCulate<n>:DELTamarker<m1>:LINK:TO:MARKer<m2>....254
CALCulate<n>:DELTamarker:MODE....254
CALCulate<n>:DELTamarker<m>:MREF....254
CALCulate<n>:DELTamarker<m>[:STATe]....255
CALCulate<n>:DELTamarker<m>:TRACe....255
CALCulate<n>:DELTamarker<m>:X....255
CALCulate<n>:MARKer<m>:AOFF....256
CALCulate<n>:MARKer<m1>:LINK:TO:MARKer<m2>....256
CALCulate<n>:MARKer<m>[:STATe]....256
CALCulate<n>:MARKer<m>:TRACe....256
CALCulate<n>:MARKer<m>:X....257

CALCulate<n>:DELTamarker:AOFF

This command turns all delta markers off.

Example: `CALC:DELT:AOFF`
Turns all delta markers off.

Usage: Event

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker <m> to marker 1.

If you change the horizontal position (x-value) of marker 1, delta marker <m> changes its horizontal position to the same value.

Tip: to link any marker to a different marker than marker 1, use the `CALCulate<n>:DELTamarker<m1>:LINK:TO:MARKer<m2>` or `CALCulate<n>:MARKer<m1>:LINK:TO:MARKer<m2>` commands.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT2:LINK ON`

Manual operation: See "Linking to Another Marker" on page 127

CALCulate<n>:DELTamarker<m1>:LINK:TO:MARKer<m2> <State>

This command links delta marker <m1> to any active normal marker <m2>.

If you change the horizontal position of marker <m2>, delta marker <m1> changes its horizontal position to the same value.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `CALC:DELT4:LINK:TO:MARK2 ON`
Links the delta marker 4 to the marker 2.

Manual operation: See "Linking to Another Marker" on page 127

CALCulate<n>:DELTamarker:MODE <Mode>

This command selects the delta marker mode.

Parameters:

<Mode> **ABSolute**
Delta marker position in absolute terms.

RELative
Delta marker position in relation to a reference marker.

*RST: RELative

Example: `CALC:DELT:MODE ABS`
Absolute delta marker position.

CALCulate<n>:DELTamarker<m>:MREF <Reference>

This command selects a reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

Parameters:

<Reference>

1 to 16
Selects markers 1 to 16 as the reference.

FIXed
Selects the fixed reference as the reference.

Example:
```
CALC:DELT3:MREF 2
```
Specifies that the values of delta marker 3 are relative to marker 2.

Manual operation: See "Reference Marker" on page 127

CALCulate<n>:DELTamarker<m>[:STATe] <State>

This command turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTamarker turns on delta marker 1.

Parameters:

<State>

ON | OFF

*RST: OFF

Example:
```
CALC:DELT2 ON
```
Turns on delta marker 2.

Manual operation: See "Marker State" on page 126
See "Marker Type" on page 127

CALCulate<n>:DELTamarker<m>:TRACe <Trace>

This command selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Parameters:

<Trace>

Trace number the marker is assigned to.

Example:
```
CALC:DELT2:TRAC 2
```
Positions delta marker 2 on trace 2.

CALCulate<n>:DELTamarker<m>:X <Position>

This command moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

Example:
```
CALC:DELT:X?
```
Outputs the (absolute) x-value of delta marker 1.

Manual operation: See "Marker Position (X-value)" on page 127

CALCulate<n>:MARKer<m>:AOFF

This command turns all markers off.

Example: `CALC:MARK:AOFF`
Switches off all markers.

Usage: Event

Manual operation: See "All Markers Off" on page 128

CALCulate<n>:MARKer<m1>:LINK:TO:MARKer<m2> <State>

This command links normal marker <m1> to any active normal marker <m2>.

If you change the horizontal position of marker <m2>, marker <m1> changes its horizontal position to the same value.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:MARK4:LINK:TO:MARK2 ON`
Links marker 4 to marker 2.

Manual operation: See "Linking to Another Marker" on page 127

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off. If the corresponding marker number is currently active as a deltamarker, it is turned into a normal marker.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:MARK3 ON`
Switches on marker 3.

Manual operation: See "Marker State" on page 126
See "Marker Type" on page 127

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Parameters:
<Trace>

Example: `CALC:MARK3:TRAC 2`
Assigns marker 3 to trace 2.

Manual operation: See "Assigning the Marker to a Trace" on page 127

CALCulate<n>:MARKer<m>:X <Position>

This command moves a marker to a particular coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.

Range: The range depends on the current x-axis range.

Example: `CALC:MARK2:X 1.7MHz`
Positions marker 2 to frequency 1.7 MHz.

Manual operation: See "Marker Table" on page 19
See "Marker Peak List" on page 19
See "Marker Position (X-value)" on page 127

10.7.2.2 General Marker Settings

The following commands control general marker functionality.

Remote commands exclusive to general marker functionality

DISPlay:MTABle....257
CALCulate:MARKer:X:SSIZe....257

DISPlay:MTABle <DisplayMode>

This command turns the marker table on and off.

Parameters:

<DisplayMode>

ON
Turns the marker table on.

OFF
Turns the marker table off.

AUTO
Turns the marker table on if 3 or more markers are active.

*RST: AUTO

Example: `DISP:MTAB ON`
Activates the marker table.

Manual operation: See "Marker Table Display" on page 129

CALCulate:MARKer:X:SSIZe <StepSize>

This command selects the marker step size mode.

The step size defines the distance the marker moves when you move it with the rotary knob. It therefore takes effect in manual operation only.

Parameters:

<StepSize>

STANdard
the marker moves from one pixel to the next

POINts
the marker moves from one sweep point to the next

*RST: POINts

Example: `CALC:MARK:X:SSIZ STAN`
Sets the marker step size to one pixel.

Manual operation: See "Marker Stepsize" on page 129

10.7.2.3 Configuring and Performing a Marker Search

The following commands control the marker search.

CALCulate:MARKer:LOEXclude....258
CALCulate<n>:MARKer:PEXCursion....258
CALCulate<n>:MARKer:SEARch....259
CALCulate:MARKer:X:SLIMits[:STATe]....259
CALCulate:MARKer:X:SLIMits:LEFT....259
CALCulate:MARKer:X:SLIMits:RIGHT....260
CALCulate:MARKer:X:SLIMits:ZOOM[:STATe]....260
CALCulate:THReshold....260
CALCulate:THReshold:STATe....261

CALCulate:MARKer:LOEXclude <State>

This command turns the suppression of the local oscillator during automatic marker positioning on and off.

Parameters:

<State>

ON | OFF | 0 | 1

*RST: 1

Example: `CALC:MARK:LOEX ON`

CALCulate<n>:MARKer:PEXCursion <Excursion>

This command defines the peak excursion.

The peak excursion sets the requirements for a peak to be detected during a peak search.

The unit depends on the measurement.

Application/Result display	Unit
Spectrum	dB

Manual operation: See "Peak Excursion" on page 131

CALCulate<n>:MARKer:SEARch <MarkRealImag>

This command selects the trace type a marker search is performed on.

Parameters:

<MarkRealImag>

REAL
Marker search functions are performed on the real trace of the "I/Q" measurement.

IMAG
Marker search functions are performed on the imaginary trace of the "I/Q" measurement.

MAGN
Marker search functions are performed on the magnitude of the I and Q data.

*RST: REAL

Example:
```
CALC4:MARK:SEAR IMAG
```

Manual operation: See "Branch for Peak Search" on page 132

CALCulate:MARKer:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Parameters:

<State>

ON | OFF

*RST: OFF

Example:
```
CALC:MARK:X:SLIM ON
```
Switches on search limitation.

Manual operation: See "Search Limits" on page 131
See "Search Limits (Left / Right)" on page 131
See "Deactivating All Search Limits" on page 132

CALCulate:MARKer:X:SLIMits:LEFT <SearchLimit>

This command defines the left limit of the marker search range.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Parameters:

<SearchLimit>

The value range depends on the span or sweep time.
The unit is Hz for frequency domain measurements and s for time domain measurements.

*RST: left diagram border

Example: CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:LEFT 10MHz
Sets the left limit of the search range to 10 MHz.

Manual operation: See "Search Limits" on page 131
See "Search Limits (Left / Right)" on page 131

CALCulate:MARKer:X:SLIMits:RIGHT <SearchLimit>

This command defines the right limit of the marker search range.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Parameters:
<Limit> The value range depends on the span or sweep time.
The unit is Hz for frequency domain measurements and s for time domain measurements.
*RST: right diagram border

Example: CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:RIGH 20MHz
Sets the right limit of the search range to 20 MHz.

Manual operation: See "Search Limits" on page 131
See "Search Limits (Left / Right)" on page 131

CALCulate:MARKer:X:SLIMits:ZOOM[:STATe] <State>

This command adjusts the marker search range to the zoom area.

Parameters:
<State> ON | OFF
*RST: OFF

Example: CALC:MARK:X:SLIM:ZOOM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:RIGH 20MHz
Sets the right limit of the search range to 20 MHz.

Manual operation: See "Search Limits" on page 131
See "Using Zoom Limits" on page 132

CALCulate:THReshold <Level>

This command defines a threshold level for the marker peak search.

Parameters:
<Level> Numeric value. The value range and unit are variable.
*RST: -120 dBm

Example: `CALC:THR -82DBM`
Sets the threshold value to -82 dBm.

Manual operation: See "Search Limits" on page 131
See "Search Threshold" on page 131

CALCulate:THReshold:STATe <State>

This command turns a threshold for the marker peak search on and off.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:THR:STAT ON`
Switches on the threshold line.

Manual operation: See "Search Limits" on page 131
See "Deactivating All Search Limits" on page 132

10.7.2.4 Positioning the Marker

This chapter contains remote commands necessary to position the marker on a trace.

- Positioning Normal Markers 261
- Positioning Delta Markers 263

Positioning Normal Markers

The following commands position markers on the trace.

CALCulate<n>:MARKer<m>:MAXimum:AUTO 261
CALCulate<n>:MARKer<m>:MAXimum:LEFT 262
CALCulate<n>:MARKer<m>:MAXimum:NEXT 262
CALCulate<n>:MARKer<m>:MAXimum[:PEAK] 262
CALCulate<n>:MARKer<m>:MAXimum:RIGHt 262
CALCulate<n>:MARKer<m>:MINimum:AUTO 262
CALCulate<n>:MARKer<m>:MINimum:LEFT 263
CALCulate<n>:MARKer<m>:MINimum:NEXT 263
CALCulate<n>:MARKer<m>:MINimum[:PEAK] 263
CALCulate<n>:MARKer<m>:MINimum:RIGHt 263

CALCulate<n>:MARKer<m>:MAXimum:AUTO <State>

This command turns an automatic marker peak search for a trace maximum on and off. The R&S FSW performs the peak search after each sweep.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:MAX:AUTO ON`
Activates the automatic peak search function for marker 1 at the end of each particular sweep.

CALCulate<n>:MARKer<m>:MAXimum:LEFT

This command moves a marker to the next lower peak.

The search includes only measurement values to the left of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command moves a marker to the next lower peak.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130
See "Search Next Peak" on page 133

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command moves a marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Usage: Event

Manual operation: See "Peak Search" on page 133

CALCulate<n>:MARKer<m>:MAXimum:RIGHt

This command moves a marker to the next lower peak.

The search includes only measurement values to the right of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

CALCulate<n>:MARKer<m>:MINimum:AUTO <State>

This command turns an automatic marker peak search for a trace minimum on and off. The R&S FSW performs the peak search after each sweep.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:MIN:AUTO ON`
Activates the automatic minimum value search function for marker 1 at the end of each particular sweep.

CALCulate<n>:MARKer<m>:MINimum:LEFT

This command moves a marker to the next minimum value.

The search includes only measurement values to the right of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

CALCulate<n>:MARKer<m>:MINimum:NEXT

This command moves a marker to the next minimum value.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130
See "Search Next Minimum" on page 133

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command moves a marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Usage: Event

Manual operation: See "Search Minimum" on page 133

CALCulate<n>:MARKer<m>:MINimum:RIGHt

This command moves a marker to the next minimum value.

The search includes only measurement values to the right of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

Positioning Delta Markers

The following commands position delta markers on the trace.

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT....264
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT....264
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]....264
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt....264
CALCulate<n>:DELTamarker<m>:MINimum:LEFT....264

CALCulate<n>:DELTamarker<m>:MINimum:NEXT....265
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]....265
CALCulate<n>:DELTamarker<m>:MINimum:RIGHt....265

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

This command moves a delta marker to the next higher value.

The search includes only measurement values to the left of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command moves a marker to the next higher value.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130
See "Search Next Peak" on page 133

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command moves a delta marker to the highest level.

If the marker is not yet active, the command first activates the marker.

Usage: Event

Manual operation: See "Peak Search" on page 133

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt

This command moves a delta marker to the next higher value.

The search includes only measurement values to the right of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

This command moves a delta marker to the next higher minimum value.

The search includes only measurement values to the right of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

This command moves a marker to the next higher minimum value.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130
See "Search Next Minimum" on page 133

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command moves a delta marker to the minimum level.

If the marker is not yet active, the command first activates the marker.

Usage: Event

Manual operation: See "Search Minimum" on page 133

CALCulate<n>:DELTamarker<m>:MINimum:RIGHt

This command moves a delta marker to the next higher minimum value.

The search includes only measurement values to the right of the current marker position.

Usage: Event

Manual operation: See "Search Mode for Next Peak" on page 130

10.7.2.5 Marker Peak Lists

Useful commands for peak lists described elsewhere

- `CALCulate<n>:MARKer:PEXCursion` on page 258
- `MMEMory:STORe:LIST` on page 279

Remote commands exclusive to peak lists

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe] 265
CALCulate:MARKer:FUNCtion:FPEaks:COUNt? 266
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks[:IMMediate] 266
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE 266
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT 267
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT 267
CALCulate:MARKer:FUNCtion:FPEeaks:X? 267
CALCulate:MARKer:FUNCtion:FPEeaks:Y? 267

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe]
<State>

This command turns labels for peaks found during a peak search on and off.

The labels correspond to the marker number in the marker peak list.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: `CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF`
Removes the peak labels from the diagram

Manual operation: See "Displaying Marker Numbers" on page 135

CALCulate:MARKer:FUNCtion:FPEaks:COUNt?

This command queries the number of peaks that have been found during a peak search.

The actual number of peaks that have been found may differ from the number of peaks you have set to be found because of the peak excursion.

Return values:

<NumberOfPeaks>

Example: `CALC:MARK:FUNC:FPE:COUN?`
Queries the number of peaks.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks[:IMMediate] <Peaks>

This command initiates a peak search.

Parameters:

<Peaks> This parameter defines the number of peaks to find during the search.
Note that the actual number of peaks found during the search also depends on the peak excursion you have set with `CALCulate<n>:MARKer:PEXCursion`.

Range: 1 to 200

Example: `CALC:MARK:PEXC 5`
Defines a peak excursion of 5 dB, i.e. peaks must be at least 5 dB apart to be detected as a peak.
`CALC:MARK:FUNC:FPE 10`
Initiates a search for 10 peaks on the current trace.

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE <MaxNoPeaks>

This command defines the maximum number of peaks that the R&S FSW looks for during a peak search.

Parameters:

<MaxNoPeaks> Maximum number of peaks to be determined.

Range: 1 to 200
*RST: 50

Example: `CALC:MARK:FUNC:FPE:LIST:SIZE 10`
The marker peak list will contain a maximum of 10 peaks.

Manual operation: See "Maximum Number of Peaks" on page 134

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT <SortMode>

This command selects the order in which the results of a peak search are returned.

Parameters:

<SortMode>
X
Sorts the peaks according to increasing position on the x-axis.
Y
Sorts the peaks according to decreasing position on the y-axis.
*RST: X

Example: `CALC:MARK:FUNC:FPE:SORT Y`
Sets the sort mode to decreasing y values

Manual operation: See "Sort Mode" on page 134

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT <State>

This command turns a peak search on and off.

Parameters:

<State>
ON | OFF
*RST: OFF

Example: `CALC:MARK:FUNC:FPE:STAT ON`
Activates marker peak search

Manual operation: See "Peak List State" on page 134

CALCulate:MARKer:FUNCtion:FPEeaks:X?

This command queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT`.

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the measurement.

Usage: Query only

CALCulate:MARKer:FUNCtion:FPEeaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT`.

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the measurement.

Usage: Query only

10.7.3 Zooming into the Display

10.7.3.1 Using the Single Zoom

DISPlay[:WINDow<n>]:ZOOM:AREA....268
DISPlay[:WINDow<n>]:ZOOM:STATe....268

DISPlay[:WINDow<n>]:ZOOM:AREA <x1>,<y1>,<x2>,<y2>

This command defines the zoom area.

To define a zoom area, you first have to turn the zoom on.

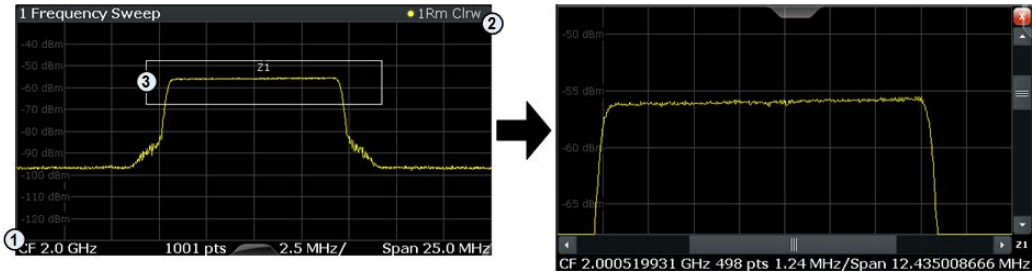

1 = origin of coordinate system (x1 = 0, y1 = 0)
2 = end point of system (x2 = 100, y2= 100)
3 = zoom area (e.g. x1 = 60, y1 = 30, x2 = 80, y2 = 75)

Parameters:

<x1>,<y1>, <x2>,<y2> Diagram coordinates in % of the complete diagram that define the zoom area.
The lower left corner is the origin of coordinate system. The upper right corner is the end point of the system.

Range: 0 to 100
Default unit: PCT

Manual operation: See "Single Zoom" on page 135

DISPlay[:WINDow<n>]:ZOOM:STATe <State>

This command turns the zoom on and off.

Parameters:

<State> ON | OFF

*RST: OFF

Example: `DISP:ZOOM ON`
Activates the zoom mode.

Manual operation: See "Single Zoom" on page 135
See "Restore Original Display" on page 136
See "Deactivating Zoom (Selection mode)" on page 136

10.7.3.2 Using the Multiple Zoom

DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:AREA.....269
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:STATe.....269

DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:AREA <x1>,<y1>,<x2>,<y2>

This command defines the zoom area for a multiple zoom.

To define a zoom area, you first have to turn the zoom on.

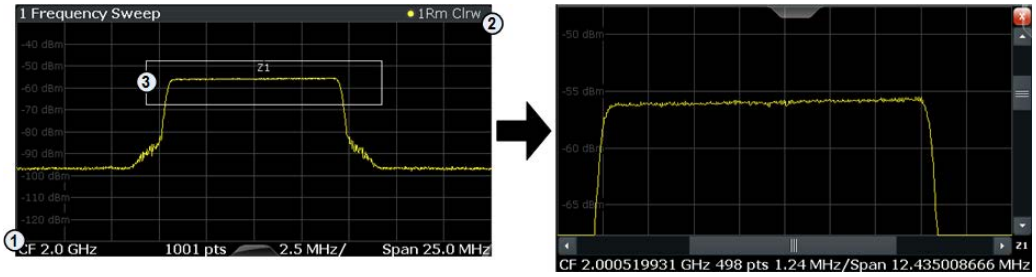

1 = origin of coordinate system (x1 = 0, y1 = 0)
2 = end point of system (x2 = 100, y2= 100)
3 = zoom area (e.g. x1 = 60, y1 = 30, x2 = 80, y2 = 75)

Suffix:

<zoom> 1...4
Selects the zoom window.

Parameters:

<x1>,<y1>,
<x2>,<y2> Diagram coordinates in % of the complete diagram that define the zoom area.
The lower left corner is the origin of coordinate system. The upper right corner is the end point of the system.

Range: 0 to 100
Default unit: PCT

Manual operation: See "Multiple Zoom" on page 135

DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:STATe <State>

This command turns the mutliple zoom on and off.

Suffix:
<zoom> 1...4
Selects the zoom window.
If you turn off one of the zoom windows, all subsequent zoom windows move up one position.

Parameters:
<State> ON | OFF
*RST: OFF

Manual operation: See "Multiple Zoom" on page 135
See "Restore Original Display" on page 136
See "Deactivating Zoom (Selection mode)" on page 136

10.7.4 Configuring an Analysis Interval and Line (MSRA mode only)

In MSRA operating mode, only the MSRA Master actually captures data; the MSRA applications define an extract of the captured data for analysis, referred to as the **analysis interval**. The **analysis line** is a common time marker for all MSRA applications.

For the I/Q Analyzer application, the commands to define tha analysis interval are the same as those used to define the actual data acquisition (see chapter 10.4.5, "Configuring Data Acquisition", on page 227. Be sure to select the correct measurement channel before executing these commands.

Useful commands for configuring the analysis interval described elsewhere:

- `TRACe:IQ:SRATe` on page 230
- `TRACe:IQ:BWIDth` on page 227
- `TRACe:IQ:RLENgth` on page 228
- `[SENSe:]SWEep:TIME` on page 247

Remote commands exclusive to MSRA applications

The following commands are only available for MSRA application channels:

CALCulate:MSRA:ALINe:SHOW....270
CALCulate:MSRA:ALINe[:VALue]....271
CALCulate:MSRA:WINDow<n>:IVAL?....271
INITiate:REFResh....271
[SENSe:]MSRA:CAPTure:OFFSet....272

CALCulate:MSRA:ALINe:SHOW

This command defines whether or not the analysis line is displayed in all time-based windows in all MSRA applications and the MSRA Master.

Note: even if the analysis line display is off, the indication whether or not the currently defined line position lies within the analysis interval of the active application remains in the window title bars.

Parameters:

<State> ON | OFF

*RST: ON

CALCulate:MSRA:ALINe[:VALue] <Position>

This command defines the position of the analysis line for all time-based windows in all MSRA applications and the MSRA Master.

Parameters:

<Position> Position of the analysis line in seconds. The position must lie within the measurement time of the MSRA measurement.

Default unit: s

CALCulate:MSRA:WINDow<n>:IVAL?

This command queries the analysis interval for the window specified by the index <n>. This command is only available in application measurement channels, not the MSRA View or MSRA Master.

Return values:

<IntStart> Start value of the analysis interval in seconds

Default unit: s

<IntStop> Stop value of the analysis interval in seconds

Usage: Query only

INITiate:REFResh

This function is only available if the Sequencer is deactivated (`SYSTem:SEQuencer SYST:SEQ:OFF`) and only for applications in MSRA mode, not the MSRA Master.

The data in the capture buffer is re-evaluated by the currently active application only. The results for any other applications remain unchanged.

The application channel must be selected before this command can be executed (see `INSTrument[:SELect]` on page 157).

Example:

```
SYST:SEQ:OFF
```
Deactivates the scheduler
```
INIT:CONT OFF
```
Switches to single sweep mode.
```
INIT;*WAI
```
Starts a new data measurement and waits for the end of the sweep.
```
INST:SEL 'IQ ANALYZER'
```
Selects the IQ Analyzer channel.
```
INIT:REFR
```
Refreshes the display for the I/Q Analyzer channel.

Usage: Event

[SENSe:]MSRA:CAPTure:OFFSet <Offset>

This setting is only available for applications in MSRA mode, not for the MSRA Master. It has a similar effect as the trigger offset in other measurements.

Parameters:

<Offset> This parameter defines the time offset between the capture buffer start and the start of the extracted application data. The offset must be a positive value, as the application can only analyze data that is contained in the capture buffer.

Range: 0 to <Record length>
*RST: 0

Manual operation: See "Capture Offset" on page 114

10.8 Retrieving Results

The following commands can be used to retrieve the results of the I/Q Analyzer measurement.

- Retrieving Captured I/Q Data....272
- Retrieving I/Q Trace Data....275
- Retrieving Marker and Peak Search Results....277

10.8.1 Retrieving Captured I/Q Data

The captured I/Q data is output in the form of a list, three different formats can be selected for this list (see `TRACe:IQ:DATA:FORMat` on page 273).

For details on formats refer to chapter A.3, "Reference: Format Description for I/Q Data Files", on page 297.

TRACe:IQ:DATA?....272
TRACe:IQ:DATA:FORMat....273
TRACe:IQ:DATA:MEMory?....274

TRACe:IQ:DATA?

This command queries the captured data from measurements with the I/Q Analyzer.

To get the results, the command also initiates a measurement with the current settings of the R&S FSW.

Note: Using the command with the *RST values for the `TRACe:IQ:SET` command, the following minimum buffer sizes for the response data are recommended: ASCII format 10 kBytes, binary format: 2 kBytes

Return values:

<Results> Measured voltage for I and Q component for each sample that has been captured during the measurement.
For analog baseband input in real baseband mode, the results for the irrelevant component are all 0.
For more information see chapter 5.3.3, "I/Q Processing Modes", on page 35.
The number of samples depends on `TRACe:IQ:SET`. In ASCII format, the number of results is 2* the number of samples.
The data format depends on `FORMat[:DATA]`.

Default unit: V

Example:

```
TRAC:IQ:STAT ON
```
Enables acquisition of I/Q data
```
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,0,4096
```
Measurement configuration:
Sample Rate = 32 MHz
Trigger Source = External
Trigger Slope = Positive
Pretrigger Samples = 0
Number of Samples = 4096
```
FORMat REAL,32
```
Selects format of response data
```
TRAC:IQ:DATA?
```
Starts measurement and reads results

Usage: Query only

TRACe:IQ:DATA:FORMat <Format>

This command selects the order of the I/Q data.

Parameters:

<Format> COMPatible | IQBLock | IQPair

COMPatible
I and Q values are separated and collected in blocks: A block of I values is followed by a block of Q values, followed by a block of I values, followed by a block of Q values etc.
(I,I,I,I,Q,Q,Q,Q,I,I,I,I,Q,Q,Q,Q...)

IQBLock
First all I-values are listed, then the Q-values
(I,I,I,I,I,I,...Q,Q,Q,Q,Q,Q)

IQPair
One pair of I/Q values after the other is listed
(I,Q,I,Q,I,Q...).

*RST: IQBL

TRACe:IQ:DATA:MEMory? [<OffsetSamples>,<NoOfSamples>]

This command queries the I/Q data currently stored in the memory of the R&S FSW.

By default, the command returns all I/Q data in the memory. You can, however, narrow down the amount of data that the command returns using the optional parameters.

By default, the amount of available data depends on `TRACe:IQ:SET`.

Parameters:

<OffsetSamples> Selects an offset at which the output of data should start in relation to the first data. If omitted, all captured samples are output, starting with the first sample.

Range: 0 to <# of samples> – 1, with <# of samples> being the maximum number of captured values
*RST: 0

<NoOfSamples> Number of samples you want to query, beginning at the offset you have defined. If omitted, all captured samples (starting at offset) are output.

Range: 1 to <# of samples> - <offset samples> with <# of samples> maximum number of captured values
*RST: <# of samples>

Return values:

<IQData> Measured value pair (I,Q) for each sample that has been recorded. The data format depends on `FORMat[:DATA]`.

Default unit: V

Example:

```
TRAC:IQ:STAT ON
```
Enables acquisition of I/Q data
```
TRAC:IQ:SET NORM,10MHz,32MHz,EXT,POS,100,4096
```
Measurement configuration:
Sample Rate = 32 MHz
Trigger Source = External
Trigger Slope = Positive
Pretrigger Samples = 100
Number of Samples = 4096
```
INIT;*WAI
```
Starts measurement and wait for sync
```
FORMat REAL,32
```
Determines output format
To read the results:
```
TRAC:IQ:DATA:MEM?
```
Reads all 4096 I/Q data
```
TRAC:IQ:DATA:MEM? 0,2048
```
Reads 2048 I/Q data starting at the beginning of data acquisition
```
TRAC:IQ:DATA:MEM? 2048,1024
```
Reads 1024 I/Q data from half of the recorded data
```
TRAC:IQ:DATA:MEM? 100,512
```
Reads 512 I/Q data starting at the trigger point (<Pretrigger Samples> was 100)

Usage: Query only

10.8.2 Retrieving I/Q Trace Data

In addition to the raw captured I/Q data, the results from I/Q analysis as shown in the result displays can also be retrieved.

FORMat[:DATA] 275
FORMat:DEXPort:DSEParator 275
TRACe<n>[:DATA]? 276
TRACe<n>[:DATA]:MEMory? 277
TRACe<n>[:DATA]:X? 277

FORMat[:DATA] <Format>

This command selects the data format that is used for transmission of trace data from the R&S FSW to the controlling computer.

Note that the command has no effect for data that you send to the R&S FSW. The R&S FSW automatically recognizes the data it receives, regardless of the format.

Parameters:

<Format>

ASCii
ASCii format, separated by commas.
This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other formats may be.

REAL,32
32-bit IEEE 754 floating-point numbers in the "definite length block format".
In the Spectrum application, the format setting `REAL` is used for the binary transmission of trace data.
For I/Q data, 8 bytes per sample are returned for this format setting.

*RST: ASCII

Example:
```
FORM REAL,32
```

Usage: SCPI confirmed

FORMat:DEXPort:DSEParator <Separator>

This command selects the decimal separator for data exported in ASCII format.

Parameters:

<Separator>

COMMa
Uses a comma as decimal separator, e.g. *4,05*.

POINt
Uses a point as decimal separator, e.g. *4.05*.

*RST: *RST has no effect on the decimal separator. Default is POINt.

Example: `FORM:DEXP:DSEP POIN`
Sets the decimal point as separator.

Manual operation: See "Exporting the Peak List" on page 135

TRACe<n>[:DATA]? <ResultType>

This command queries current trace data and measurement results.

The data format depends on `FORMat[:DATA]`.

Query parameters:

<ResultType>

Selects the type of result to be returned.

TRACE1 | ... | TRACE6
Returns the trace data for the corresponding trace.

Return values:

<TraceData>

Returns the sweep point values as shown in the result display.
If you are measuring with the auto peak detector, the command returns positive peak values only.
For the Magnitude and Spectrum result displays in the I/Q Analyzer application, this command returns the magnitude of the I and Q values (I+jQ) for each sweep point (=1001 values).
For the Real/Imag (I/Q) result display, the command returns first the real parts for each trace point, then the imaginary parts (I_1,...,I_{1001}, Q_1,...,Q_{1001}).
For the I/Q Vector result display, the I and Q values for each trace point are returned (1001 pairs of I and Q values).
For analog baseband input in real baseband processing mode (I or Q only), only the positive spectrum is returned. The values for the missing component in the Real/Imag (I/Q) and the I/Q vector result displays are all 0.

Example: `TRAC? TRACE3`
Queries the data of trace 3.

Usage: SCPI confirmed

Manual operation: See "Magnitude" on page 16
See "Spectrum" on page 17
See "I/Q-Vector" on page 18
See "Real/Imag (I/Q)" on page 18

TRACe<n>[:DATA]:MEMory? <Trace>,<OffsSwPoint>,<NoOfSwPoints>

This command queries the previously captured trace data for the specified trace from the memory. As an offset and number of sweep points to be retrieved can be specified, the trace data can be retrieved in smaller portions, making the command faster than the `TRAC:DATA?` command. This is useful if only specific parts of the trace data are of interest.

If no parameters are specified with the command, the entire trace data is retrieved; in this case, the command is identical to `TRAC:DATA? TRACE1`

For details on the returned values see the TRAC:DATA? <TRACE...> command.

Query parameters:

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

<OffsSwPoint> The offset in sweep points related to the start of the measurement at which data retrieval is to start.

<NoOfSwPoints> Number of sweep points to be retrieved from the trace.

Example: `TRAC:DATA:MEM? TRACE1,25,100`
Retrieves 100 sweep points from trace 1, starting at sweep point 25.

Usage: Query only

TRACe<n>[:DATA]:X? <TraceNumber>

This command queries the horizontal trace data for each sweep point in the specified window, for example the frequency in frequency domain or the time in time domain measurements. This is especially useful for traces with non-equidistant x-values, e.g. for SEM or Spurious Emissions measurements.

Query parameters:

<TraceNumber> Trace number.
TRACE1 | ... | TRACE6

Example: `TRAC3:X? TRACE1`
Returns the x-values for trace 1 in window 3.

Usage: Query only

10.8.3 Retrieving Marker and Peak Search Results

The following commands are required to retrieve the results of markers and peak searches.

CALCulate:MARKer:FUNCtion:FPEeaks:X?....278
CALCulate:MARKer:FUNCtion:FPEeaks:Y?....278
CALCulate<n>:DELTamarker<m>:Y?....278
CALCulate<n>:MARKer<m>:Y?....279
MMEMory:STORe:LIST....279

CALCulate:MARKer:FUNCtion:FPEeaks:X?

This command queries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT`.

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the measurement.

Usage: Query only

CALCulate:MARKer:FUNCtion:FPEeaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with `CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT`.

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the measurement.

Usage: Query only

CALCulate<n>:DELTamarker<m>:Y?

This command queries the relative position of a delta marker on the y-axis.

If necessary, the command activates the delta marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps. See also `INITiate:CONTinuous` on page 244.

The unit depends on the application of the command.

Return values:

<Position> Position of the delta marker in relation to the reference marker or the fixed reference.

Example:

```
INIT:CONT OFF
```
Switches to single sweep mode.
```
INIT;*WAI
```
Starts a sweep and waits for its end.
```
CALC:DELT2 ON
```
Switches on delta marker 2.
```
CALC:DELT2:Y?
```
Outputs measurement value of delta marker 2.

Usage: Query only

CALCulate<n>:MARKer<m>:Y?

This command queries the position of a marker on the y-axis.

If necessary, the command activates the marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweeps. See also `INITiate:CONTinuous` on page 244.

Return values:

<Result> Result at the marker position.
The unit is variable and depends on the one you have currently set.
In the Real/Imag (I/Q) result display of the I/Q Analyzer, the command returns the real part first, then the imaginary part.

Example:
```
INIT:CONT OFF
```
Switches to single measurement mode.
```
CALC:MARK2 ON
```
Switches marker 2.
```
INIT;*WAI
```
Starts a measurement and waits for the end.
```
CALC:MARK2:Y?
```
Outputs the measured value of marker 2.
In I/Q Analyzer application, for "Real/Imag (I/Q)", for example:
```
1.852719887E-011,0
```

Usage: Query only

Manual operation: See "Marker Table" on page 19
See "Marker Peak List" on page 19

MMEMory:STORe:LIST <FileName>

This command exports the SEM and spurious emission list evaluation to a file.

The file format is *.dat.

Parameters:

<FileName> String containing the path and name of the target file.

Example:
```
MMEM:STOR:LIST 'test'
```
Stores the current list evaluation results in the `test.dat` file.

Manual operation: See "Exporting the Peak List" on page 135

10.9 Importing and Exporting I/Q Data and Results

Alternatively to capturing I/Q data by the I/Q Analyzer itself, stored I/Q data from previous measurements or other applications can be imported to the I/Q Analyzer. Furthermore,

I/Q data processed in the I/Q Analyzer can be stored to a file for further evaluation in other applications.

I/Q data can only be exported in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

For details on importing and exporting I/Q data see chapter 5.5, "I/Q Data Import and Export", on page 54.

MMEMory:LOAD:IQ:STATe....280
MMEMory:STORe:IQ:COMMent....280
MMEMory:STORe:IQ:STATe....280

MMEMory:LOAD:IQ:STATe 1,<FileName>

This command restores I/Q data from a file.

The file extension is *.iq.tar.

Parameters:

<FileName> String containing the path and name of the source file.

Example:
```
MMEM:LOAD:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
```
Loads IQ data from the specified file.

Usage: Setting only

Manual operation: See "Import" on page 61
See "IQ Import" on page 61

MMEMory:STORe:IQ:COMMent <Comment>

This command adds a comment to a file that contains I/Q data.

Parameters:

<Comment> String containing the comment.

Example:
```
MMEM:STOR:IQ:COMM 'Device test 1b'
```
Creates a description for the export file.
```
MMEM:STOR:IQ:STAT 1, 'C:
\R_S\Instr\user\data.iq.tar'
```
Stores I/Q data and the comment to the specified file.

Manual operation: See "Export" on page 61
See "IQ Export" on page 61

MMEMory:STORe:IQ:STATe 1, <FileName>

This command writes the captured I/Q data to a file.

The file extension is *.iq.tar. By default, the contents of the file are in 32-bit floating point format.

Parameters:
1

<FileName> String containing the path and name of the target file.

Example: `MMEM:STOR:IQ:STAT 1, 'C:\R_S\Instr\user\data.iq.tar'`
Stores the captured I/Q data to the specified file.

Manual operation: See "Export" on page 61
See "IQ Export" on page 61

10.10 Querying the Status Registers

The R&S FSW-I/Q Analyzer uses the standard status registers of the R&S FSW.

The following status registers of the R&S FSW status reporting system are used by the Digital Baseband Interface (R&S FSW-B17). The commands required to query the status registers specific to the Digital Baseband Interface (R&S FSW-B17) are described with the registers.

For details on the common R&S FSW status registers refer to the description of remote control basics in the R&S FSW User Manual.

*RST does not influence the status registers.

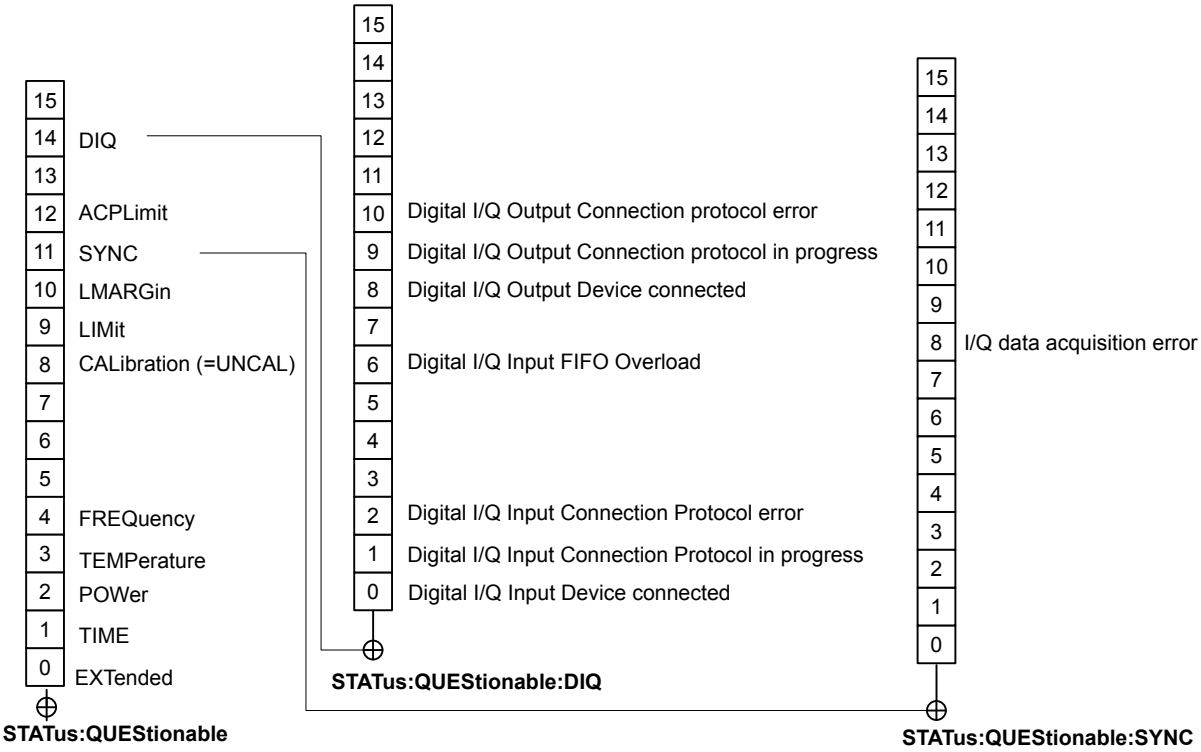

Fig. 10-2: Status registers used by the Digital Baseband Interface (R&S FSW-B17)

- STATus:QUEStionable:SYNC Register....282
- STATus:QUEStionable:DIQ Register....284

10.10.1 STATus:QUEStionable:SYNC Register

This register contains information about the state of the I/Q data acquisition. This register is used with option Digital Baseband Interface (R&S FSW-B17).

The status of the `STATus:QUESTionable:SYNC` register is indicated in bit 11 of the `STATus:QUESTionable` register.

You can read out the state of the register with `STATus:QUEStionable:SYNC:CONDition?` on page 283 and `STATus:QUEStionable:SYNC[:EVENt]?` on page 284.

Bit No.	Meaning
0-7	not used
8	**I/Q data acquisition error** This bit is set if an error occurs during I/Q data acquisition because the input sample rates or number of samples between the signal source and the R&S FSW do not match. See also "Error Messages" on page 146.

Bit No.	Meaning
9-14	not used
15	This bit is always set to 0.

STATus:QUEStionable:SYNC:CONDition?....283
STATus:QUEStionable:SYNC:ENABle....283
STATus:QUEStionable:SYNC:NTRansition....283
STATus:QUEStionable:SYNC:PTRansition....284
STATus:QUEStionable:SYNC[:EVENt]?....284

STATus:QUEStionable:SYNC:CONDition? <ChannelName>

This command reads out the CONDition section of the status register.

The command does not delete the contents of the EVENt section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Usage: Query only

STATus:QUEStionable:SYNC:ENABle <BitDefinition>, <ChannelName>

This command controls the ENABle part of a register.

The ENABle part allows true conditions in the EVENt part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<BitDefinition> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:QUEStionable:SYNC:NTRansition <BitDefinition>,<ChannelName>

This command controls the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Parameters:

<BitDefinition> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:QUEStionable:SYNC:PTRansition <BitDefinition>,<ChannelName>

These commands control the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Parameters:

<BitDefinition> Range: 0 to 65535

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

STATus:QUEStionable:SYNC[:EVENt]? <ChannelName>

This command reads out the EVENt section of the status register.

The command also deletes the contents of the EVENt section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Usage: Query only

10.10.2 STATus:QUEStionable:DIQ Register

This register contains information about the state of the digital I/Q input and output. This register is available with option Digital Baseband Interface (R&S FSW-B17)Digital Baseband Interface (R&S FSW-B17).

The status of the `STATus:QUESTionable:DIQ` register is indicated in bit 14 of the `STATus:QUESTionable` register.

You can read out the state of the register with `STATus:QUEStionable:DIQ:CONDition?` on page 286 and `STATus:QUEStionable:DIQ[:EVENt]?` on page 287.

For more information on the Digital Baseband Interface (R&S FSW-B17) see chapter 5.2, "Processing Data from the Digital Baseband Interface (R&S FSW-B17)", on page 26.

Bit No.	Meaning
0	**Digital I/Q Input Device connected** This bit is set if a device is recognized and connected to the Digital Baseband Interface of the analyzer.
1	**Digital I/Q Input Connection Protocol in progress** This bit is set while the connection between analyzer and digital baseband data signal source (e.g. R&S SMU, R&S Ex-I/Q-Box) is established.

Bit No.	Meaning
2	**Digital I/Q Input Connection Protocol error** This bit is set if an error occurred during establishing of the connect between analyzer and digital I/Q data signal source (e.g. R&S SMU, R&S Ex-I/Q-Box) is established.
3	**Digital I/Q Input PLL unlocked** This bit is set if the PLL of the Digital I/Q input is out of lock due to missing or unstable clock provided by the connected Digital I/Q TX device. To solve the problem the Digital I/Q connection has to be newly initialized after the clock has been restored.
4	**Digital I/Q Input DATA Error** This bit is set if the data from the Digital I/Q input module is erroneous. Possible reasons: • Bit errors in the data transmission. The bit will only be set if an error occurred at the current measurement. • Protocol or data header errors. May occurred at data synchronization problems or vast transmission errors. The bit will be set constantly and all data will be erroneous. To solve the problem the Digital I/Q connection has to be newly initialized. NOTE: If this error is indicated repeatedly either the Digital I/Q LVDS connection cable or the receiving or transmitting device might be defect.
5	not used
6	**Digital I/Q Input FIFO Overload** This bit is set if the sample rate on the connected instrument is higher than the input sample rate setting on the R&S FSW. Possible solution: • Reduce the sample rate on the connected instrument • Increase the input sample rate setting on the R&S FSW
7	not used
8	**Digital I/Q Output Device connected** This bit is set if a device is recognized and connected to the Digital I/Q Output.
9	**Digital I/Q Output Connection Protocol in progress** This bit is set while the connection between analyzer and digital I/Q data signal source (e.g. R&S SMU, R&S Ex-I/Q-Box) is established.
10	**Digital I/Q Output Connection Protocol error** This bit is set if an error occurred while the connection between analyzer and digital I/Q data signal source (e.g. R&S SMU, R&S Ex-I/Q-Box) is established.
11	**Digital I/Q Output FIFO Overload** This bit is set if an overload of the Digital I/Q Output FIFO occurred. This happens if the output data rate is higher than the maximal data rate of the connected instrument. Reduce the sample rate to solve the problem.
12-14	not used
15	This bit is always set to 0.

STATus:QUEStionable:DIQ:CONDition?....286
STATus:QUEStionable:DIQ:ENABle....286
STATus:QUEStionable:DIQ:NTRansition....286
STATus:QUEStionable:DIQ:PTRansition....286
STATus:QUEStionable:DIQ[:EVENt]?....287

STATus:QUEStionable:DIQ:CONDition? <ChannelName>

This command reads out the CONDition section of the `STATus:QUEStionable:DIQ:CONDition` status register.

The command does not delete the contents of the EVENt section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Example: `STAT:QUES:DIQ:COND?`

Usage: Query only

STATus:QUEStionable:DIQ:ENABle <BitDefinition>, <ChannelName>

This command controls the ENABle part of a register.

The ENABle part allows true conditions in the EVENt part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Setting parameters:

<SumBit> Range: 0 to 65535

Usage: SCPI confirmed

STATus:QUEStionable:DIQ:NTRansition <BitDefinition>,<ChannelName>

This command controls the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Setting parameters:

<BitDefinition> Range: 0 to 65535

STATus:QUEStionable:DIQ:PTRansition <BitDefinition>,<ChannelName>

This command controls the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Setting parameters:

<BitDefinition> Range: 0 to 65535

STATus:QUEStionable:DIQ[:EVENt]? <ChannelName>

This command queries the contents of the "EVENt" section of the `STATus:QUEStionable:DIQ` register for IQ measurements.

Readout deletes the contents of the "EVENt" section.

Query parameters:

<ChannelName> String containing the name of the channel.
The parameter is optional. If you omit it, the command works for the currently active channel.

Example: `STAT:QUES:DIQ?`

Usage: Query only

10.11 Programming Examples

The following programming examples demonstrate how to capture I/Q data and perform I/Q data analysis using the I/Q Analyzer in a remote environment.

Optional interfaces for I/Q data input are also demonstrated in the I/Q Analyzer.

- I/Q Analysis with Graphical Evaluation.....287
- Basic I/Q Analysis with Improved Performance.....289
- Data Acquisition via the Optional Digital Baseband Interface (R&S FSW-B17) 290
- Converting an RF Signal to a Digital I/Q Signal via the Digital Baseband Interface (B17).....291
- Output via the Optional Digital Baseband Interface (R&S FSW-B17).....292
- Data Acquisition via the Optional Analog Baseband Interface (R&S FSW-B71) 293

10.11.1 I/Q Analysis with Graphical Evaluation

This example demonstrates how to configure and perform a basic I/Q data acquisition and analyze the data using the I/Q Analyzer in a remote environment.

```
//--------------Activating the I/Q Analyzer application --------------------
*RST
```

```
//Reset the instrument
INST:CRE IQ,'IQANALYZER'
//Creates a new measurement channel named 'IQANALYZER'.
INIT:CONT OFF
//Switches to single sweep mode

//--------------Configuring Data Acquisition-------------
TRAC:IQ:SRAT 32MHZ
//Defines the sample rate.
TRAC:IQ:RLEN 1000
//Sets the record length (number of samples to capture) to 1000 samples.
TRAC:IQ:BWID?
//Queries the bandwidth of the resampling filter, determined by the sample rate
FORM:DATA REAL,32
//Formats the data as 32-byte real values.
TRAC:IQ:DATA:FORM IQP
//Lists all I values first, then all Q values in the trace results.

//--------------Configuring the Trace--------------------
TRAC:IQ:AVER ON
//Defines averaging for the I/Q trace.
TRAC:IQ:AVER:COUN 10
//Defines an average over 10 sweeps.

DISP:TRAC1:MODE WRIT
DISP:TRAC2:MODE MAXH
DISP:TRAC3:MODE MINH
//Changes the trace modes.

//--------------Performing the Measurement---------------------
INIT;*WAI
//Initiates a new measurement and waits until the sweep has finished.

//---------------Retrieving Results----------------------------

TRAC:DATA? TRACE1
TRAC:DATA? TRACE2
TRAC:DATA? TRACE3
//Returns the magnitude for each sweep point

LAY:REPL:WIND '1',RIMAG
//Changes the result display to Real/Imag (I/Q)

CALC:MARK:SEAR MAGN
//Configures searches to search both I and Q branches.
CALC:MARK:Y?
//Queries the result of the peak search on both branches.

TRAC:IQ:DATA:MEM? 0,500
//Returns the first 500 samples of the stored I/Q data for the measurement.
```

```
//For each sample, first the I-value, then the Q-value is listed.

TRAC:IQ:DATA:MEM? 500,500
//Returns the second half of the 1000 captured sample values.
```

10.11.2 Basic I/Q Analysis with Improved Performance

This example demonstrates how to configure and perform a basic I/Q data acquisition and analyze the data using the I/Q Analyzer in a remote environment.

```
//--------------Activating the I/Q Analyzer application --------------------
*RST
//Reset the instrument

INIT:CONT OFF
//Switches to single sweep mode
TRACE:IQ ON
//Switches the operating mode of the current measurement channel to I/Q Analyzer
//while retaining the relevant parameters from the Spectrum mode.

//--------------Configuring Data Acquisition-------------
TRACE:IQ:SET NORM,0,32000000,IQP,POS,0,1000
//Configures the sample rate as 32 MHz, IQP trigger, positive trigger slope,
//no pretrigger samples, 1000 samples to capture
FORM REAL,32
//The data is formatted as real values.

//--------------Configuring I/Q Gating---------------------------
TRAC:IQ:EGAT ON
//Turns on gated measurement.
TRAC:IQ:EGAT:TYPE LEV
//Select the level gate type.
TRAC:IQ:EGAT:LENG 20
//Sets the gate length to 20 samples.
TRAC:IQ:EGAT:GAP 20
//Sets the interval between gate periods to 20 samples.
TRAC:IQ:EGAT:NOF 2
//Sets the number of gate periods after the trigger signal to 2.
TRIG:SOUR IQP
//Defines the magnitude of the sampled I/Q data to be used as a trigger.
TRIG:LEV:IQP -30dbm
//Sets the trigger level.

//---------------Performing the Measurement and Retrieving Results--------------
TRAC:IQ:DATA?; *WAI;
//Performs a measurement and returns the RF input voltage at each sample point
//(first 1000 I-values, then 1000 Q-values).
```

```
TRAC:IQ:DATA:MEM? 0,500
//Returns the first 500 samples of the stored trace data for the measurement.
//For each sample, first the I-value, then the Q-value is listed.

TRAC:IQ:DATA:MEM? 500,500
//Returns the second half of the 1000 captured sample values.
```

10.11.3 Data Acquisition via the Optional Digital Baseband Interface (R&S FSW-B17)

This example demonstrates how to capture I/Q data via the optional Digital Baseband Interface (R&S FSW-B17) using the I/Q Analyzer in a remote environment.

```
//--------------Activating the I/Q Analyzer application ---------------------
*RST
//Reset the instrument
INST:CRE IQ,'IQANALYZER'
//Creates a new measurement channel named 'IQANALYZER'.
INIT:CONT OFF
//Switches to single sweep mode

//--------------Activating the Digital Baseband Interface-------------
INP:SEL DIQ
//Selects the digital baseband interface as the input source
INP:DIQ:CDEV?
//Queries the detected information for the connected instrument
INP:DIQ:SRAT:AUTO ON
//Sets the input sample rate to the rate of the connected instrument automatically
INP:DIQ:RANG:UPP 2 V
//Sets the level for value "1" to 2 V.
INP:DIQ:RANG:COUP ON
//Adjusts the reference level to the full scale level automatically (after every change)

//--------------Configuring Data Acquisition-------------
TRIG:SOUR BBP
TRIG:SEQ:LEV:BBP -20
//Trigger on baseband power of -20 dBm.
TRAC:IQ:SRAT 32MHZ
//Defines the sample rate.
TRAC:IQ:RLEN 1000
//Sets the record length (number of samples to capture) to 1000 samples.
TRAC:IQ:BWID?
//Queries the bandwidth of the resampling filter, determined by the sample rate.
FORM:DATA REAL,32
//Formats the data as 32-byte real values.
TRAC:IQ:DATA:FORM IQP
//Lists all I values first, then all Q values in the trace results.
```

```
//--------------Configuring the Trace--------------------
TRAC:IQ:AVER ON
//Defines averaging for the I/Q trace.
TRAC:IQ:AVER:COUN 10
//Defines an average over 10 sweeps.

DISP:TRAC1:MODE WRIT
DISP:TRAC2:MODE MAXH
DISP:TRAC3:MODE MINH
//Changes the trace modes.

//--------------Performing the Measurement---------------------
INIT;*WAI
//Initiates a new measurement and waits until the sweep has finished.

//---------------Retrieving Results----------------------------

TRAC:DATA? TRACE1
TRAC:DATA? TRACE2
TRAC:DATA? TRACE3
//Returns the magnitude for each sweep point
```

10.11.4 Converting an RF Signal to a Digital I/Q Signal via the Digital Baseband Interface (B17)

In the following example, an RF signal is measured at the RF input and then output as digital I/Q data via the Digital Baseband Interface, which requires R&S FSW option B17.

The following signal is to be measured:

Table 10-4: Signal parameters for programming example

carrier frequency	5 GHz
peak power	-10 dBm
bandwidth	22 MHz

Note: For a bandwidth of 22 MHz, a sampe rate of 27.5 MHz is required.

Table 10-5: Required I/Q data acquisition parameters for TRAC:IQ:SET command

Filter type	Normal
Sample Rate	27.5 MHz
Trigger Source	External
Trigger Slope	Positive
Pretrigger Samples	0
Number of Samples	1000

```
//----------Preparing the instrument-----------------------
*RST
//Sets the instrument to a defined default status

//------------Configuring the measurement----------------------------

FREQ:CENT 5GHz
//Sets the center frequency to 5 GHz
DISP:TRAC1:Y:RLEV -10dBm
//Sets the reference level to -10 dBm
TRACE:IQ:STATE ON
//Enables acquisition of I/Q data
TRAC:IQ:SET NORM,50MHz,27.5MHz,EXT,POS,0,1000
//Configures the measurement. Only the sample rate and trigger source settings
//are relevant to the digital baseband interface. The other parameters can be set
//to their default values as listed above.
OUTPUT:DIQ ON
//Enables digital I/Q data output interface

//------------Performing the measurement-----------------------------

INIT:IMM
//    Starts data acquisition and transmission to the output connector
```

10.11.5 Output via the Optional Digital Baseband Interface (R&S FSW-B17)

This example demonstrates how to output I/Q data to a connected instrument via the optional Digital Baseband Interface (R&S FSW-B17) using the I/Q Analyzer in a remote environment. The data to output is taken from the measurement described in chapter 10.11.1, "I/Q Analysis with Graphical Evaluation", on page 287.

```
//--------------Activating the I/Q Analyzer application --------------------
*RST
//Reset the instrument
INST:CRE IQ,'IQANALYZER'
//Creates a new measurement channel named 'IQANALYZER'.
INIT:CONT OFF
//Switches to single sweep mode

//--------------Configuring Data Acquisition-------------
TRAC:IQ:SRAT 32MHZ
//Defines the sample rate.
TRAC:IQ:RLEN 1000
//Sets the record length (number of samples to capture) to 1000 samples.
TRAC:IQ:BWID?
//Queries the bandwidth of the resampling filter, determined by the sample rate.
FORM:DATA REAL,32
//Formats the data as 32-byte real values.
TRAC:IQ:DATA:FORM IQP
```

```
//Lists all I values first, then all Q values in the trace results.

//--------------Configuring the Traces--------------------
TRAC:IQ:AVER ON
//Defines averaging for the I/Q trace.
TRAC:IQ:AVER:COUN 10
//Defines an average over 10 sweeps.

DISP:TRAC1:MODE WRIT
DISP:TRAC2:MODE MAXH
DISP:TRAC3:MODE MINH
//Changes the trace modes.

//--------------Configuring output--------------------
OUTP:DIQ ON
OUTP:DIQ:CDEV?
//Activates the digital baseband interface for output and queries the
//detected information of the connected instrument

//--------------Performing the Measurement----------------------
INIT;*WAI
//Initiates a new measurement and waits until the sweep has finished.
//The results are simultaneously sent to the output connector.
```

10.11.6 Data Acquisition via the Optional Analog Baseband Interface (R&S FSW-B71)

This example demonstrates how to capture I/Q data via the optional Analog Baseband Interface (R&S FSW-B71) using the I/Q Analyzer in a remote environment. As an input signal, a differential probe is assumed to be connected to the R&S FSW.

```
//--------------Activating the I/Q Analyzer application ---------------------
*RST
//Reset the instrument
INST:CRE IQ,'IQANALYZER'
//Creates a new measurement channel named 'IQANALYZER'.
INIT:CONT OFF
//Switches to single sweep mode

//--------------Activating the Analog Baseband Interface-------------
INP:SEL AIQ
//Selects the analog baseband interface as the input source
INP:IQ:TYPE I
//Only the signal on I input is analyzed (I only mode)
INP:IQ:BAL ON
//Differential input signal
INP:IQ:FULL:AUTO OFF
INP:IQ:FULL:LEV 2V
//Peak voltage at connector is set manually to the maximum of 2V
```

```
FREQ:CENT 1MHz
//Shift center frequency to 1 MHz (Low IF I)


//--------------Configuring Data Acquisition-------------
TRIG:SOUR BBP
TRIG:SEQ:LEV:BBP -20
//Trigger on baseband power of -20 dBm.
TRAC:IQ:SRAT 32MHZ
//Defines the sample rate.
TRAC:IQ:RLEN 1000
//Sets the record length (number of samples to capture) to 1000 samples.
TRAC:IQ:BWID?
//Queries the bandwidth of the resampling filter, determined by the sample rate.

//--------------Adding result displays--------------------
LAY:ADD? '1',RIGH,FREQ
//Spectrum display in window 2, to the right of Magnitude results
LAY:ADD? '1',BEL,RIMAG
//Real I display in window 3, below Magnitude results

//--------------Configuring the Trace--------------------
TRAC:IQ:AVER ON
//Defines averaging for the magnitude trace of I component.
TRAC:IQ:AVER:COUN 10
//Defines an average over 10 sweeps.

DISP:TRAC1:MODE WRIT
DISP:TRAC2:MODE MAXH
DISP:TRAC3:MODE MINH
//Changes the trace modes.

//--------------Performing the Measurement---------------------
INIT;*WAI
//Initiates a new measurement and waits until the sweep has finished.

//---------------Retrieving Results----------------------------
TRAC:IQ:DATA:FORM IQBL
TRAC:IQ:DATA?
//Retrieves the captured I samples (1000 values), followed by the captured
//Q samples (1000 values); Q samples are all 0 because of I/Q mode: Low IF
TRAC2:DATA? TRACE1
//Returns the power levels for each sample (y-values from Spectrum display)
TRAC2:DATA:X? TRACE1
//Returns the frequency for each sample (x-values from Spectrum display)
```

A Annex: Reference

A.1 Description of the LVDS Connector....295
A.2 Formats for Returned Values: ASCII Format and Binary Format....296
A.3 Reference: Format Description for I/Q Data Files....297
A.4 I/Q Data File Format (iq-tar)....299
A.4.1 I/Q Parameter XML File Specification....300
A.4.2 I/Q Data Binary File....303

A.1 Description of the LVDS Connector

The R&S Digital Baseband Interface is a proprietary LVDS serial interface. For adaption to industrial standard interfaces use the R&S EX-IQ-BOX (see the "R&S EX-IQ-BOX - External Signal Interface Module Manual").

The LVDS Connector is a 26 pin female 0.050" Mini D Ribbon connector (e.g.: 3M 102XX-1210VE series).

For the connection, use the cables provided with the R&S EX-IQ-BOX or an R&S®SMU-Z6 cable (order no.: 1415.0201.02).

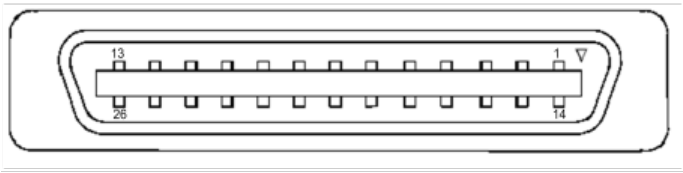

Fig. 1-1: LVDS connector on the R&S FSW rear panel, connector front view

The table 1-1 shows the multiplexed data at the output of the LVDS transmitter.

Table 1-1: LVDS connector pin description

Pin	Signal	Level	Description
1			reserved for future use
2	GND	0V	Ground, shield of pair 1-14, for future use
3	SDAT0_P	LVDS	Serial data channel 0 positive pin; carries the bits VALID, ENABLE, MARKER_1 (GP4), Reserve_1 (GP2), RE_0, RE_1
4	SDAT1_P	LVDS	Serial data channel 1 positive pin; carries the bits RE_2, RE_3, RE_4, RE_5, RE_6, RE_7
5	SDAT2_P	LVDS	Serial data channel 2 positive pin; carries the bits RE_8, RE_9, RE_10, RE_11, RE_12, RE_13
6	CLK1_P	LVDS	Clock 1 positive pin; clock for transmission on LVDS link

Pin	Signal	Level	Description
7	S_CLK	TTL	(for future use)
8	+5VD	+5.0V	Supply voltage (for future use)
9	SDAT3_P	LVDS	Serial data channel 3 positive pin; carries the bits RE_14, RE_15, RE_16, RE_17, RE_18, RE_19
10	SDAT4_P	LVDS	Serial data channel 4 positive pin; carries the bits TRIGGER_1 (GP0), TRIGGER_2 (GP1), MARKER_2 (GP5), Reserve_2 (GP3), IM_0, IM_1
11	SDAT5_P	LVDS	Serial data channel 5 positive pin; carries the bits IM_2, IM_3, IM_4, IM_5, IM_6, IM_7
12	SDAT6_P	LVDS	Serial data channel 6 positive pin; carries the bits IM_8, IM_9, IM_10, IM_11, IM_12, IM_13
13	SDAT7_P	LVDS	Serial data channel 7 positive pin; carries the bits IM_14, IM_15, IM_16, IM_17, IM_18, IM_19
14			reserved for future use
15	SDAT0_M	LVDS	Serial data channel 0 negative pin
16	SDAT1_M	LVDS	Serial data channel 1 negative pin
17	SDAT2_M	LVDS	Serial data channel 2 negative pin
18	CLK1_M	LVDS	Clock 1 negative pin
19	DGND	0V	Power ground; ground return for 5V supply voltage (for future use)
20	S_DATA	TTL	(for future use)
21	SDAT3_M	LVDS	Serial data channel 3 negative pin
22	SDAT4_M	LVDS	Serial data channel 4 negative pin
23	SDAT5_M	LVDS	Serial data channel 5 negative pin
24	SDAT6_M	LVDS	Serial data channel 6 negative pin
25	SDAT7_M	LVDS	Serial data channel 7 negative pin
26	GND	0V	LVDS ground; shielding of transmission lines and shielding of cable

A.2 Formats for Returned Values: ASCII Format and Binary Format

When trace data is retrieved using the `TRAC:DATA` or `TRAC:IQ:DATA` command, the data is returned in the format defined using the `FORMat[:DATA]`. The possible formats are described here.

- ASCII Format (FORMat ASCII):
  The data is stored as a list of comma separated values (CSV) of the measured values in floating point format.
- Binary Format (FORMat REAL,32):

The data is stored as binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format.
The schema of the result string is as follows:
`#41024<value1><value2>…<value n>` with

#4	number of digits (= 4 in the example) of the following number of data bytes
1024	number of following data bytes (= 1024 in the example)
<Value>	4-byte floating point value

Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

A.3 Reference: Format Description for I/Q Data Files

This section describes how I/Q data is transferred to the memory during remote control (see `TRACe:IQ:DATA:FORMat` on page 273 command).

For details on the format of the individual values, see chapter A.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 296.

For details on the format of I/Q export files (using the "I/Q Export" function), see the R&S FSW User Manual.

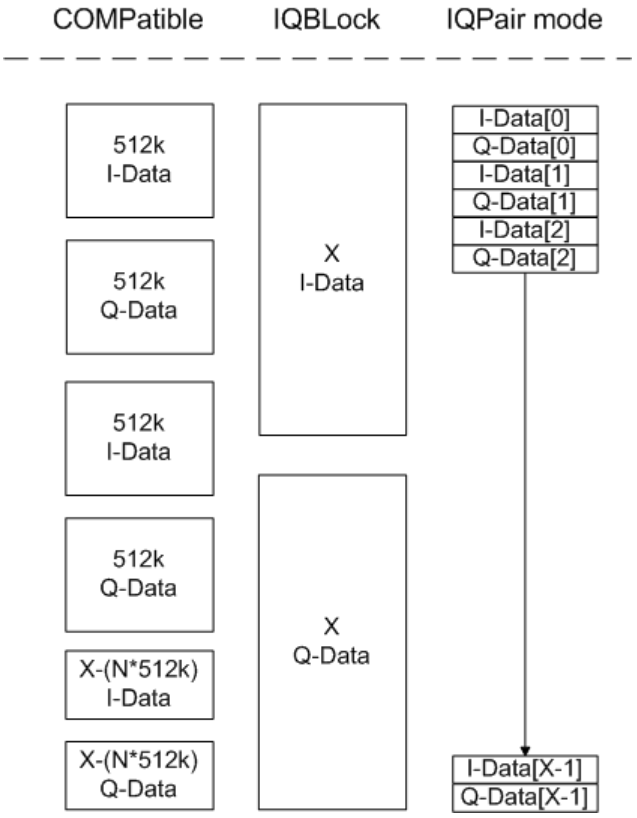

Fig. 1-2: I/Q data formats

Note: 512k corresponds to 524288 samples

For maximum performance, the formats "Compatible" or "IQPair" should be used. Furthermore, for large amounts of data, the data should be in binary format to improve performance.

In binary format, the number of I- and Q-data can be calculated as follows:

$$\#\,of\ I-Data \;=\; \#\,of\ Q-Data \;=\; \frac{\#\,of\ DataBytes}{8}$$

For the format "QBLock", the offset of Q-data in the output buffer can be calculated as follows:

$$Q-Data-Offset \;=\; \frac{(\#\,of\ DataBytes)}{2} + LengthIndicatorDigits$$

with "LengthIndicatorDigits" being the number of digits of the length indicator including the #. In the example above (#41024…), this results in a value of 6 for "LengthIndicatorDigits" and the offset for the Q-data results in 512 + 6 = 518.

A.4 I/Q Data File Format (iq-tar)

I/Q data is packed in a file with the extension `.iq.tar`. An iq-tar file contains I/Q data in binary format together with meta information that describes the nature and the source of data, e.g. the sample rate. The objective of the iq-tar file format is to separate I/Q data from the meta information while still having both inside one file. In addition, the file format allows you to preview the I/Q data in a web browser, and allows you to include user-specific data.

The iq-tar container packs several files into a single `.tar` archive file. Files in `.tar` format can be unpacked using standard archive tools (see http://en.wikipedia.org/wiki/Comparison_of_file_archivers) available for most operating systems. The advantage of `.tar` files is that the archived files inside the `.tar` file are not changed (not compressed) and thus it is possible to read the I/Q data directly within the archive without the need to unpack (untar) the `.tar` file first.

Sample iq-tar files

If you have the optional R&S FSW VSA application (R&S FSW-K70), some sample iq-tar files are provided in the `C:/R_S/Instr/user/vsa/DemoSignals` directory on the R&S FSW.

Contained files

An iq-tar file must contain the following files:

- **I/Q parameter XML file**, e.g. `xyz.xml`
  Contains meta information about the I/Q data (e.g. sample rate). The filename can be defined freely, but there must be only one single I/Q parameter XML file inside an iq-tar file.
- **I/Q data binary file**, e.g. `xyz.complex.float32`
  Contains the binary I/Q data of all channels. There must be only one single I/Q data binary file inside an iq-tar file.

Optionally, an iq-tar file can contain the following file:

- **I/Q preview XSLT file**, e.g. `open_IqTar_xml_file_in_web_browser.xslt`
  Contains a stylesheet to display the I/Q parameter XML file and a preview of the I/Q data in a web browser.
  A sample stylesheet is available at http://www.rohde-schwarz.com/file/open_IqTar_xml_file_in_web_browser.xslt.

A.4.1 I/Q Parameter XML File Specification

The content of the I/Q parameter XML file must comply with the XML schema `RsIqTar.xsd` available at: http://www.rohde-schwarz.com/file/RsIqTar.xsd.

In particular, the order of the XML elements must be respected, i.e. iq-tar uses an "ordered XML schema". For your own implementation of the iq-tar file format make sure to validate your XML file against the given schema.

The following example shows an I/Q parameter XML file. The XML elements and attributes are explained in the following sections.

Sample I/Q parameter XML file: xyz.xml

```
<?xml version="1.0" encoding="UTF-8"?>
<?xml-stylesheet type="text/xsl"
href="open_IqTar_xml_file_in_web_browser.xslt"?>
<RS_IQ_TAR_FileFormat fileFormatVersion="1"
xsi:noNamespaceSchemaLocation="RsIqTar.xsd"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <Name>FSV-K10</Name>
  <Comment>Here is a comment</Comment>
  <DateTime>2011-01-24T14:02:49</DateTime>
  <Samples>68751</Samples>
  <Clock unit="Hz">6.5e+006</Clock>
  <Format>complex</Format>
  <DataType>float32</DataType>
  <ScalingFactor unit="V">1</ScalingFactor>
  <NumberOfChannels>1</NumberOfChannels>
<DataFilename>xyz.complex.float32</DataFilename>
<UserData>
  <UserDefinedElement>Example</UserDefinedElement>
</UserData>
  <PreviewData>...</PreviewData>
</RS_IQ_TAR_FileFormat>
```

Element	Description
RS_IQ_TAR_File-Format	The root element of the XML file. It must contain the attribute `fileFormatVersion` that contains the number of the file format definition. Currently, `fileFormatVersion` "2" is used.
Name	Optional: describes the device or application that created the file.
Comment	Optional: contains text that further describes the contents of the file.
DateTime	Contains the date and time of the creation of the file. Its type is `xs:dateTime` (see `RsIqTar.xsd`).

Element	Description
Samples	Contains the number of samples of the I/Q data. For multi-channel signals all channels have the same number of samples. One sample can be: • A complex number represented as a pair of I and Q values • A complex number represented as a pair of magnitude and phase values • A real number represented as a single real value See also `Format` element.
Clock	Contains the clock frequency in Hz, i.e. the sample rate of the I/Q data. A signal generator typically outputs the I/Q data at a rate that equals the clock frequency. If the I/Q data was captured with a signal analyzer, the signal analyzer used the clock frequency as the sample rate. The attribute `unit` must be set to "Hz".
Format	Specifies how the binary data is saved in the I/Q data binary file (see `DataFilename` element). Every sample must be in the same format. The format can be one of the following: • `complex`: Complex number in cartesian format, i.e. I and Q values interleaved. I and Q are unitless • `real`: Real number (unitless) • `polar`: Complex number in polar format, i.e. magnitude (unitless) and phase (rad) values interleaved. Requires `DataType` = `float32` or `float64`
DataType	Specifies the binary format used for samples in the I/Q data binary file (see `DataFilename` element and chapter A.4.2, "I/Q Data Binary File", on page 303). The following data types are allowed: • `int8`: 8 bit signed integer data • `int16`: 16 bit signed integer data • `int32`: 32 bit signed integer data • `float32`: 32 bit floating point data (IEEE 754) • `float64`: 64 bit floating point data (IEEE 754)
ScalingFactor	Optional: describes how the binary data can be transformed into values in the unit Volt. The binary I/Q data itself has no unit. To get an I/Q sample in the unit Volt the saved samples have to be multiplied by the value of the `ScalingFactor`. For polar data only the magnitude value has to be multiplied. For multi-channel signals the `ScalingFactor` must be applied to all channels. The attribute `unit` must be set to "`V`". The `ScalingFactor` must be > 0. If the `ScalingFactor` element is not defined, a value of 1 V is assumed.
NumberOfChannels	Optional: specifies the number of channels, e.g. of a MIMO signal, contained in the I/Q data binary file. For multi-channels, the I/Q samples of the channels are expected to be interleaved within the I/Q data file (see chapter A.4.2, "I/Q Data Binary File", on page 303). If the `NumberOfChannels` element is not defined, one channel is assumed.
DataFilename	Contains the filename of the I/Q data binary file that is part of the iq-tar file. It is recommended that the filename uses the following convention: <xyz>.<Format>.<Channels>ch.<Type> • <xyz> = a valid Windows file name • <Format> = complex, polar or real (see `Format` element) • <Channels> = Number of channels (see `NumberOfChannels` element) • <Type> = float32, float64, int8, int16, int32 or int64 (see `DataType` element) Examples: • xyz.complex.1ch.float32 • xyz.polar.1ch.float64 • xyz.real.1ch.int16 • xyz.complex.16ch.int8

Element	Description
UserData	Optional: contains user, application or device-specific XML data which is not part of the iq-tar specification. This element can be used to store additional information, e.g. the hardware configuration. User data must be valid XML content.
PreviewData	Optional: contains further XML elements that provide a preview of the I/Q data. The preview data is determined by the routine that saves an iq-tar file (e.g. R&S FSW). For the definition of this element refer to the `RsIqTar.xsd` schema. Note that the preview can be only displayed by current web browsers that have JavaScript enabled and if the XSLT stylesheet `open_IqTar_xml_file_in_web_browser.xslt` is available.

Example: ScalingFactor

Data stored as `int16` and a desired full scale voltage of 1 V

`ScalingFactor` = 1 V / maximum int16 value = 1 V / 2^{15} = 3.0517578125e-5 V

Scaling Factor	Numerical value	Numerical value x ScalingFactor
Minimum (negative) int16 value	- 2^{15} = - 32768	-1 V
Maximum (positive) int16 value	2^{15}-1= 32767	0.999969482421875 V

Example: PreviewData in XML

```
<PreviewData>
    <ArrayOfChannel length="1">
      <Channel>
        <PowerVsTime>
          <Min>
            <ArrayOfFloat length="256">
              <float>-134</float>
              <float>-142</float>
              ...
              <float>-140</float>
            </ArrayOfFloat>
          </Min>
          <Max>
            <ArrayOfFloat length="256">
              <float>-70</float>
              <float>-71</float>
              ...
              <float>-69</float>
            </ArrayOfFloat>
          </Max>
        </PowerVsTime>
        <Spectrum>
          <Min>
            <ArrayOfFloat length="256">
              <float>-133</float>
              <float>-111</float>
              ...
              <float>-111</float>
```

```
            </ArrayOfFloat>
          </Min>
          <Max>
            <ArrayOfFloat length="256">
              <float>-67</float>
              <float>-69</float>
              ...
              <float>-70</float>
              <float>-69</float>
            </ArrayOfFloat>
          </Max>
        </Spectrum>
        <IQ>
          <Histogram width="64" height="64">0123456789...0</Histogram>
        </IQ>
      </Channel>
    </ArrayOfChannel>
  </PreviewData>
```

A.4.2 I/Q Data Binary File

The I/Q data is saved in binary format according to the format and data type specified in the XML file (see `Format` element and `DataType` element). To allow reading and writing of streamed I/Q data, all data is interleaved, i.e. complex values are interleaved pairs of I and Q values and multi-channel signals contain interleaved (complex) samples for channel 0, channel 1, channel 2 etc. If the `NumberOfChannels` element is not defined, one channel is presumed.

Example: Element order for real data (1 channel)

```
I[0],                       // Real sample 0
I[1],                       // Real sample 1
I[2],                       // Real sample 2
...
```

Example: Element order for complex cartesian data (1 channel)

```
I[0], Q[0],                 // Real and imaginary part of complex sample 0
I[1], Q[1],                 // Real and imaginary part of complex sample 1
I[2], Q[2],                 // Real and imaginary part of complex sample 2
...
```

Example: Element order for complex polar data (1 channel)

```
Mag[0], Phi[0],             // Magnitude and phase part of complex sample 0
Mag[1], Phi[1],             // Magnitude and phase part of complex sample 1
Mag[2], Phi[2],             // Magnitude and phase part of complex sample 2
...
```

Example: Element order for complex cartesian data (3 channels)

Complex data: I[channel no][time index], Q[channel no][time index]

```
I[0][0], Q[0][0],            // Channel 0, Complex sample 0
I[1][0], Q[1][0],            // Channel 1, Complex sample 0
I[2][0], Q[2][0],            // Channel 2, Complex sample 0

I[0][1], Q[0][1],            // Channel 0, Complex sample 1
I[1][1], Q[1][1],            // Channel 1, Complex sample 1
I[2][1], Q[2][1],            // Channel 2, Complex sample 1

I[0][2], Q[0][2],            // Channel 0, Complex sample 2
I[1][2], Q[1][2],            // Channel 1, Complex sample 2
I[2][2], Q[2][2],            // Channel 2, Complex sample 2
...
```

Example: Element order for complex cartesian data (1 channel)

This is an example of how to store complex cartesian data in float32 format using MATLAB®.

```
% Save vector of complex cartesian I/Q data, i.e. iqiqiq...
N = 100
iq = randn(1,N)+1j*randn(1,N)
fid = fopen('xyz.complex.float32','w');
for k=1:length(iq)
  fwrite(fid,single(real(iq(k))),'float32');
  fwrite(fid,single(imag(iq(k))),'float32');
end
fclose(fid)
```

List of Remote Commands (I/Q Analyzer+I/Q Input Interfaces (B17+B71))

ABORt....242
CALCulate:IQ:MODE....153
CALCulate:MARKer:FUNCtion:FPEaks:COUNt?....266
CALCulate:MARKer:FUNCtion:FPEeaks:X?....267
CALCulate:MARKer:FUNCtion:FPEeaks:X?....278
CALCulate:MARKer:FUNCtion:FPEeaks:Y?....267
CALCulate:MARKer:FUNCtion:FPEeaks:Y?....278
CALCulate:MARKer:LOEXclude....258
CALCulate:MARKer:X:SLIMits:LEFT....259
CALCulate:MARKer:X:SLIMits:RIGHT....260
CALCulate:MARKer:X:SLIMits:ZOOM[:STATe]....260
CALCulate:MARKer:X:SLIMits[:STATe]....259
CALCulate:MARKer:X:SSIZe....257
CALCulate:MSRA:ALINe:SHOW....270
CALCulate:MSRA:ALINe[:VALue]....271
CALCulate:MSRA:WINDow<n>:IVAL?....271
CALCulate:THReshold....260
CALCulate:THReshold:STATe....261
CALCulate<n>:DELTamarker:AOFF....253
CALCulate<n>:DELTamarker:MODE....254
CALCulate<n>:DELTamarker<m1>:LINK:TO:MARKer<m2>....254
CALCulate<n>:DELTamarker<m>:LINK....253
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT....264
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT....264
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt....264
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]....264
CALCulate<n>:DELTamarker<m>:MINimum:LEFT....264
CALCulate<n>:DELTamarker<m>:MINimum:NEXT....265
CALCulate<n>:DELTamarker<m>:MINimum:RIGHt....265
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]....265
CALCulate<n>:DELTamarker<m>:MREF....254
CALCulate<n>:DELTamarker<m>:TRACe....255
CALCulate<n>:DELTamarker<m>:X....255
CALCulate<n>:DELTamarker<m>:Y?....278
CALCulate<n>:DELTamarker<m>[:STATe]....255
CALCulate<n>:MARKer:PEXCursion....258
CALCulate<n>:MARKer:SEARch....259
CALCulate<n>:MARKer<m1>:LINK:TO:MARKer<m2>....256
CALCulate<n>:MARKer<m>:AOFF....256
CALCulate<n>:MARKer<m>:FUNCtion:CENTer....214
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe]....265
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE....266
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT....267

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STAT....267
CALCulate<n>:MARKer<m>:FUNCtion:FPEaks[:IMMediate]....266
CALCulate<n>:MARKer<m>:FUNCtion:REFerence....208
CALCulate<n>:MARKer<m>:MAXimum:AUTO....261
CALCulate<n>:MARKer<m>:MAXimum:LEFT....262
CALCulate<n>:MARKer<m>:MAXimum:NEXT....262
CALCulate<n>:MARKer<m>:MAXimum:RIGHt....262
CALCulate<n>:MARKer<m>:MAXimum[:PEAK]....262
CALCulate<n>:MARKer<m>:MINimum:AUTO....262
CALCulate<n>:MARKer<m>:MINimum:LEFT....263
CALCulate<n>:MARKer<m>:MINimum:NEXT....263
CALCulate<n>:MARKer<m>:MINimum:RIGHt....263
CALCulate<n>:MARKer<m>:MINimum[:PEAK]....263
CALCulate<n>:MARKer<m>:TRACe....256
CALCulate<n>:MARKer<m>:X....257
CALCulate<n>:MARKer<m>:Y?....279
CALCulate<n>:MARKer<m>[:STATe]....256
CALCulate<n>:PMETer<p>:RELative:STATe....199
CALCulate<n>:PMETer<p>:RELative[:MAGNitude]....199
CALCulate<n>:PMETer<p>:RELative[:MAGNitude]:AUTO ONCE....199
CALCulate<n>:UNIT:POWer....208
CALibration:PMETer<p>:ZERO:AUTO ONCE....198
DIAGnostic:SERVice:NSOurce....206
DISPlay:FORMat....235
DISPlay:MTABle....257
DISPlay[:WINDow<n>]:SIZE....236
DISPlay[:WINDow<n>]:TRACe:Y:SPACing....213
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]....212
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:AUTO ONCE....213
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:MODE....213
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel....209
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RLEVel:OFFSet....209
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition....192
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RPOSition....213
DISPlay[:WINDow<n>]:TRACe:Y[:SCALe]:RVALue....192
DISPlay[:WINDow<n>]:TRACe<t>:MODE....249
DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous....250
DISPlay[:WINDow<n>]:TRACe<t>[:STATe]....250
DISPlay[:WINDow<n>]:ZOOM:AREA....268
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:AREA....269
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:STATe....269
DISPlay[:WINDow<n>]:ZOOM:STATe....268
FETCh:PMETer<p>?....199
FORMat:DEXPort:DSEParator....275
FORMat[:DATA]....275
INITiate:CONMeas....243
INITiate:CONTinuous....244
INITiate:REFResh....271

INITiate:SEQuencer:ABORt....245
INITiate:SEQuencer:IMMediate....245
INITiate:SEQuencer:MODE....245
INITiate:SEQuencer:REFResh[:ALL]....246
INITiate[:IMMediate]....244
INPut:ATTenuation....209
INPut:ATTenuation:AUTO....210
INPut:ATTenuation:PROTection:RESet....159
INPut:CONNector....159
INPut:COUPling....159
INPut:DIQ:CDEVice....163
INPut:DIQ:RANGe:COUPling....165
INPut:DIQ:RANGe[:UPPer]....165
INPut:DIQ:RANGe[:UPPer]:AUTO....164
INPut:DIQ:RANGe[:UPPer]:UNIT....165
INPut:DIQ:SRATe....165
INPut:DIQ:SRATe:AUTO....166
INPut:EATT....210
INPut:EATT:AUTO....211
INPut:EATT:STATe....211
INPut:FILE:PATH....162
INPut:FILTer:HPASs[:STATe]....160
INPut:FILTer:YIG[:STATe]....160
INPut:GAIN:STATe....211
INPut:GAIN[:VALue]....212
INPut:IMPedance....160
INPut:IQ:BALanced[:STATe]....168
INPut:IQ:FULLscale:AUTO....168
INPut:IQ:FULLscale:LEVel....168
INPut:IQ:TYPE....169
INPut:SELect....161
INSTrument:CREate:DUPLicate....154
INSTrument:CREate:REPLace....154
INSTrument:CREate[:NEW]....154
INSTrument:DELete....155
INSTrument:LIST?....155
INSTrument:REName....156
INSTrument[:SELect]....157
LAYout:ADD[:WINDow]?....236
LAYout:CATalog[:WINDow]?....237
LAYout:IDENtify[:WINDow]?....238
LAYout:REMove[:WINDow]....238
LAYout:REPLace[:WINDow]....238
LAYout:SPLitter....239
LAYout:WINDow<n>:ADD?....240
LAYout:WINDow<n>:IDENtify?....241
LAYout:WINDow<n>:REMove....241
LAYout:WINDow<n>:REPLace....241

MMEMory:LOAD:IQ:STATe....280
MMEMory:STORe:IQ:COMMent....280
MMEMory:STORe:IQ:STATe....280
MMEMory:STORe:LIST....279
OUTPut:DIQ....166
OUTPut:DIQ:CDEVice....166
OUTPut:IF:IFFRequency....207
OUTPut:IF[:SOURce]....207
OUTPut:TRIGger<port>:DIRection....222
OUTPut:TRIGger<port>:LEVel....223
OUTPut:TRIGger<port>:OTYPe....223
OUTPut:TRIGger<port>:PULSe:IMMediate....224
OUTPut:TRIGger<port>:PULSe:LENGth....224
READ:PMETer<p>?....200
SOURce:EXTernal:FREQuency....186
SOURce:EXTernal:FREQuency:COUPling[:STATe]....187
SOURce:EXTernal:FREQuency:OFFSet....188
SOURce:EXTernal:FREQuency[:FACTor]:DENominator....187
SOURce:EXTernal:FREQuency[:FACTor]:NUMerator....188
SOURce:EXTernal:POWer[:LEVel]....188
SOURce:EXTernal:ROSCillator[:SOURce]....189
SOURce:EXTernal[:STATe]....189
SOURce:POWer[:LEVel][:IMMediate]:OFFSet....189
STATus:QUEStionable:DIQ:CONDition?....286
STATus:QUEStionable:DIQ:ENABle....286
STATus:QUEStionable:DIQ:NTRansition....286
STATus:QUEStionable:DIQ:PTRansition....286
STATus:QUEStionable:DIQ[:EVENt]?....287
STATus:QUEStionable:SYNC:CONDition?....283
STATus:QUEStionable:SYNC:ENABle....283
STATus:QUEStionable:SYNC:NTRansition....283
STATus:QUEStionable:SYNC:PTRansition....284
STATus:QUEStionable:SYNC[:EVENt]?....284
SYSTem:COMMunicate:GPIB:RDEVice:GENerator:ADDRess....190
SYSTem:COMMunicate:RDEVice:GENerator:INTerface....190
SYSTem:COMMunicate:RDEVice:GENerator:LINK....190
SYSTem:COMMunicate:RDEVice:GENerator:TYPE....191
SYSTem:COMMunicate:RDEVice:PMETer:COUNt?....197
SYSTem:COMMunicate:RDEVice:PMETer<p>:CONFigure:AUTO[:STATe]....197
SYSTem:COMMunicate:RDEVice:PMETer<p>:DEFine....197
SYSTem:COMMunicate:TCPip:RDEVice:GENerator:ADDRess....191
SYSTem:PRESet:CHANnel[:EXECute]....157
SYSTem:SEQuencer....248
TRACe:IQ:BWIDth....227
TRACe:IQ:DATA:FORMat....273
TRACe:IQ:DATA:MEMory?....274
TRACe:IQ:DATA?....272
TRACe:IQ:DIQFilter....228

TRACe:IQ:EGATe....225
TRACe:IQ:EGATe:GAP....226
TRACe:IQ:EGATe:LENGth....226
TRACe:IQ:EGATe:NOFgateperiods....226
TRACe:IQ:EGATe:TYPE....227
TRACe:IQ:EVAL....157
TRACe:IQ:RLENgth....228
TRACe:IQ:SET....229
TRACe:IQ:SRATe....230
TRACe:IQ:TPISample?....230
TRACe:IQ:WBANd:MBWIDTH....232
TRACe:IQ:WBANd[:STATe]....231
TRACe:IQ[:STATe]....158
TRACe<n>:COPY....252
TRACe<n>[:DATA]:MEMory?....277
TRACe<n>[:DATA]:X?....277
TRACe<n>[:DATA]?....276
TRIGger[:SEQuence]:BBPower:HOLDoff....217
TRIGger[:SEQuence]:DTIMe....217
TRIGger[:SEQuence]:HOLDoff[:TIME]....217
TRIGger[:SEQuence]:IFPower:HOLDoff....218
TRIGger[:SEQuence]:IFPower:HYSTeresis....218
TRIGger[:SEQuence]:LEVel:BBPower....218
TRIGger[:SEQuence]:LEVel:IFPower....219
TRIGger[:SEQuence]:LEVel:IQPower....219
TRIGger[:SEQuence]:LEVel:RFPower....220
TRIGger[:SEQuence]:LEVel[:EXTernal<port>]....219
TRIGger[:SEQuence]:SLOPe....220
TRIGger[:SEQuence]:SOURce....220
TRIGger[:SEQuence]:TIME:RINTerval....222
UNIT<n>:PMETer<p>:POWer....203
UNIT<n>:PMETer<p>:POWer:RATio....204
[SENSe:]ADJust:ALL....232
[SENSe:]ADJust:CONFigure:DURation....233
[SENSe:]ADJust:CONFigure:DURation:MODE....233
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer....233
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer....234
[SENSe:]ADJust:CONFigure:TRIG....234
[SENSe:]ADJust:FREQuency....234
[SENSe:]ADJust:LEVel....235
[SENSe:]AVERage:COUNt....250
[SENSe:]AVERage<n>:TYPE....251
[SENSe:]AVERage<n>[:STATe<t>]....251
[SENSe:]CORRection:COLLect[:ACQuire]....192
[SENSe:]CORRection:CVL:BAND....177
[SENSe:]CORRection:CVL:BIAS....178
[SENSe:]CORRection:CVL:CATAlog?....178
[SENSe:]CORRection:CVL:CLEAr....179

[SENSe:]CORRection:CVL:COMMent....179
[SENSe:]CORRection:CVL:DATA....179
[SENSe:]CORRection:CVL:HARMonic....180
[SENSe:]CORRection:CVL:MIXer....180
[SENSe:]CORRection:CVL:PORTs....180
[SENSe:]CORRection:CVL:SELect....181
[SENSe:]CORRection:CVL:SNUMber....181
[SENSe:]CORRection:METHod....193
[SENSe:]CORRection:RECall....194
[SENSe:]CORRection:TRANsducer:GENerator....194
[SENSe:]CORRection[:STATe]....194
[SENSe:]FREQuency:CENTer....214
[SENSe:]FREQuency:CENTer:STEP....215
[SENSe:]FREQuency:CENTer:STEP:AUTO....215
[SENSe:]FREQuency:OFFSet....216
[SENSe:]MIXer:BIAS:HIGH....171
[SENSe:]MIXer:BIAS[:LOW]....171
[SENSe:]MIXer:FREQuency:HANDover....173
[SENSe:]MIXer:FREQuency:STARt?....173
[SENSe:]MIXer:FREQuency:STOP?....173
[SENSe:]MIXer:HARMonic:BAND:PRESet....173
[SENSe:]MIXer:HARMonic:BAND[:VALue]....174
[SENSe:]MIXer:HARMonic:HIGH:STATe....174
[SENSe:]MIXer:HARMonic:HIGH[:VALue]....175
[SENSe:]MIXer:HARMonic:TYPE....175
[SENSe:]MIXer:HARMonic[:LOW]....175
[SENSe:]MIXer:LOPower....171
[SENSe:]MIXer:LOSS:HIGH....175
[SENSe:]MIXer:LOSS:TABLe:HIGH....176
[SENSe:]MIXer:LOSS:TABLe[:LOW]....176
[SENSe:]MIXer:LOSS[:LOW]....176
[SENSe:]MIXer:PORTs....177
[SENSe:]MIXer:RFOVerrange[:STATe]....177
[SENSe:]MIXer:SIGNal....171
[SENSe:]MIXer:THReshold....172
[SENSe:]MIXer[:STATe]....170
[SENSe:]MSRA:CAPTure:OFFSet....272
[SENSe:]PMETer<p>:DCYCle:VALue....200
[SENSe:]PMETer<p>:DCYCle[:STATe]....200
[SENSe:]PMETer<p>:FREQuency....201
[SENSe:]PMETer<p>:FREQuency:LINK....201
[SENSe:]PMETer<p>:MTIMe....201
[SENSe:]PMETer<p>:MTIMe:AVERage:COUNt....202
[SENSe:]PMETer<p>:MTIMe:AVERage[:STATe]....202
[SENSe:]PMETer<p>:ROFFset[:STATe]....202
[SENSe:]PMETer<p>:TRIGger:DTIMe....204
[SENSe:]PMETer<p>:TRIGger:HOLDoff....204
[SENSe:]PMETer<p>:TRIGger:HYSTeresis....205

[SENSe:]PMETer<p>:TRIGger:LEVel....205
[SENSe:]PMETer<p>:TRIGger:SLOPe....206
[SENSe:]PMETer<p>:TRIGger[:STATe]....206
[SENSe:]PMETer<p>:UPDate[:STATe]....203
[SENSe:]PMETer<p>[:STATe]....203
[SENSe:]PROBe<p>:ID:PARTnumber?....184
[SENSe:]PROBe<p>:ID:SRNumber?....184
[SENSe:]PROBe<p>:SETup:MODE....184
[SENSe:]PROBe<p>:SETup:NAME?....185
[SENSe:]PROBe<p>:SETup:STATe?....185
[SENSe:]PROBe<p>:SETup:TYPE?....185
[SENSe:]SWAPiq....169
[SENSe:]SWEep:COUNt....247
[SENSe:]SWEep:COUNt:CURRent?....247
[SENSe:]SWEep:POINts....247
[SENSe:]SWEep:TIME....247
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]....251
[SENSe:][WINDow:]DETector<trace>[:FUNCtion]:AUTO....252

Index

*OPC 216

A

Aborting
Sweep 115, 116
AC/DC coupling 62
Activating
I/Q Analyzer (remote) 152
Active probe
Microbutton 80
Amplitude
Analog Baseband Interface (B71) settings 97
Configuration (softkey) 93
Scaling 101
Settings 93
Analog Baseband
Amplitude settings 97
Input 64
Input settings 78
Signal processing 32
Analog Baseband (B71)
Fullscale level 99
I/Q mode 78
Input type (remote control) 169
Analog Baseband connector
RF input 38
Analog Baseband Interface
Calibration 35
Full scale level 34
I/Q modes 35
Sample rate 34
Triggering 34
Analog Baseband Interface (B71)
Amplitude settings 97
Basics 32
Connectors 32
Input 33
Input settings 78
Analog input
Analog Baseband Interface (B71) 33
Analysis
Bandwidth 112
Bandwidth, definition 22, 29
I/Q data (remote) 248
Interval (MSRA) 111
Settings 121
Analysis interval
Configuration (MSRA, remote) 270
Analysis line 55
Configuration (MSRA, remote) 270
Applications
I/Q Analyzer (remote) 152
APX
External generator 45, 50
Att (hardware setting) 11
Attenuation 95
Auto 96
Electronic 96
Manual 96
Option B25 96
Protective 38
Protective (remote) 159
Audio signals
Output (remote) 89, 207
Auto adjustment
triggered measurement 234
Auto all
Softkey 117
Auto frequency
Softkey 117
Auto ID
External Mixer (B21, remote control) 171
External Mixer (B21) 70
Threshold (External Mixer, B21) 70
Threshold (External Mixer (B21), remote control) 172
Auto level
Hysteresis 118
Reference level 95, 99, 118
Softkey 95, 99, 118
Automatic coupling
Frequencies, external generator 48, 84
Auto settings
Meastime Auto (softkey) 118
Meastime Manual (softkey) 118
AUX control
TTL synchronization, external generator 41
Average count 115
Average mode
Traces 123
Averaging
Traces (remote control) 251

B

Band
Conversion loss table (B21) 74
External Mixer (B21, remote control) 173
External Mixer (B21) 67
Bandwidth
Analysis 112
depending on sample rate 30
Digital I/Q data 29
Extension 112
Extension options 23, 24
I/Q Analyzer 22
Maximum 112
Maximum usable 22
Relationship to sample rate 23
Settings 111
Baseband Input
Connectors 32
BB Power
Trigger (softkey) 106
Bias
Conversion loss table (B21) 71, 74
External Mixer (B21, remote control) 171
External Mixer (B21) 70
Branch for peak search
I/Q Analyzer 132

C

Calibration
- Analog Baseband Interface ... 35
- External generator ... 44
- External generator, remote ... 191
- Normalization, external generator ... 87
- Reference trace, external generator ... 45
- Reflection open measurement, external generator ... 87
- Reflection short measurement, external generator ... 86
- Restoring settings, external generator ... 46, 87
- Storing results, external generator ... 45
- Transmission measurement, external generator ... 86

Capture offset
- MSRA applications ... 114
- Remote ... 272
- Softkey ... 114

Capture time
- see also Measurement time ... 247

Capturing
- I/Q data, see Data acquisition ... 242

Center = Mkr Freq
- Softkey ... 133

Center frequency ... 102
- Analog Baseband (B71) ... 79
- Automatic configuration ... 117
- Displayed ... 11
- Setting to marker ... 133
- Softkey ... 102
- Step size ... 102

Channel bar
- Information, external generator ... 50

Clock rate
- Definition ... 29

Configuring
- Data acquisition (remote) ... 227
- I/Q Analyzer (remote) ... 158
- Markers (remote) ... 253

Connector
- Baseband Input ... 32

Connectors
- AUX control, external generator ... 41
- External generator control ... 41
- GPIB ... 41
- IF/VIDEO/DEMOD ... 89

Continue single sweep
- Softkey ... 116

Continuous sweep
- Softkey ... 115

Conventions
- SCPI commands ... 148

Conversion loss
- External Mixer (B21, remote control) ... 175, 176

Conversion loss tables ... 71, 72
- Available (remote control) ... 178
- Band (remote control) ... 177
- Bias (remote control) ... 178
- Configuring (B21) ... 71
- Creating ... 72
- Deleting (remote control) ... 179
- External Mixer (B21, remote control) ... 176
- External Mixer (B21) ... 68
- Harmonic order (remote control) ... 180
- Importing (External Mixer, B21) ... 72
- Managing ... 71
- Mixer type (remote control) ... 180
- Saving (External Mixer, B21) ... 75
- Selecting (remote control) ... 181
- Shifting values (External Mixer, B21) ... 75
- Values (External Mixer, B21) ... 75

Copying
- Measurement channel (remote) ... 154

Coupling
- Automatic, external generator ... 48, 84
- Frequencies, external generator ... 47
- Input (remote) ... 159
- Manual, external generator ... 84

D

Data acquisition
- Configuring (remote) ... 227
- Errors ... 282
- I/Q Analyzer ... 21
- I/Q data (remote) ... 242
- MSRA ... 111
- Settings ... 110
- Troubleshooting ... 146

Data format
- ASCII ... 296
- Binary ... 296
- Remote ... 275

Data output
- Troubleshooting ... 146

Decimation
- Data processing ... 21
- Filter ... 30

Default values
- Preset ... 57

Delta markers ... 127
- Defining ... 127

Demodulation
- Display ... 116

Denominator
- Frequencies, external generator ... 48, 85

Detectors
- Remote control ... 251
- Trace ... 123

Diagram area
- Hardware settings ... 11

Diagram footer information ... 12

Differential input
- Analog Baseband (B71, remote control) ... 168
- Analog Baseband (B71) ... 79

DigIConf
- Softkey, see also R&S DigIConf ... 77

Digital Baseband Interface (B17) ... 92
- Applications ... 13
- Basics ... 26
- Connected instrument ... 93
- Description ... 295
- Error messages ... 146
- Input ... 27
- Input settings ... 75
- Input status (remote) ... 163
- Output ... 28
- Output connection status (remote) ... 166
- Output settings ... 91, 92
- Status ... 31
- Status registers ... 282, 284

Digital I/Q
Bandwidths ... 29
Connection information ... 93
Data processing ... 26
Full scale level ... 28
Input connection information ... 77
Input settings ... 75
Output settings ... 91
Output settings information ... 92
Sample rates ... 29
Triggering ... 28, 106
Digital input
Bandwidths ... 30
Connection information ... 77
Connection status ... 31
Digital Baseband Interface (B17) ... 27
Restrictions ... 30
Unfiltered ... 30
Digital output
Connection status ... 31
Digital Baseband Interface (B17) ... 28
Enabling ... 92
Processing ... 29
Restrictions ... 30
Display configuration
Softkey ... 116
Drop-out time
Trigger ... 108
Duplicating
Measurement channel (remote) ... 154

E

Edge
Triggered gate ... 224
Electronic input attenuation ... 96
Equalizer
Data processing ... 21
Errors
Data acquisition ... 282
Device connections (B17) ... 284
Digital Baseband Interface (B17) ... 32, 146
External generator ... 50
IF OVLD ... 94, 98
Evaluation methods
Remote ... 236
Example
Remote control of an external generator ... 195
Exclude LO (remote control) ... 258
Exporting
Functions ... 60
I/Q data ... 54, 57, 61, 143, 299, 303
I/Q data (remote) ... 279
Peak list ... 135
Softkey ... 61
External generator
Activating/Deactivating ... 84
Basics ... 40
Calibration functions ... 85
Calibration measurement settings ... 83
Channel bar information ... 50
Connections ... 41
Coupling frequencies ... 47
Errors ... 50
Generators, supported ... 43
Interface ... 82
Interface settings ... 81
Normalizing ... 87
Overloading ... 51
Recalling calibration settings ... 87
Reference level ... 46
Reference line ... 46
Reference line position ... 87
Reference line value ... 88
Reference position ... 87
Reference trace ... 46
Reference value ... 88
Reflection measurement ... 42
Reflection open measurement ... 87
Reflection short measurement ... 86
Remote control ... 186
Settings ... 81
Transducer factor ... 46, 87
Transmission measurement ... 41, 86
TTL synchronization ... 41
External Mixer (B21) ... 66
Activating (remote control) ... 170
Band ... 67, 173
Basic settings ... 69
Configuration ... 65
Conversion loss ... 68
Conversion loss tables ... 71, 72
Frequency range ... 66
Handover frequency ... 67
Harmonic Order ... 68
Harmonic Type ... 68
Name ... 74
Programming example ... 181
Range ... 67, 68
Restoring bands ... 67
RF overrange ... 67, 177
RF Start/RF Stop ... 66
Serial number ... 74
Type ... 67, 75, 177
External reference
External generator ... 42
External generator control ... 82
External trigger
Level (remote) ... 219
Softkey ... 105

F

File format
I/Q data ... 299
Files
I/Q data binary XML ... 303
I/Q data input ... 51, 64
I/Q parameter XML ... 300
Filters
Bandwidth, I/Q data ... 112
Digital Baseband Interface (B17) ... 113
Digital I/Q (remote control) ... 228
Equalizer ... 21
High-pass (remote) ... 160
High-pass (RF input) ... 63
I/Q data ... 113
YIG (remote) ... 160
Format
Data ... 296
Data (remote) ... 275
I/Q data files ... 297
Free Run
Trigger (softkey) ... 105

Frequency
Configuration (remote) 214
Configuration (softkey) 101
External generator 84
IF Out 89
Frequency-converting measurements
External generator 48
Frequency coupling
Automatic, external generator 48
External generator 47, 84
Reverse sweep, external generator 49
TTL synchronization, external generator 49
Frequency denominator
External generator 85
Frequency numerator
External generator 85
Frequency offset 102
External generator 48, 85
Frequency range
Calibration sweep, external generator 48, 85
FRQ
External generator 50
Fullscale level
Analog Baseband (B71, remote control) 168
Analog Baseband (B71) 99
Full scale level 28, 34
Digital I/Q 76
Digital I/Q (remote) 164, 165
Unit, digital I/Q (remote) 165

G

Gating
I/Q data 224
Source 105
Generator
Frequencies, external generator 48, 85
Frequency coupling, external generator 84
Frequency offset, external generator 84
Output power, external generator 84
Generators
Frequency range, external generator 83
Power range, external generator 83
Setup files, external generator 44, 82, 83
Supported, external generator 43
Generator type
External generator 82
GPIB
Address, External generator 82
External generator 82
TTL synchronization, External generator 82

H

Handover frequency
External Mixer (B21, remote control) 173
External Mixer (B21) 67
Hardware settings
Displayed 11
Harmonics
Conversion loss table (B21) 74
External Mixer (B21, remote control) 174, 175
Order (External Mixer, B21) 68
Type (External Mixer, B21) 68
High-pass filter
Remote 160
RF input 63
Hold
Trace setting 123
Hysteresis
Lower (Auto level) 118
Trigger 109
Upper (Auto level) 118

I

I/Q Analyzer
Data acquisition 21
Evaluation 16
I/Q Vector evaluation 18
Magnitude evaluation 16
Maximum bandwidth 22
Modes 153
Programming example 287, 289
Real/Imag (I/Q) evaluation 18
Results 16
Sample rate 22
Spectrum evaluation 17
I/Q data
Analog, processing 21, 32
Digital, processing 26
Export file binary data description 303
Export file parameter description 300
Exporting 57, 61
Exporting/Importing 143
Exporting (remote) 279
File format description 297
Importing 57, 61
Importing/Exporting 54
Importing (remote) 279
Input file 65
Input file (remote) 162
Input files 51, 64
Maximum bandwidth 22
Measurements in time and frequency domain 55
Sample rate 22
trigger point in sample (TPIS) 230
Unfiltered 30
Working with 137
I/Q gating
Edge triggered 224
Level triggered 224
I/Q measurements
Methods 242
I/Q modes
Analog Baseband Interface 35
I/Q Power
Trigger (softkey) 106
Trigger level (remote) 219
I/Q Vector
Evaluation method 18
I/Q Analyzer 18
Markers 124, 253
Y-axis scaling 101
IF/VIDEO/DEMOD
Connector 53
Output 89
IF frequency
Output 53, 89
Output (remote) 207
IF Out Frequency 89
IF output 89
Remote 207

IF OVLD
External generator 45, 50
IF Power
Trigger (softkey) 106
Trigger level (remote) 219
IF WIDE OUTPUT
Connector 112
Impedance
Remote 160
Setting 63
Importing
Functions 60
I/Q data 54, 57, 61, 143, 300
I/Q data (remote) 279
Softkey 61
Input
Analog Baseband Interface (B71) settings 78
Connector (remote) 159
Coupling 62
Coupling (remote) 159
Digital Baseband Interface (B17) settings 75
I/Q data files 65
Overload 38
Overload (remote) 159
RF 62
Settings 61, 62, 96
Signal, parameters 38
Source 61
Source, Analog Baseband 78
Source, connection errors 284
Source, digital I/Q 76
Source, displayed 12
Source, Radio frequency (RF) 62
Source Configuration (softkey) 62
Input sample rate (ISR)
Definition 22, 29
Digital I/Q 76
Input sources
I/Q data file 65
I/Q data file (remote) 162
I/Q data files 51, 64
Installation 9
IQBlock
I/Q data files 297
IQPair
I/Q data files 297

K

Keys
LINES (not used) 57
MKR 125
MKR -> 129, 132
Peak Search 133
RUN CONT 115
RUN SINGLE 115, 116

L

Level
Triggered gate 224
Limit lines
Peak search 131
Linking
Markers 127
LO
Level (External Mixer, B21) 69
Level (External Mixer (B21), remote control) 171
Loading
Functions 60
Lower Level Hysteresis
Softkey 118
LVDS connector
B17 295
LVL
External generator 50

M

Magnitude
Evaluation method 16
I/Q Analyzer 16
Marker peak list
see Peak list 134
Markers
Assigned trace 127
Basic settings 125
Configuration (remote control) 253
Configuration (softkey) 125, 128
Deactivating 128
Delta markers 127
Fixed reference (remote control) 257
I/Q vector 124, 253
Linking 127
Minimum 133
Minimum (remote control) 258, 261
Next minimum 133
Next minimum (remote control) 258, 261
Next peak 133
Next peak (remote control) 258, 261
Peak 133
Peak (remote control) 258, 261
Peak list (remote control) 265
Position 127
Positioning 132
Positioning (remote control) 253
Querying position (remote) 279
Retrieving results (remote) 277
Search (remote control) 258
Setting center frequency 133
Setting reference level 133
State 126
Step size 129
Step size (remote control) 257
Table 129
Table (evaluation method) 19
Table (remote control) 257
Type 127
X-value 127
Marker search area
Remote control 258
Marker table
Evaluation method 19
Marker to Trace
Softkey 127
Maximizing
Windows (remote) 236
Meas Time (hardware setting) 11
Measurement accuracy
External generator 45

Measurement channel
Creating (remote) ... 154, 157
Deleting (remote) ... 155
Duplicating (remote) ... 154
Querying (remote) ... 155
Renaming (remote) ... 156
Replacing (remote) ... 154
Selecting (remote) ... 157
Measurement time
Auto settings ... 118
Displayed ... 11
I/Q data ... 113
Remote ... 247
Microbutton
Probes ... 80
Minimum
Marker positioning ... 133
Next ... 133
Softkey ... 133
Mixer Type
External Mixer (B21) ... 67
MKR
Key ... 125
MKR ->
Key ... 129, 132
Modulation
Inverted (I/Q, remote) ... 169
Inverted (I/Q) ... 79
MSRA
Analysis interval ... 111
Operating mode ... 54
Restriction ... 227, 242
MSRA applications
Capture offset ... 114
Capture offset (remote) ... 272
Multiple
Measurement channels ... 10
Multiple zoom ... 135

N

Next Minimum
Marker positioning ... 133
Softkey ... 133
Next Peak
Marker positioning ... 133
Softkey ... 133
Noise
Source ... 52, 90
NOR
External generator ... 45, 50
Normalization
Approximate, external generator ... 45
External generator ... 45, 87
Numerator
Frequencies, external generator ... 48, 85

O

OBW
Deactivating limits ... 132
Offset
Analysis interval ... 114
Displayed ... 11
Frequency ... 102
Reference level ... 94, 98
Open-circuit reflection measurement
Calibration, external generator ... 87
Options
Analog Baseband Interface (B71) ... 32
B160 ... 112
Bandwidth extension ... 23, 24, 112
Digital Baseband Interface (B17) ... 26
Electronic attenuation (B25) ... 96
High-pass filter (B13) ... 63, 160
Preamplifier (B24) ... 97
U160 ... 112
Output
Audio ... 207
Configuration (remote) ... 206
Configuration (softkey) ... 88
Digital Baseband Interface (B17) ... 28
Digital Baseband Interface (B17) settings ... 91, 92
Digital Baseband Interface (B17) status ... 166
Digital I/Q (remote) ... 166
IF frequencies ... 53
IF frequency (remote) ... 207
IF Out Frequency ... 89
IF source (remote) ... 207
Noise source ... 52, 90
Parameters ... 38
Sample rate, definition ... 22, 29
Settings ... 88
Trigger ... 90, 109
Video ... 89, 207
Video signal ... 53
Overload
External generator ... 45
RF input ... 38
RF input (remote) ... 159
Overloading
External generator ... 51
Overview
Configuration ... 58
OVLD
External generator ... 45

P

Parameters
Input signal ... 38
Output ... 38
Peak excursion ... 131, 134
Peak list
Configuring ... 133
Displaying ... 133
Evaluation method ... 19
Exporting ... 135
Marker numbers ... 135
Maximum number of peaks ... 134
Peak excursion ... 131, 134
Remote control ... 265
Sort mode ... 134
State ... 134
Peaks
Marker positioning ... 133
Next ... 133
Softkey ... 133
Peak search
Deactivating limits ... 132
Key ... 133
Limits ... 131
Mode ... 130

Retrieving results (remote) 277
Threshold 131
Zoom limits 132
Performing
I/Q Analyzer measurement 137
Ports
External Mixer (B21, remote control) 177
Power sensors 61
Trigger mode 107
Preamplifier
Setting 97
Softkey 97
Preset
Bands (External Mixer (B21), remote control) 173
External Mixer (B21) 67
Presetting
Channels 60
Default values 57
Pre-trigger 108
Probes
Connectors 32
Microbutton 80
Settings 80
Programming examples
External Mixer (B21) 181
I/Q Analyzer 287, 289
Protection
RF input 38
RF input (remote) 159

Q

Quick Config
Traces 124

R

R&S DigIConf 15, 77
R&S Digital Baseband Interface (B17)
see Digital Baseband Interface (B17) 13
R&S EX-IQ-BOX 15, 295
DigIConf 77
R&S SMA
External generator 43
R&S SMU
External generator 43
Range 100
RBW (hardware setting) 11
Real/Imag (I/Q)
Evaluation method 18
I/Q Analyzer 18
Recalling
Calibration settings, external generator 87
Rec Length (hardware setting) 11
Record length
I/Q data 113
Reference frequency
External generator 42, 82
Reference level
Auto level 95, 99, 118
Digital I/Q 77
External generator 46
Offset 94, 98
Offset (softkey) 94, 98
Position 101
Setting to marker 133
Softkey 94, 98
Unit 94, 95, 98, 99
Value 94, 98
Reference line
External generator 46
Position, external generator 87
Shifting, external generator 47, 88
Value, external generator 88
Reference marker 127
Reference trace
External generator 45, 46
Storing as transducer factor, external generator 46, 87
Reflection measurement
External generator 42
Ref Level (hardware setting) 11
Ref Lvl = Mkr Lvl
Softkey 133
Refreshing
MSRA applications (remote) 271
Remote commands
Basics on syntax 147
Boolean values 151
Capitalization 148
Character data 151
Data blocks 152
Numeric values 150
Optional keywords 149
Parameters 150
Strings 152
Suffixes 149
Remote control
Modes 153
Repetition interval 108
Softkey 108
Resampler
Data processing 21
Resetting
RF input protection 38, 159
Restoring
Channel settings 60
Result displays
I/Q Vector 18
Magnitude 16
Marker table 19
Peak list 19
Real/Imag (I/Q) 18
Spectrum 17
Result frequency
External generator 85
Results
Analyzing 121
Data format (remote) 275
I/Q Analyzer (remote) 272
Retrieving (remote) 272
Updating the display (remote) 271
Reverse sweep
External generator 49, 85
RF attenuation
Auto (softkey) 96
Manual (softkey) 96
RF input 62
Analog Baseband connector 38
Connector (remote) 159
Overload protection 38

Overload protection (remote) 159
Remote 159, 161
RF overrange
External Mixer (B21) 67, 177
RF OVLD
External generator 50
RF Power
Trigger 107
Trigger level (remote) 220
RUN CONT
Key 115
RUN SINGLE
Key 115, 116

S

Sample rate
Analog Baseband Interface 34
Definition 22, 29
Digital I/Q 76
Digital I/Q (remote) 165, 166
Digital I/Q data 29
Digital output 29
Displayed 11
I/Q Analyzer 22
I/Q data 112
Maximum 22
Relationship to bandwidth 23
Remote 230
Saving
Functions 60
Scalar reflection measurement
External generator 42
Scaling
Configuration (softkey) 100
Y-axis 101
Y-axis (remote control) 213
Searching
Configuration (softkey) 130
Search limits
Activating 131
Deactivating 132
Search settings
I/Q Analyzer 132
Select Marker
Softkey 128
Sequencer 10
Aborting (remote) 245
Activating (remote) 245
Mode (remote) 245
Remote 244
Setup files
External generator 44, 82, 83
Short-circuit reflection measurement
Calibration, external generator 86
Signal capturing
Duration (remote) 247
Signal ID
External Mixer (B21, remote control) 171
External Mixer (B21) 70
Signal processing
Diagram 22
Signal source
Remote 161
Single sweep
Softkey 115
Single zoom 135
Slope
Trigger 109, 220
SlowI/Q 30
Softkey
Calibrate Reflection Open (remote control) 193
Calibrate Reflection Short (remote control) 193
Calibrate Transmission (remote control) 193
Normalize (remote control) 194
Softkeys
Amplitude Config 93
Auto All 117
Auto Freq 117
Auto Level 95, 99, 118
BB Power 106
Capture Offset 114
Center 102
Center = Mkr Freq 133
Continue Single Sweep 116
Continuous Sweep 115
DigIConf 77
Digital I/Q 106
Display Config 116
Export 61
External 105
Free Run 105
Frequency Config 101
I/Q Power 106
IF Power 106
Import 61
Input Source Config 62
IQ Export 61
IQ Import 61
Lower Level Hysteresis 118
Marker Config 125, 128
Marker to Trace 127
Meastime Auto 118
Meastime Manual 118
Min 133
Next Min 133
Next Peak 133
Norm/Delta 127
Outputs Config 88
Peak 133
Power Sensor 107
Preamp 97
Ref Level 94, 98
Ref Level Offset 94, 98
Ref Lvl = Mkr Lvl 133
Repetition interval 108
RF Atten Auto 96
RF Atten Manual 96
RF Power 107
Scale Config 100
Search Config 130
Select Marker 128
Single Sweep 115
Sweep count 115
Time 108
Trace 1/2/3/4 124
Trace Config 121
Trigger Config 103
Trigger Offset 108
Upper Level Hysteresis 118
Video 105
Sort mode
Peak list 134

Source offset
External generator ... 84
Source power
External generator ... 84
Specifics for
Configuration ... 60
Spectrum
I/Q Analyzer ... 17
I/Q Evaluation method ... 17
SRate (hardware setting) ... 11
Status
Digital Baseband Interface (B17) ... 31
Icons ... 31
Status bar
Error messages, external generator ... 50
Status registers
Querying (remote) ... 281
STAT:QUES:POW ... 159
STATus:QUEStionable:DIQ ... 281, 284
STATus:QUEStionable:SYNC ... 282
Step size
Markers ... 129
Markers (remote control) ... 257
Suffixes
Common ... 152
Remote commands ... 149
Swap IQ ... 79
Remote ... 169
Sweep
Aborting ... 115, 116
Count ... 115
Performing (remote) ... 242
Points (I/Q Analyzer) ... 114
Settings ... 114
Time (remote) ... 247
Sweeps
Reverse, external generator ... 49

T

TCP/IP
Address, External generator ... 82
External generator ... 82
Threshold
Peak search ... 131
Time trigger
Repetition interval ... 108
Softkey ... 108
TPIS
I/Q data ... 230
Traces
Average mode ... 123
Averaging (remote control) ... 251
Configuration (softkey) ... 121
Configuring (remote control) ... 249
Copying (remote control) ... 252
Detector ... 123
Detector (remote control) ... 251
Hold ... 123
Mode ... 122
Mode (remote) ... 249
Retrieving (remote) ... 272
Settings, predefined ... 124
Settings (remote control) ... 249
Softkeys ... 124
Tracking
see External generator ... 84
Transducers
Calibration with external generator ... 46, 87
Transmission measurement
Calibration, external generator ... 86
External generator ... 41
Trigger
Configuration (softkey) ... 103
Drop-out time ... 108
External (remote) ... 220
Holdoff ... 109
Hysteresis ... 109
Level ... 108
Offset (softkey) ... 108
Output ... 90, 109
Remote control ... 216
Slope ... 109, 220
Trigger level
External trigger (remote) ... 219
I/Q Power (remote) ... 219
IF Power (remote) ... 219
RF Power (remote) ... 220
Trigger source ... 105
Analog Baseband ... 34
BB Power ... 106
Digital I/Q ... 28, 106
External ... 105
Free Run ... 105
I/Q Power ... 106
IF Power ... 106
Power Sensor ... 107
RF Power ... 107
Time ... 108
Video ... 105
Troubleshooting
I/Q data acquisition ... 146
I/Q data output ... 146
Input overload ... 159
Overload, external generator ... 51
TTL handshake
see TTL synchronization ... 82
TTL synchronization
AUX control, external generator ... 41
External generator ... 41, 49, 82
Generators ... 43

U

Units
Reference level ... 94, 95, 98, 99
Updating
Result display (remote) ... 271
Upper Level Hysteresis
Softkey ... 118
Usable I/Q bandwidth
Definition ... 22, 29
User manuals ... 6
User sample rate
Definition ... 22, 29

V

Video
Output ... 53
Softkey ... 105
Video output ... 89, 207

W

Windows
Adding (remote) ... 236
Closing (remote) ... 238
Configuring ... 60
Layout (remote) ... 239
Maximizing (remote) ... 236
Querying (remote) ... 237, 238
Replacing (remote) ... 238
Splitting (remote) ... 236
Types (remote) ... 236
Window title bar information ... 12

X

X-value
Marker ... 127

Y

Y-axis
Scaling ... 101
Scaling (I/Q Vector) ... 101
Settings ... 100
YIG-preselector
Activating/Deactivating ... 63
Activating/Deactivating (remote) ... 160

Z

Zooming
Activating (remote) ... 268
Area (Multiple mode, remote) ... 269
Area (remote) ... 268
Deactivating ... 136
Multiple mode ... 135
Multiple mode (remote) ... 269
Remote ... 268
Restoring original display ... 136
Single mode ... 135
Single mode (remote) ... 268
Zoom limits
Using for searches ... 132